


ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	
TILE ANCHOR		X 2	
#8 SCREW		X 2	
MOUNTING BRACKET		X 1	
M6X1 SET SCREW		X 1	
3MM HEX KEY		X 1	
OPEN TT HOLDER		X 1	
			PHILLIPS SCREW DRIVER
			PEN / PENCIL
			1/4" (6 mm) DRILL
			LEVEL SET
			HAMMER

GNG - 5306
EN - 2927

DYAD

INSTALLATION INSTRUCTIONS

5306


OPEN TISSUE HOLDER

GINGER
Luxury For Your Lifestyle™


2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.GINGERCO.COM

REV -

① REMOVE MOUNTING BRACKET

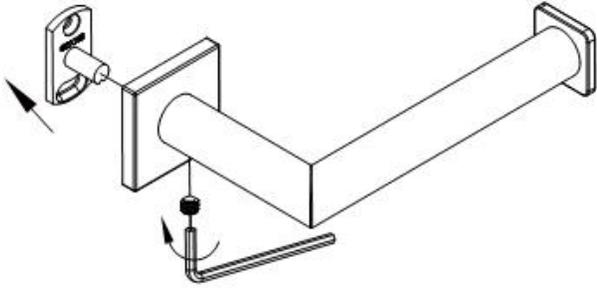


② ALIGN MOUNTING BRACKET AND MARK LOCATION

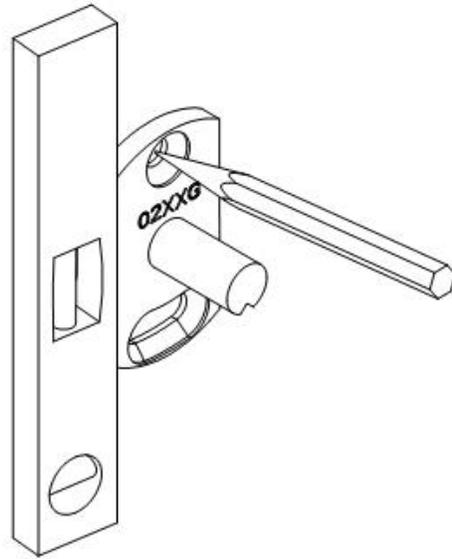



③ DRY WALL INSTALLATION

DO NOT DRILL

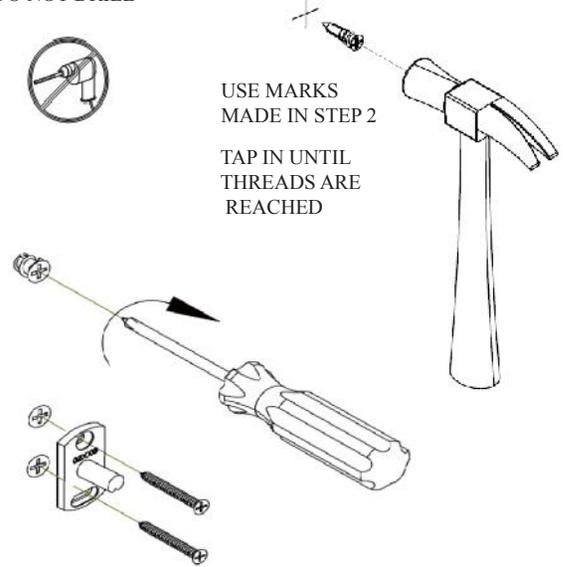


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

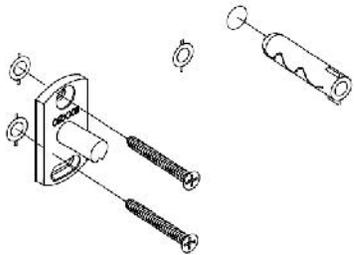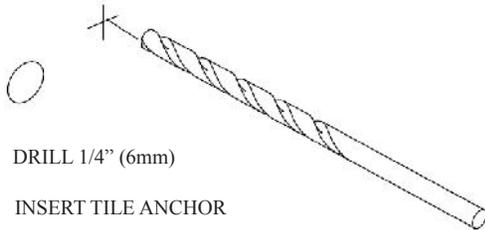

⑤ INSTALL PRODUCT ONTO BRACKET

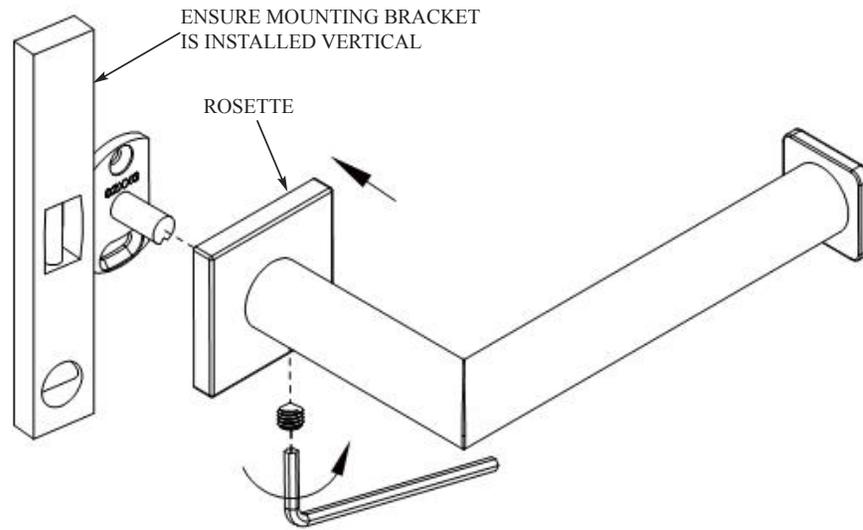

SECURE WITH SET SCREW