

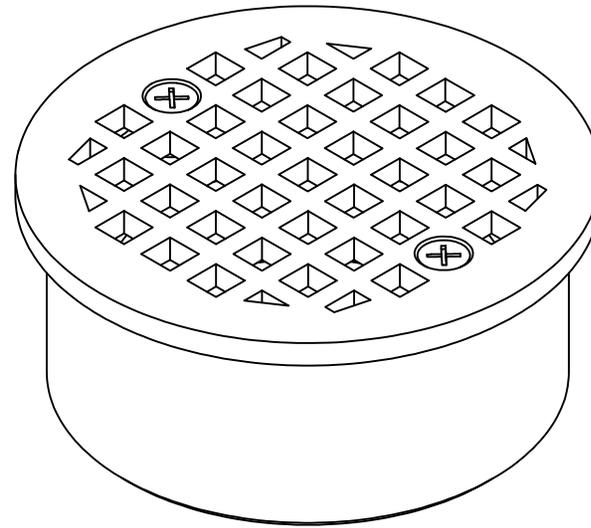
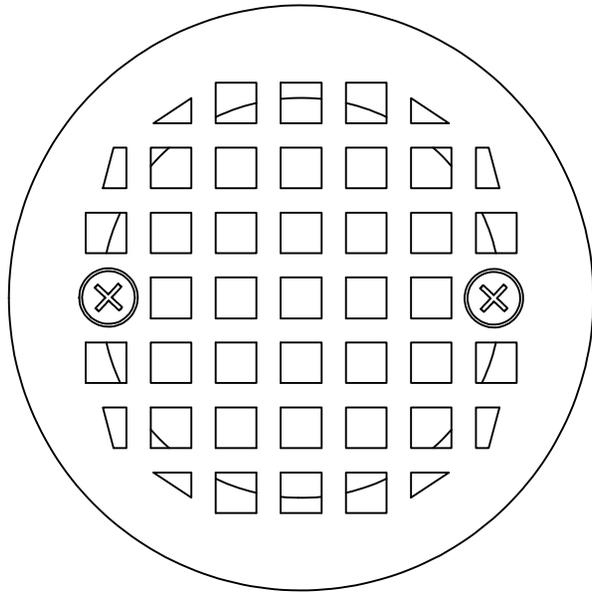


INSIDE PIPE FIT FINISHED FLOOR DRAINS

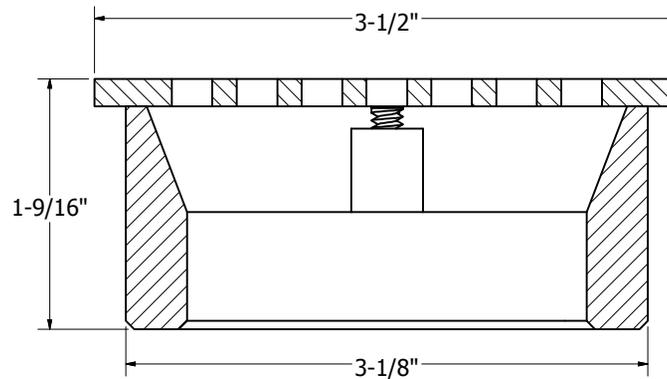

- INSTALLED AFTER CONCRETE IS POURED
- NO MESS WITH PROTECTIVE LAYERS- SAVE TIME WITH INSTALLATION
- CUT PIPE 3/8" BELOW GRADE WITH INSIDE PIPE CUTTER. GLUE DIRECTLY INTO PIPE FOR FINISHED LOOK

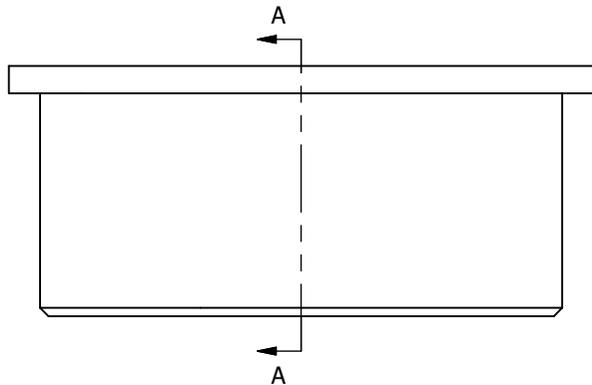

SECTION A-A
SCALE 1.75



PHONE NUMBER
1-800-355-6637
FAX NUMBER
1-800-462-6991
SCALE 1.75 : 1 DATE 9-30-11
SHEET **1 OF 1**
DRAWN BY
ASHLEY KRALOVEC

PART NO.	D60130				
BASE	3-1/8"				
STRAINER	3-1/2" OD NICKEL BRONZE				