

INSTALLATION INSTRUCTIONS

RAPIDWAY™ FLUSHVALVE 3-BOLT WALL-MOUNTED TOILETS

American Standard



Meets the American Disabilities Act Guidelines and ANSI A117.1 Requirements for the Physically Challenged

Thank you for selecting American Standard – the benchmark of fine quality for over 100 years. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.) Also be sure your installation conforms to local codes.

CAUTION: PRODUCT IS FRAGILE. TWO PEOPLE ARE RECOMMENDED FOR HANDLING TO AVOID BREAKAGE AND POSSIBLE INJURY!

NOTE: For proper operation product requires a minimum of 30 psi working line pressure

RECOMMENDED TOOLS AND MATERIALS

Closet Carrier Support

Regular Screwdriver

Sealant

Carpenters Level

Putty Knife


Adjustable Wrench

Tape Measure


Flush Valve

1 Pictures may not exactly define contour of china

TOP SPUD

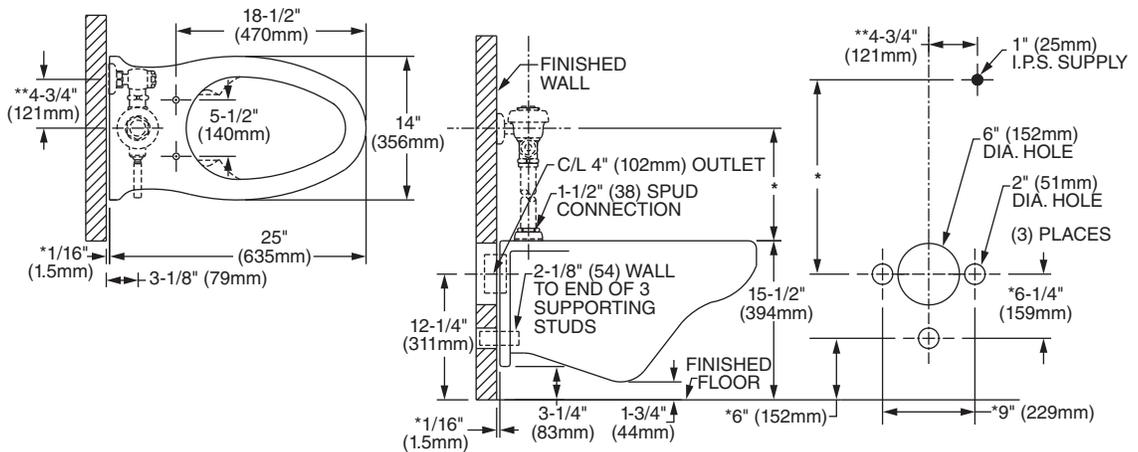

BACK SPUD

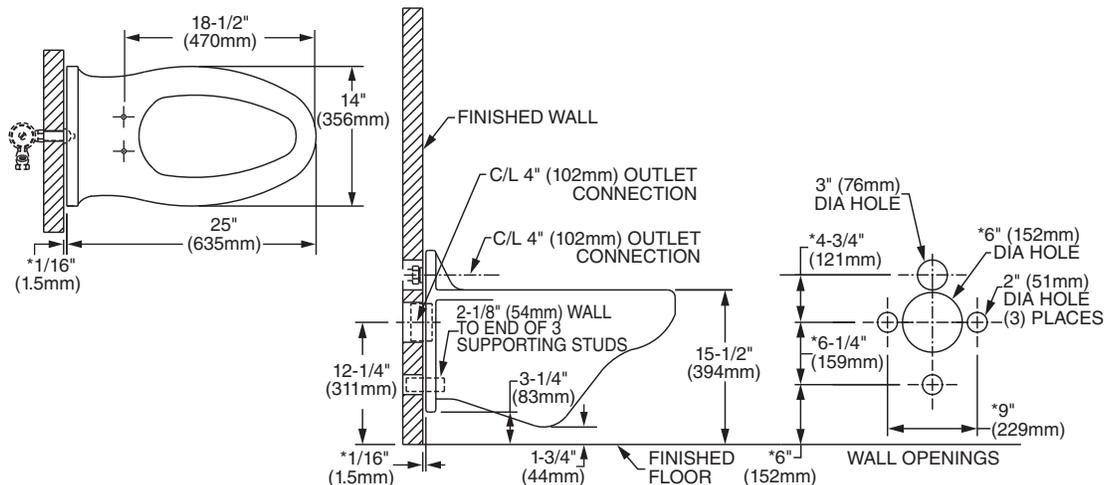

* THESE DIMENSIONS MUST BE MAINTAINED FOR PROPER INSTALLATION

**VARIABLE-CHECK WITH MANUFACTURER OF FLUSH VALVE FOR PROPER ROUGH-IN

SAVE FOR FUTURE USE




7302213-100A

Product names listed herein are trademarks of AS America, Inc.
© AS America, Inc. 2015


7302213-100 Rev. A

2 FIXTURE MOUNTING

Fixture studs should project 58mm (2-1/4") from face of finished wall.

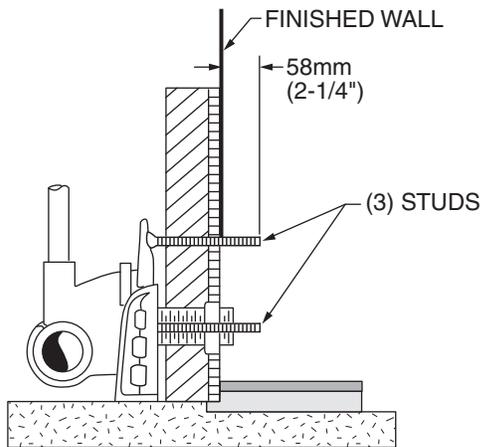


SIDE VIEW

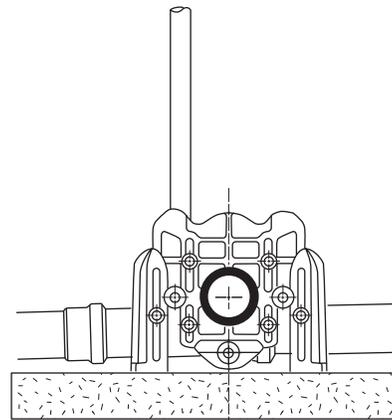

FRONT VIEW


3

- Place back-up nuts on both bottom bolts, and the top left-hand bolt only.
- Adjust the two lower back-up nuts so that front face of nuts and washers are positioned to allow a minimum 1/16" (2mm) gap between fixture and wall surface.
- Adjust waste horn to project 7mm (5/16") from finished wall.

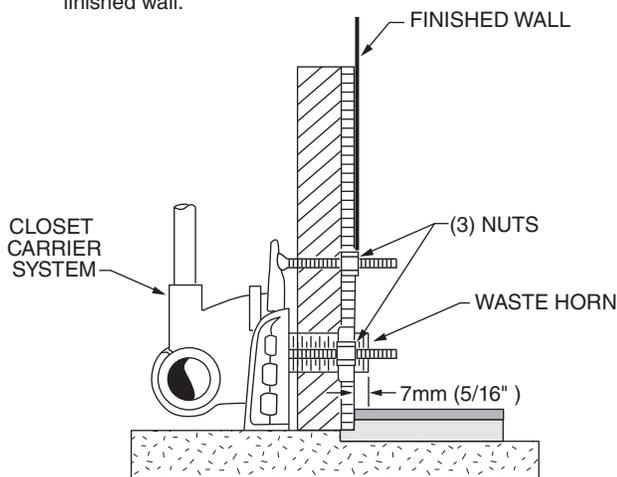

4

- Using a level, adjust the top left back-up nut so that it is in the same vertical plane as the lower left back-up nut.

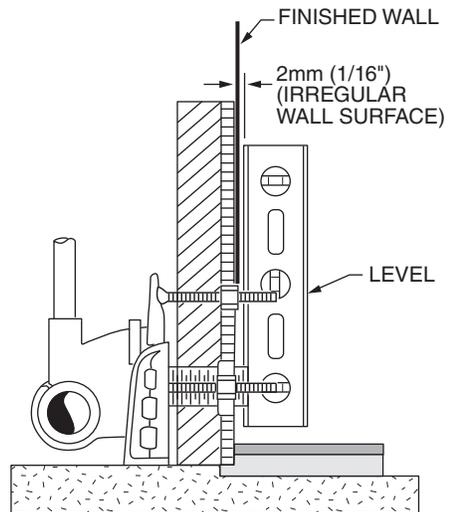

5

- NOTE: Bearing nuts and washers must be set to take full loading from the fixture allowing 1/16" (2mm) clearance between fixture and wall.
- Follow support manufacturer's recommended setting of closet outlet connection.
- Place felt or neoprene gasket (wax ring not recommended) on closet outlet.
- When the fixture is installed, closet outlet gasket must be compressed sufficiently to assure a gas and watertight seal.

The following steps require a helper:

- Install bowl on support using cap nuts and fiber washers with the back-up nuts and washers.
DO NOT APPLY TOP RIGHT FIBER WASHER AND CAP NUT UNTIL OTHER CAP NUTS HAVE BEEN FIRMLY TIGHTENED USING A WRENCH.
- Install top right cap nut with fiber washer and run up hand tight. Wrench tighten approximately 1/4 turn.
- Apply sealant to gap between bowl and finished wall. Remove excess sealant.

In the United States:

American Standard Brands
P.O. Box 6820

Piscataway, New Jersey 08855
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902

www.americanstandard.com

In Canada:

AS Canada, ULC
5900 Avebury Rd.
Mississauga, Ontario
Canada L5R 3M3

Toll Free: (800) 387-0369
www.americanstandard.ca

In Mexico:

American Standard B&K Mexico
S. de R.L. de C.V.
Via Morelos #330
Col. Santa Clara

Ecatepec 55540 Edo. Mexico
Toll Free: 01-800-839-1200
www.americanstandard.com.mx