




INSTALL TUB BOX REAR LEGS (2X), TO BOTTOM OF SOCKET AND SECURE WITH SCREWS (4X). IF DESIRED HEIGHT IS LESS THAN 8", CUT LEGS AND SLEEVE.
(Fig. 1)

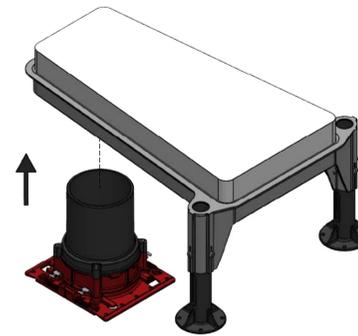


ATTACH TUB BOX SLEEVE SUBASSY TO TUB BOX SHELL 2" OR 3" GROOVE. APPLY ABS UNIVERSAL SOLVENT CEMENT TO SPIGOT ADAPTER.
(Fig. 2)

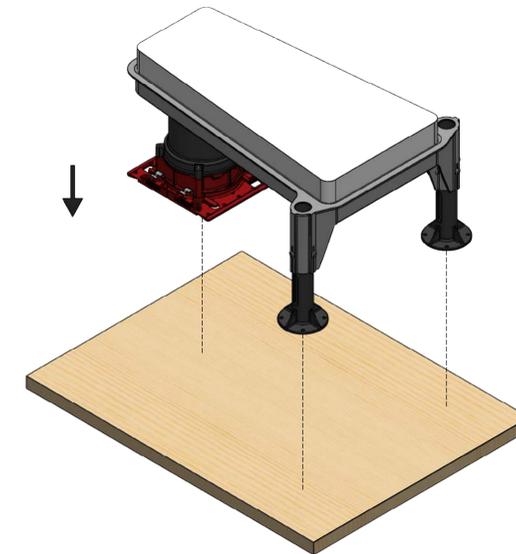


NAIL TUB BOX SLEEVE AND LEGS TO FORM DECK.
(Fig. 3)

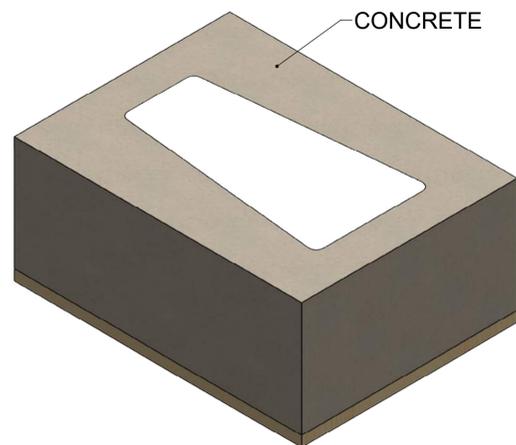

POUR CONCRETE FLUSH WITH TUB BOX STYROFOAM BLOCK.
(Fig. 4)

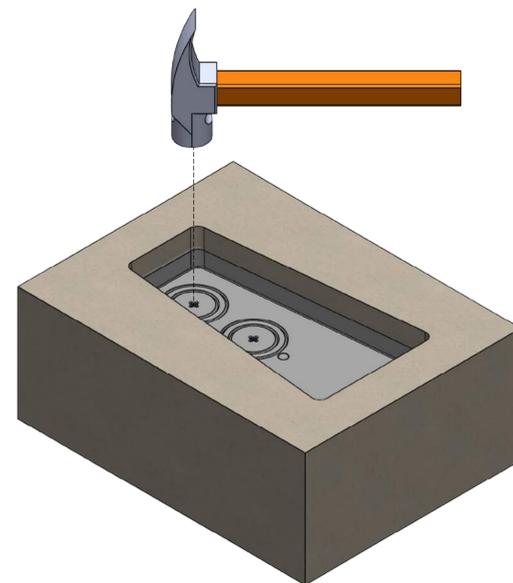

REMOVE STYROFOAM BLOCK AND "KNOCK OUT" APPROPRIATE DRAIN COVER.
(Fig. 5)

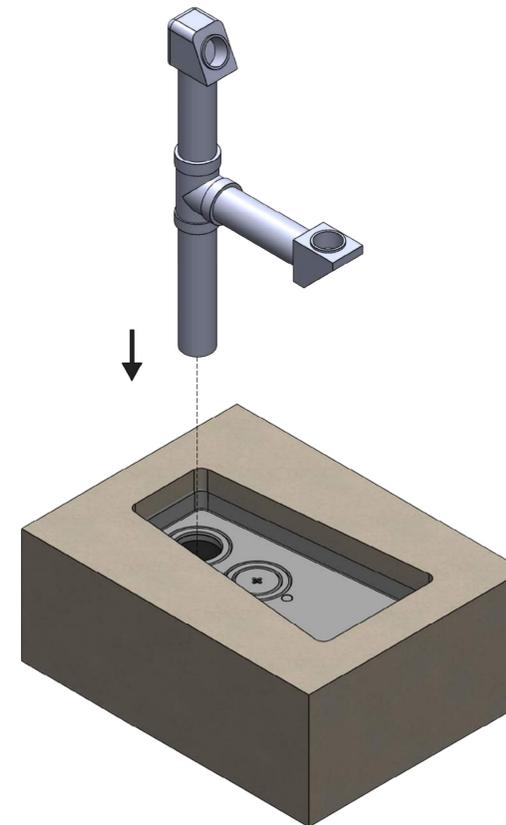

INSTALL DRAIN PIPE ASSEMBLY.
(Fig. 6)



**HydroFlame Tub Box,
Installation Instructions,
Rev A, 04-16-20**