


BALDWIN

RESERVE™

Installation Guide
Guía de instalación
Guide d'installationbaldwinhardware.com
800.566.1986


48768 / 02 S-Type Door Knocker

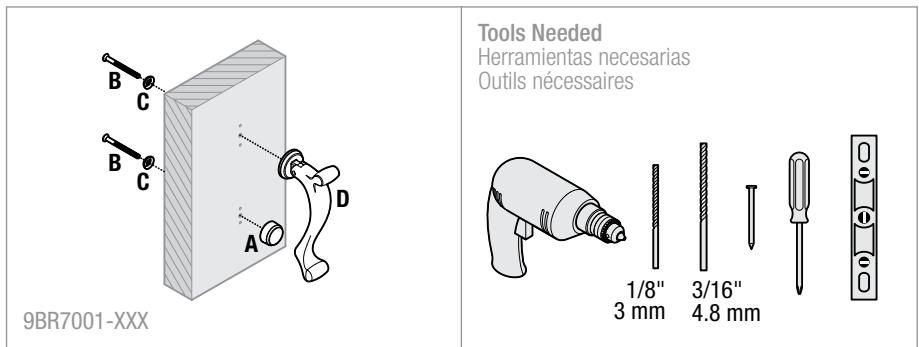


- 1** Center template on EXTERIOR side of door. Ensure template is level, and mark holes.

Centre la plantilla en la parte EXTERIOR de la puerta. Asegúrese de que la plantilla se encuentre nivelada y marque los orificios.

Centrer le gabarit sur la face EXTERIEURE de la porte. Assurez vous que le gabarit est bien aligné et marquez les trous.

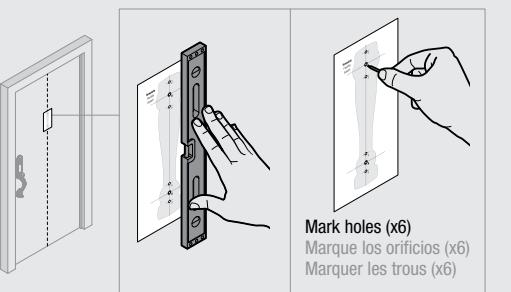

- 2**

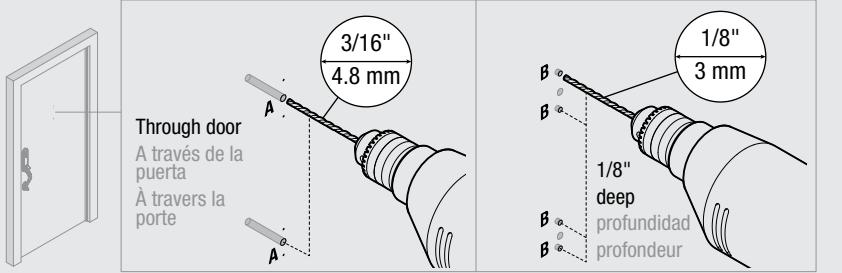

- 3**

