




K50


Fitting instructions
Notice d'installation
Instrucciones de montaje
Montageanleitung
Istruzioni di montaggio
Montagehandleiding
Instrukcja montażu
Указания по креплению

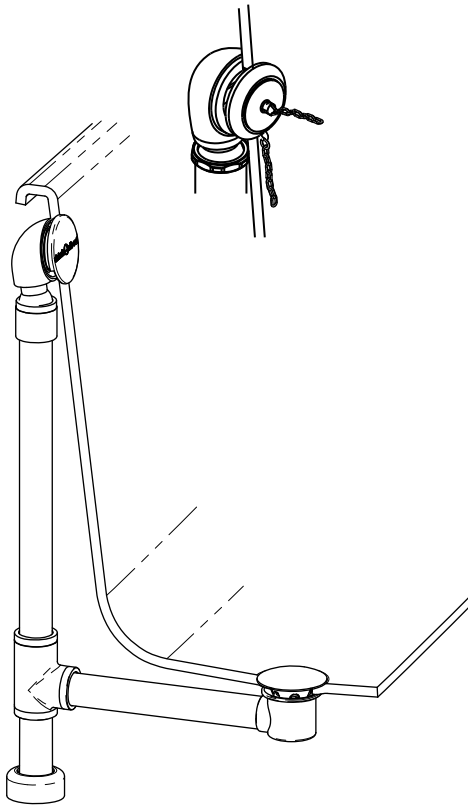

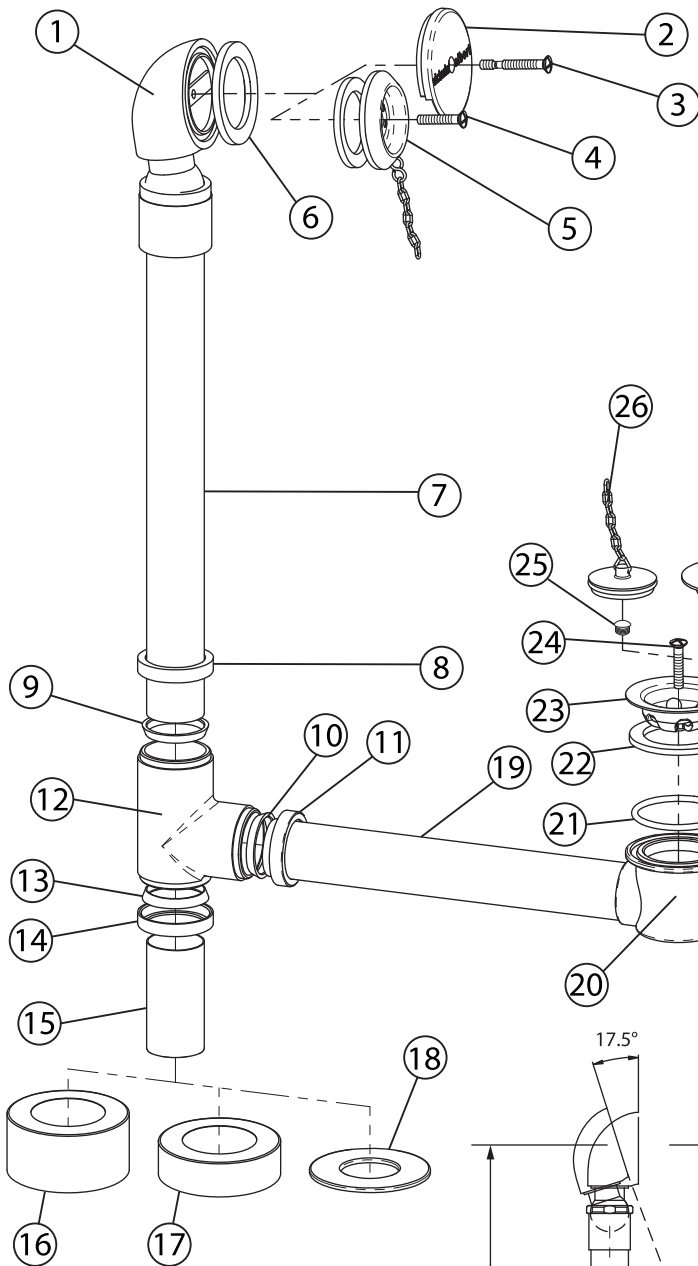



1. Overflow Body with Swivel Head
2. Contemporary Overflow Cover Plate with Pad Washer
3. Snip Screw
4. Screw
5. Traditional Overflow Cover Plate with Foam Washer
6. Shaped Washer
7. Overflow Tube
8. Chrome Nut
9. Washer
10. Washer
11. Chrome Nut
12. T-Piece
13. Washer
14. Chrome Nut
15. Down Tube
16. Full Height Shroud
17. Half Height Shroud
18. Flat Shroud
19. Horizontal Tube
20. Waste Body
21. O-Ring
22. Foam Washer
23. Strainer
24. Screw
25. Thread Cap
26. Traditional Plug & Chain
27. Contemporary 'Toe Tapper' Plug

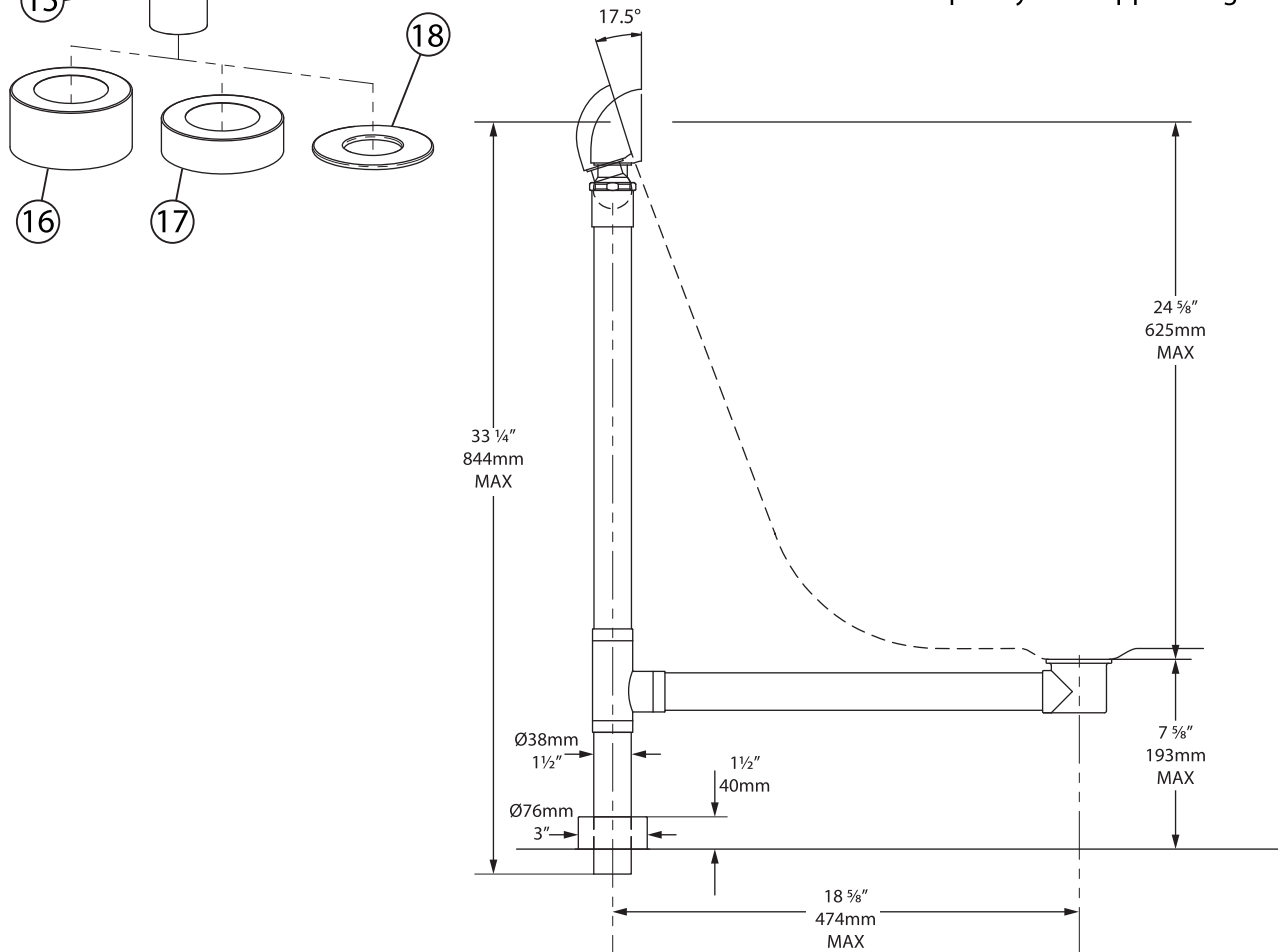

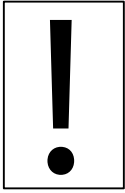


Warning, some baths may require a below floor level rough in


Amalfi
Elwick
Marlborough
Monaco
Toulouse
York
Worcester

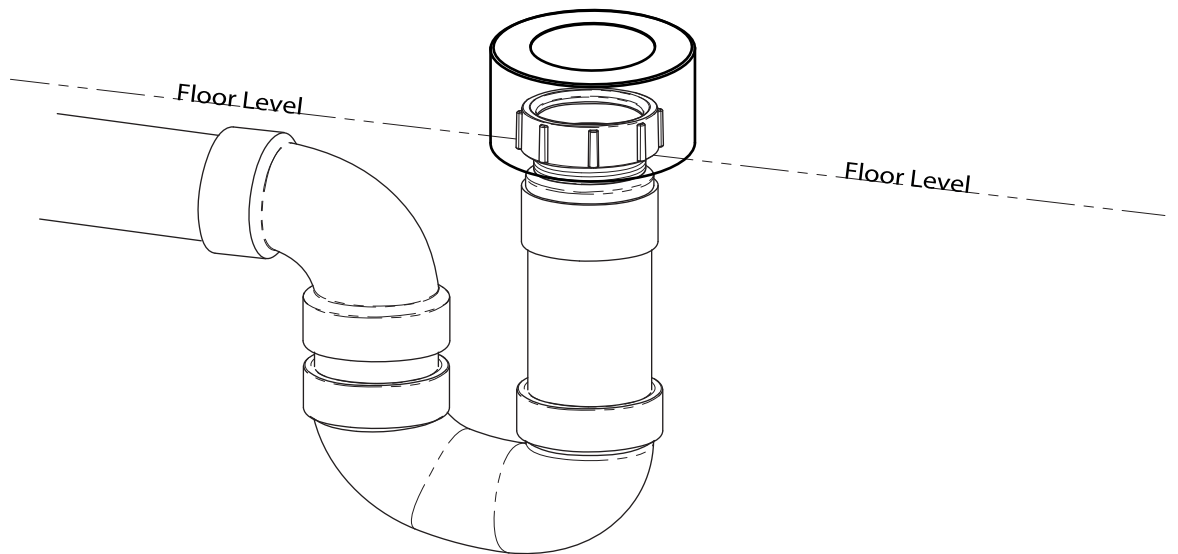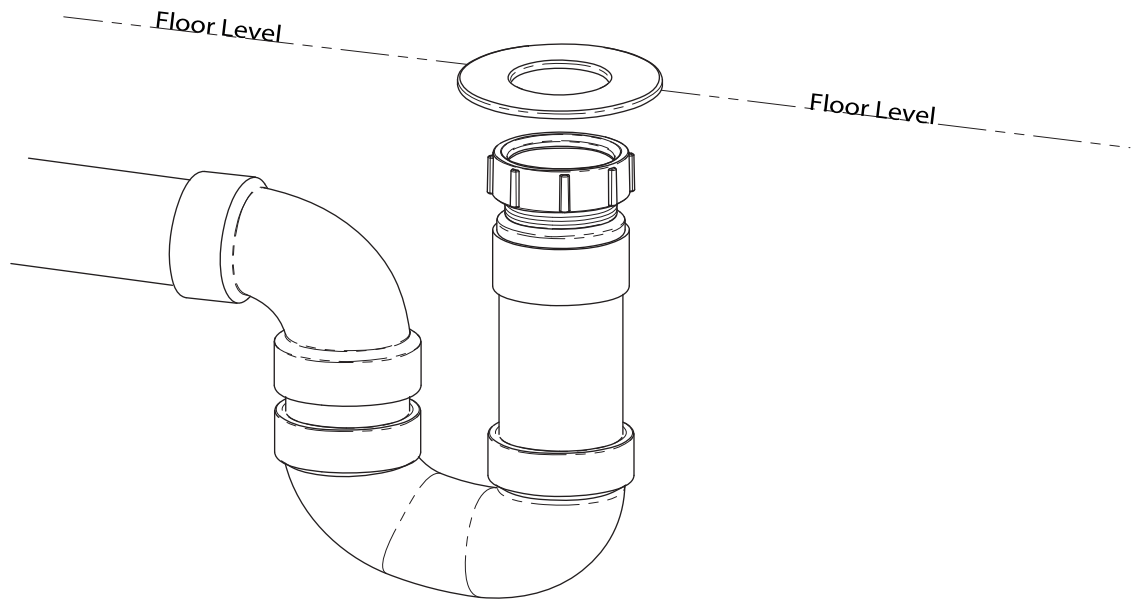

1.

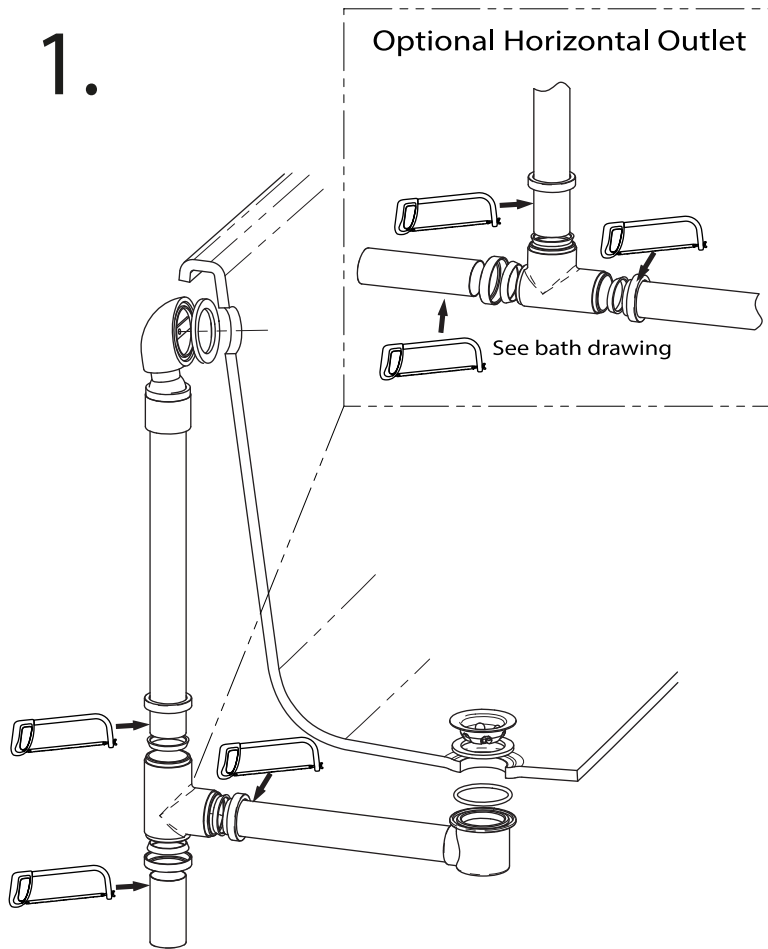

2a.

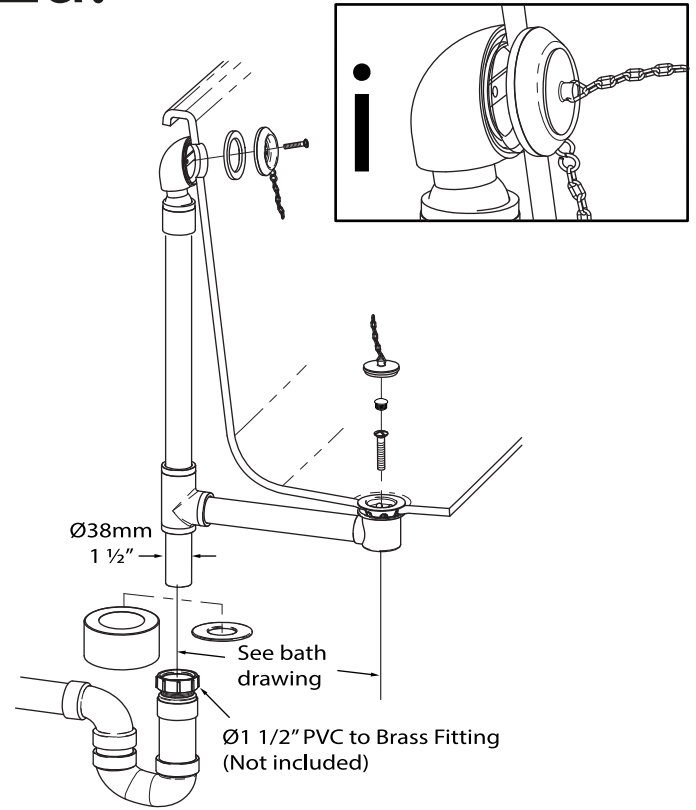

2b.

