





BRICK BUDDY WALL MOUNTING BRACKET INSTALLATION INSTRUCTIONS

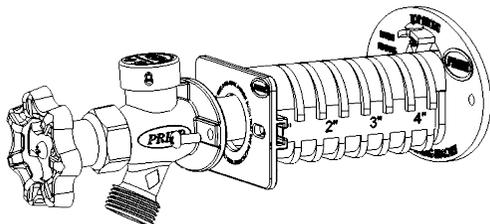


Instructions:


1. Identify where on the wall this mounting bracket will be anchored and drill a 2 1/4" diameter hole.

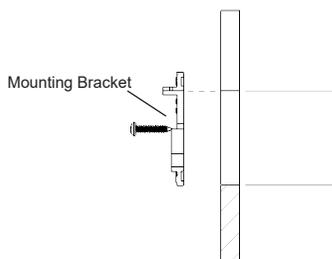

2. Align green flange so the top of sleeve hole is even with the top of drilled hole. Level the flange and mount it using the 2 screw holes provided.

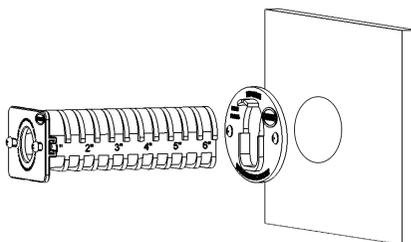

3. Insert the grey sleeve body to the desired depth, such that the outer face of the sleeve will be flush with the front of the facia (brick, stone, stucco, etc). When correct depth is set, use provided screw to lock in the sleeve through the top of the mounting flange. (Note: This screw can be removed and the sleeve adjusted at any time before the front facia material is secured.)

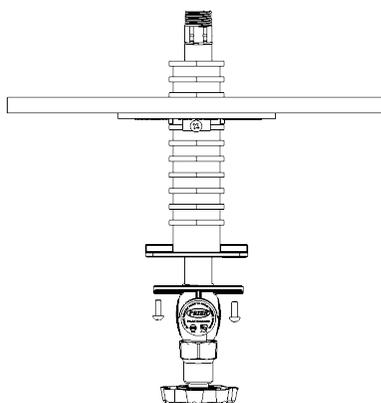

P-WMB1



6 70210 32158 7

CALIFORNIA PROPOSITION 65:

According to the state of California, this product contains a chemical known to the State of California to cause cancer and to cause birth defects or other reproductive harm. PRIER marks all products that are shipped directly into California with the appropriate warning notices dictated by the State of California. If a PRIER customer ships products into the State of California from their location, it is the customers' responsibility to affix appropriate warnings.