

2 MAKE WATER SUPPLY CONNECTIONS

- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" compression. Connectleft supply to Hot and right supply to the Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 28" long from faucet base.

Note: If additional supply length is required, installer must purchase additional parts separately.

Figure A.

COLD

Important: If SUPPLY HOSES (1, 2) are too long, loop as illustrated to avoid kinking. Figure A. d ctions. 28" 2 1 HOT HOT


LOOP SUPPLIES

3 DRAIN INSTALLATION

• Apply a bead of PUTTY to underside of DRAIN BODY FLANGE (1).

нот

- Feed DRAIN BODY (1) down through lavatory.
- Assembly GASKET (2) WASHER (3) and LOCKNUT (4) onto DRAIN BODY (1). Tighten LOCKNUT (4) firmly.
- Assembly TAILPIECE (5) to DRAIN BODY (1).

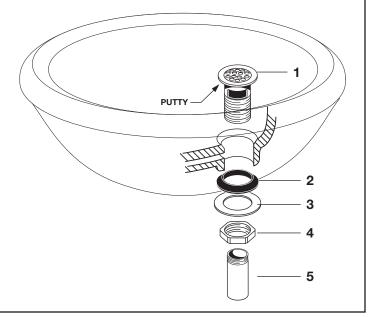

COLD

