
ASSEMBLY INSTRUCTIONS



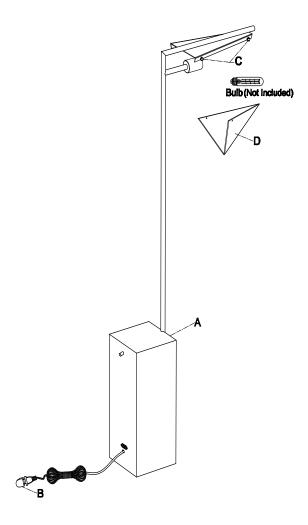

Forma Floor Lamp

Item # KW 1250

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING.


RETAIN ALL PACKING MATERIAL UNTILL INSPECTION AND INSTALLATION ARE FINAL.

- 1. Carefully remove all parts from the box.
- 2. Unscrew the knurled screws (C) from the fixture (A).
- 3. Insert bulb (not included) into the socket. .
- 4. Place shade (D) on the fixture (A) and secure with knurled screws (C)
- 5. Remove protective plug cover (B) from the plug.
- 6. Plug into a proper electrical outlet and test the fixture.
- 7. Installation is complete.



^{***}Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

UNPACKING NOTICE

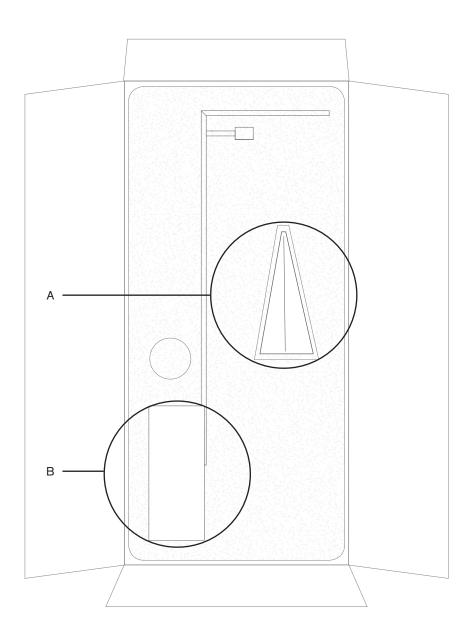

Forma Floor Lamp

Item # KW1250

THE FOLLOWING INSTRUCTIONS SHOULD BE READ PRIOR TO UNPACKING YOUR PRODUCT AS THEY ARE INTENDED TO REDUCE OR ELIMINATE ANY POSSIBLE DAMAGE.

- 1. To properly remove lamp from carton, first remove the glass shade (A) from foam casing.
- 2. Carefully stand carton upright with lamp base near floor as shown in figure.
- 3. Grasp base (B) and gently slide lamp out of foam casing.