


INSTALLATION INSTRUCTIONS



Install a **PEXRITE** (#103-18/103-26) bracket onto the front of wall studs.



Snap the main purple body of the insert into the front of the bracket.

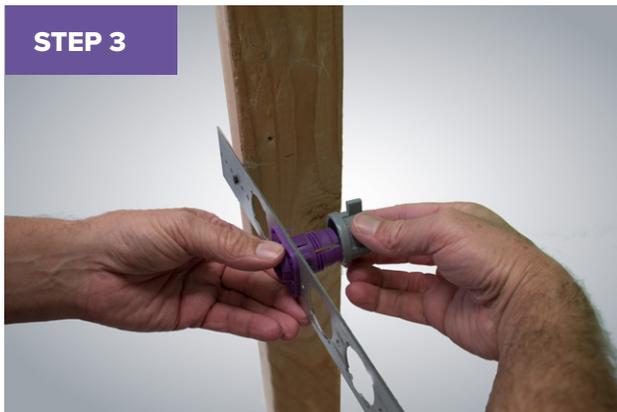

Snap the grey nut onto the back of the purple insert.



Slide a $\frac{3}{4}$ " tube or bullet through the insert. Lock the tubing in position by tightening the grey nut clockwise, by hand.



Installation is complete.

