



STRAIGHT DOUBLE SHOWER CURTAIN ROD

BEFORE INSTALLING

Read entire shower rod installation Instructions. Observe all local building and safety codes. For the following installation instructions it is assumed that any old fixtures have been removed and any repairs to the wall have been completed.

INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your shower rod contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the walls or ceiling, or for personal injury during installation.

TOOLS AND MATERIALS:



Drill



Level



Tape Measure




Screwdriver



Pencil



Hammer




Hacksaw




1/4" Drill Bit

INSTALLATION


1. Lay the rod sections on the floor. For rods 84" and longer, assemble with the connector piece.




2. Verify that the rod sections are the proper length for your installation. If not, trim with a hacksaw.

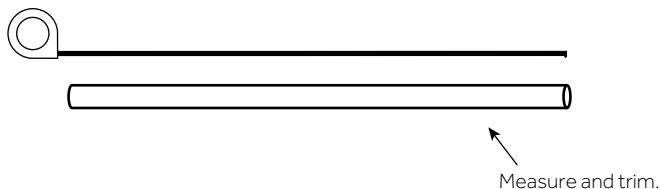

3. Hold the wall brackets up at the desired mounting height.

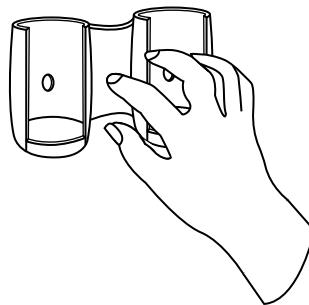

4. Mark the placement of the mounting holes. Use a tape measure and level to make sure that your pencil marks are lined up properly on each wall.

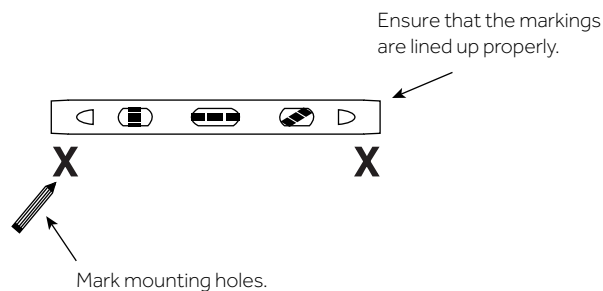




STRAIGHT DOUBLE SHOWER CURTAIN ROD


INSTALLATION

5. Drill pilot holes for the wall anchors.


Note: If there is a stud in your mounting location, use wood screws to attach the wall brackets.

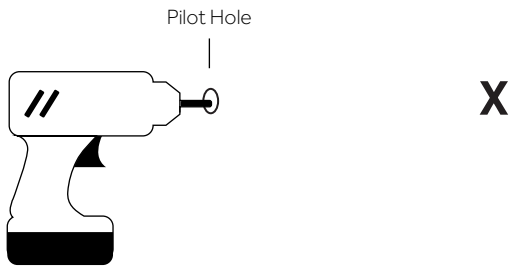

6. Gently tap the anchors into the pilot holes with a hammer.

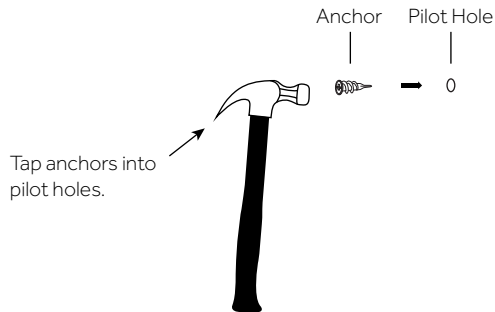

7. Place the wall brackets onto the ends of the shower rod and tighten the set screws secure.

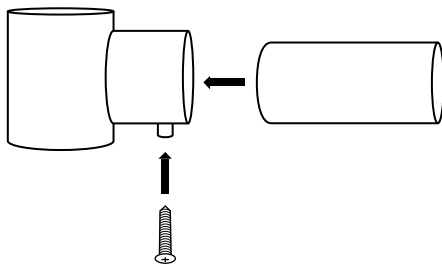

8. Attach the rod and brackets to the wall with the mounting hardware provided.

