

Installation Tools

Deburr & Depth Gauge Tool



Part no	Size	Min Order Qty
U702	1/4", 3/8", 1/2", 5/8", 3/4", 1"	1

Use for copper and CPVC pipe.

Disconnect Clips



Part no	Size	Min Order Qty
U706	1/4"	12
U708	3/8"	24
U710	1/2"	24
U3712	5/8"	24
U712	3/4"	24
U714	1"	12

Disconnect Tongs



Part no	Size	Min Order Qty
U711	1/2"	1
U713	3/4"	1
U715	1"	1

PEX Cutters



Part no	Description	Min Order Qty
U701	PEX Pipe Scissor Cutter 1/4"-1"	1
23369Z	PEX Pipe Radial Cutter	1

Large Diameter Deburr & Depth Gauge Tool



Part no	Size	Min Order Qty
UXLG03	1-1/4", 1-1/2", 2"	1

Use for copper and CPVC pipe.

Large Diameter Disconnect Tools



Part no	Size	Min Order Qty
UXLDC35	1-1/4"	1
UXLDC41	1-1/2"	1
UXLDC54	2"	1

Use with UXL parts.

Wrap for Fitting Burial



Part no	Size	Min Order Qty
25406	10' x 2" x 0.02"	1

Making a SharkBite Universal Connection



Step 1

Cut the desired length of pipe.

- Square cut, perpendicular to length of tubing



Step 2

Deburr the end of the pipe to remove any sharp edges.


- Inspect tubing for damage
- Examine fitting to assure that it's free of debris



Step 3

Mark the pipe using the depth gauge tool

- Use the depth gauge opening that corresponds to the tubing outside diameter

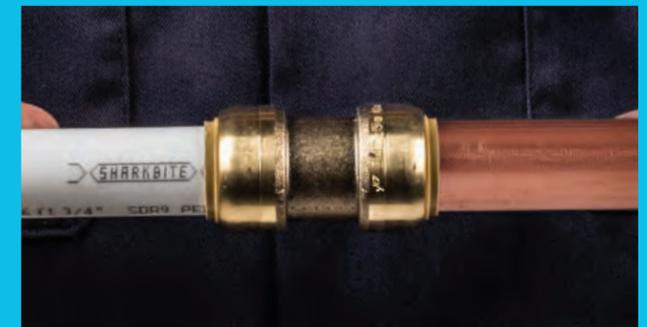

Step 4

Push the tubing into the fitting.

- Mark from the depth gauge should rest against edge of release collar



Disconnecting a Fitting

Remove fitting with disconnect clips.

- Place the disconnect clip against the end of the fitting.
- Push the disconnect clip, compressing the release collar.
- Pull tubing away from fitting (slight twist).

Disconnect tongs can also be used.

- These are generally used in areas where there is no room for the disconnect clip