



ABNER FREESTANDING SHOWER PANEL

INSTALLATION INSTRUCTIONS

Before installing, read entire installation instructions. Observe all local building and safety codes.

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your shower panel, contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing outdoor and plumbing fixtures. Signature Hardware accepts no liability for any damage to the shower, installation surface, or for personal injury during installation.

Note: Make sure to winterize your outdoor shower before cold weather arrives to prevent burst pipes and protect the shower's hardware.

TOOLS AND MATERIALS:

Drill Adjustable Wrench Air Compressor

INSTALLATION

1. Attach the shower column to the tray with the assembly hardware provided.
2. Connect the water inlet hose on the bottom of the panel to the water supply.
3. Insert the shower arm into the fitting in the panel and twist to tighten. Finish tightening with an adjustable wrench. Wrap a dry cloth around the shower arm to protect the finish while tightening.
4. Thread the shower head onto the arm and hand-tighten.
5. Turn on the water supply to check for leaks. Let the water flow through the shower panel for approximately 30 seconds to clear out debris and dirt. If leakage occurs, tighten connections with your adjustable wrench as necessary. If problems persist, contact Customer Service at 1-866-855-2284.

CARE AND MAINTENANCE

To maintain the natural wood finish, install and store the shower panel in a dry, well ventilated space. Do not clean the shower or shower tray with any acidic soaps or detergents. After use, rinse with clean water and wipe dry to remove any dirt or soap residue as this may damage the bamboo over time. To protect the finish and extend the lifetime of your outdoor shower, remove hard-soled shoes prior to stepping onto the shower tray.

REVISED 07/10/2019



ABNER FREESTANDING SHOWER PANEL

WINTERIZING


1. Locate the shutoff valves for the outdoor shower unit. Turn off the shower's water supply.
2. Disconnect the supply lines from the back of the shower unit using the adjustable wrench.

3. Remove the shower head if possible.

4. Open the valve to the HOT position.

5. Insert the air blower from the air compressor into the HOT inlet hose. Blow compressed air into the hose until no more water comes out of the shower head.


NOTE: The hoses may differ from your installation.

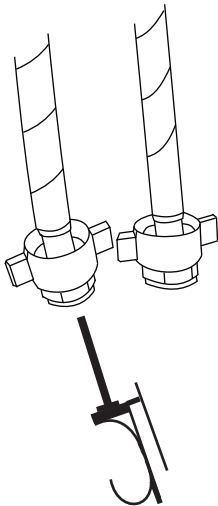

6. Open the valve to the COLD position.

7. Insert the air blower from the air compressor into the COLD inlet hose. Blow compressed air into the hose until no more water comes out of the shower head.

NOTE: The hoses may differ from your installation.

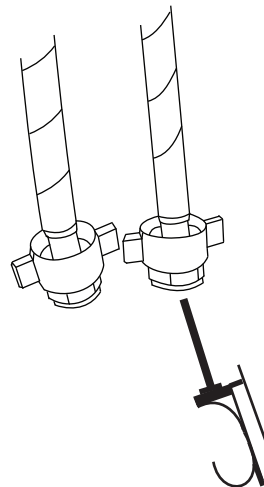

8. As a final check, place the temperature selector in the middle range.

9. Insert the air blower tool from the air compressor into the COLD inlet hose as shown in Step 5. Blow compressed air into the hose until no more water comes out of the shower head. Repeat for the HOT inlet hose.

When no more water comes out of the shower head, winterizing is complete.

10. Replace shower head if previously removed.