



# PORCELAIN SEMI-RECESSED SINK INSTALLATION

## BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Signature Hardware accepts no liability for any damage to the floor, walls, plumbing, vanity cabinet, sink, counter top, or personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the sink for damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

## GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- For the following instructions, it is assumed that the vanity and countertop are already in place.

## TOOLS AND MATERIALS:



Silicone Sealant  
(100% Neutral  
Cure)




Damp Cloth




# PORCELAIN SEMI-RECESSED SINK INSTALLATION

## Installation


1. Carefully place your vessel sink upside down on the counter top. Apply a generous amount of silicone sealant to the base of the sink where it will rest on the counter.

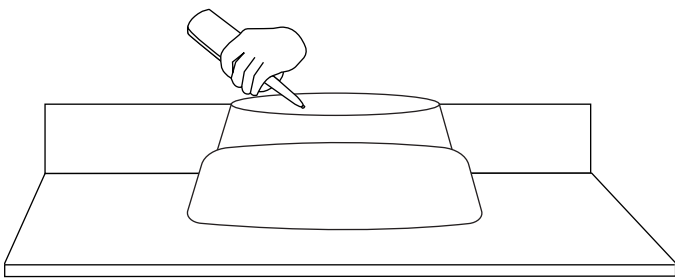


2. Turn the sink right-side-up and position over the drain hole. Set the sink in place, and press firmly to secure.

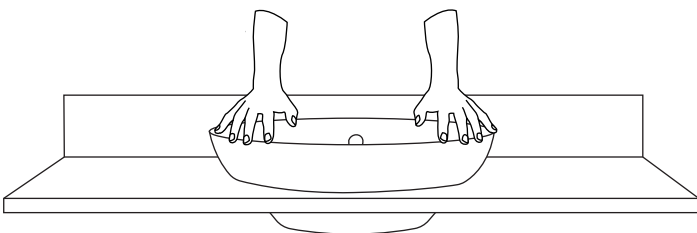

3. If desired, apply a continuous bead of silicone sealant around the perimeter of the sink base for additional stability.

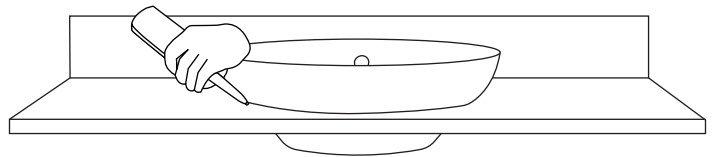

4. Remove any excess sealant with a damp cloth to complete installation.

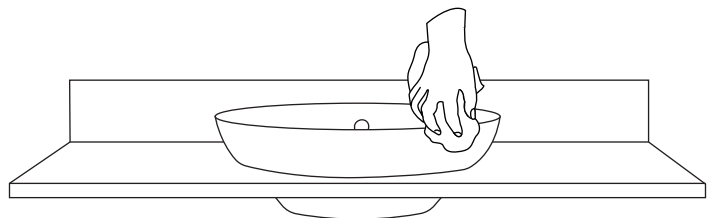



# PORCELAIN SEMI-RECESSED SINK INSTALLATION

5. Proceed to the installation of your drain and faucet.  
Allow 24 hours for the silicone sealant to fully dry.



## Cleaning and Maintenance

We recommend cleaning enameled products with soap and water after each use and wiping dry with a soft cloth. Porcelain is generally moisture resistant, but keeping it dry whenever possible is recommended. Do not use any abrasive scrubs or sponges to clean your porcelain sink, which can scratch or dull the surface.