




## INSTALLATION INSTRUCTIONS

### WALL MOUNT VANITIES

*It is strongly recommended that Native Trails wall mount vanities are installed by a licensed contractor.*

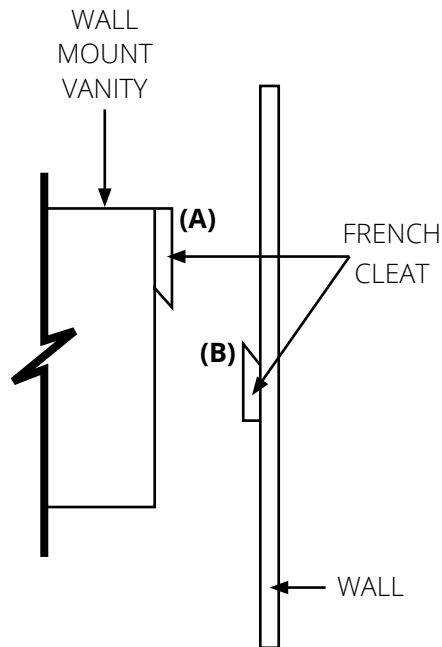

### **BORDEAUX WALL MOUNT, CHARDONNAY AND CABERNET FLOATING VANITY**

1. Determine desired height and location of studs in wall.
2. Attach French Cleat **(B)** to wall using 3.5" screws, making sure slanted edge will fit evenly with French Cleat **(A)**. Make sure it is level and at proper height to support vanity.
3. Hang vanity on French Cleat **(B)** attached to wall.
4. From underneath vanity, install 3.5" wood screws through vanity and into French Cleat **(B)** to secure vanity.
5. Install top, sink, and drain according to installation instructions.