

## INSTALLATION INSTRUCTIONS

DECORATIVE P-TRAP DR560

### BEFORE YOU BEGIN


- Observe all local plumbing and building codes.
- Turn off water supply to sink.

### ASSEMBLE THE TRAP

1. Install drain (*not included*) in sink according to manufacturer's instructions.
2. Remove Inlet Nut and Washer from Trap.
3. With threads facing down, slide Inlet Nut and Washer onto tailpiece of installed drain. For 1.25" drains, use supplied Reducing Washer.
4. Slide tailpiece of installed drain into top of Trap. Note: to ensure a proper compression fit, tailpiece must be inserted at least 1" (2.5cm) inside Trap. Then hand-tighten Inlet Nut until nut is tight against Trap.

### CONNECT TO THE STUB-OUT

5. Slide Flange onto long side of Outlet Tube.
6. Place Outlet Tube onto Trap and in to stubout. If Outlet Tube is too long, use a hacksaw to cut it to appropriate length.
7. Attach Outlet Tube to Trap by tightening Outlet Nut and Washer.
8. Attach Outlet Tube to drain stub-out with seal and nut (not provided). Hand tighten nut to drain stub-out. Push Flange against finished wall.
9. Ensure all nuts in assembly are tightened properly.
10. Turn on main water supply, run water through drain and check for leaks.

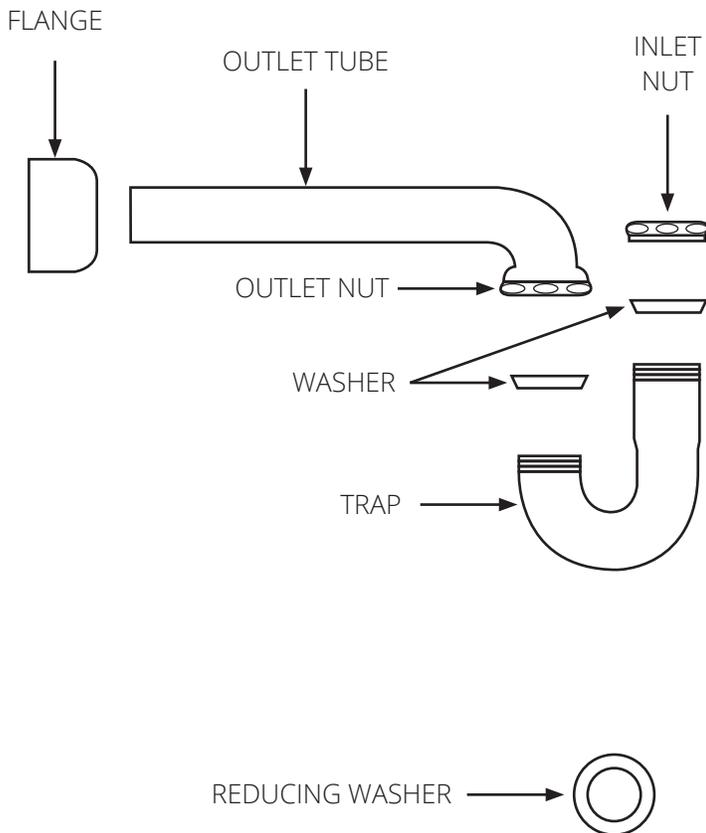

*For use with 1.25" drains*