




389-V36-AGR-A / 389-V36-CFO-A / 389-V36-GW-A / 389-V36-LTO-A Vanity **Assembly Instructions**

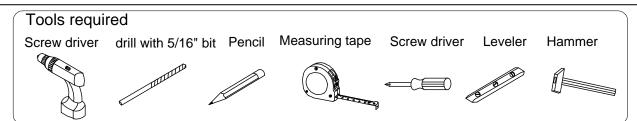


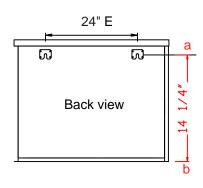


Step 1: Metal plates has been pre-installed to the back of cabinet, measure the distance between the bottom of the cabinet and point a.

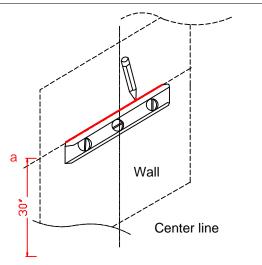

Step 2: Draw a horizontal line from the point a by using a leveler. (suggested H30" from floor to "a" line)

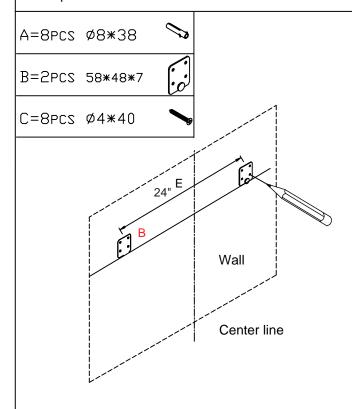


Step 3:
Draw the points according to the hole of the mounting bracket

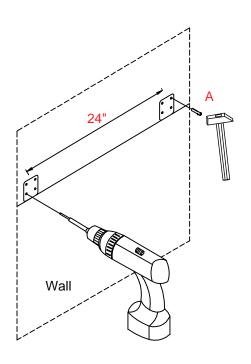

Step 4:
Drill the holes' deepth no less than 40mm, and insert "A" to the holes by using hammer.




389-V36-AGR-A / 389-V36-CFO-A / 389-V36-GW-A / 389-V36-LTO-A Vanity **Assembly Instructions**

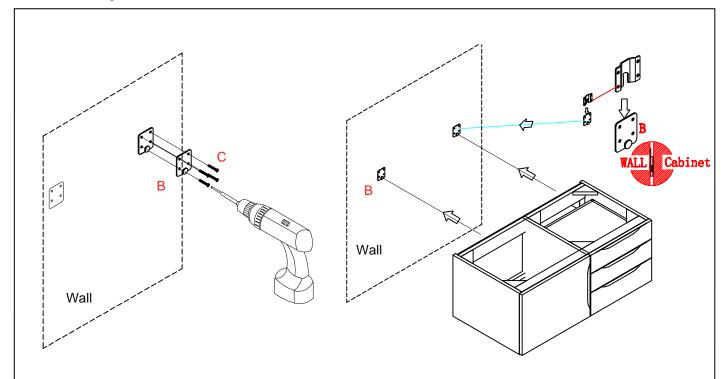


Step 5: Attach the mounting bracket to the wall.

Step 6: Hang the cabinet on the mounting bracket.

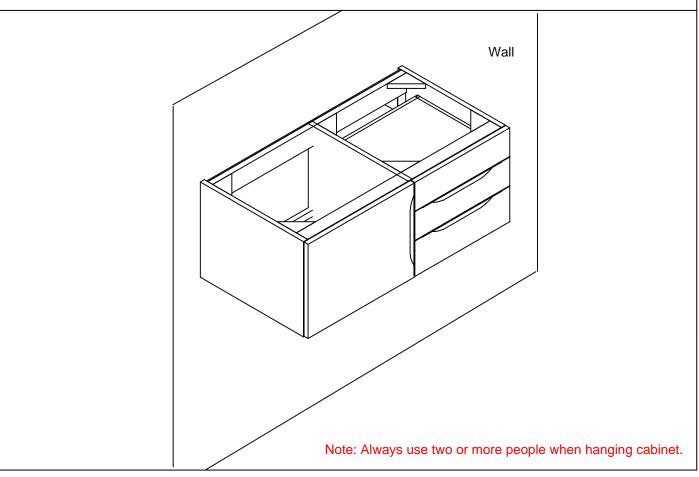




389-V36-AGR-A / 389-V36-CFO-A / 389-V36-GW-A / 389-V36-LTO-A Vanity **Assembly Instructions**

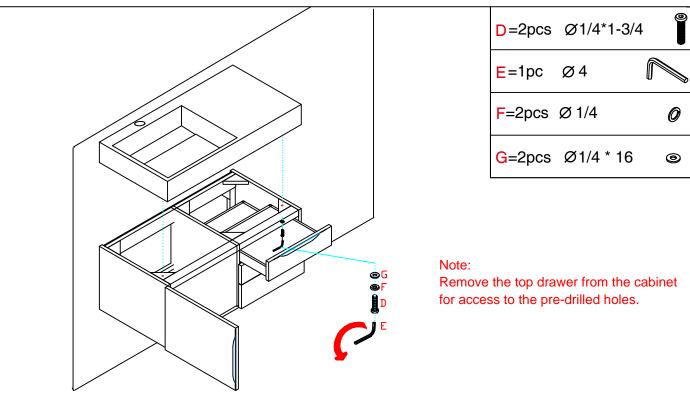


Step 7: Attach washbasin to the top of cabinet, insert the bolt through the Spring Washer (F) and the Flat Washer (G) through the underneath of corner block by Allen wrench.

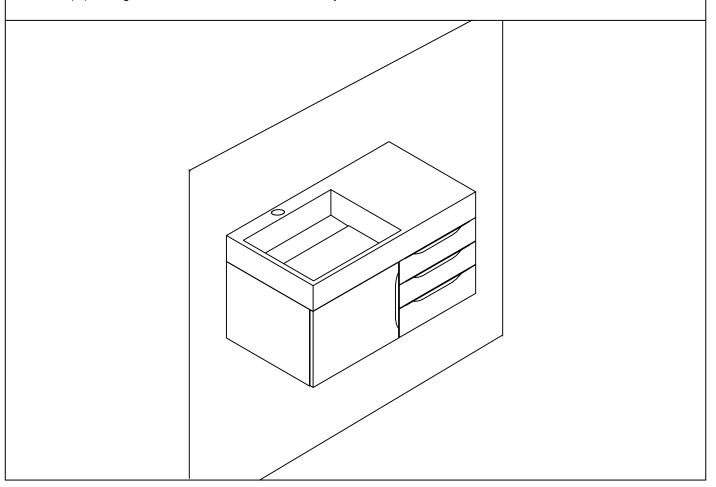



Drawer assembly and removal (with peg)

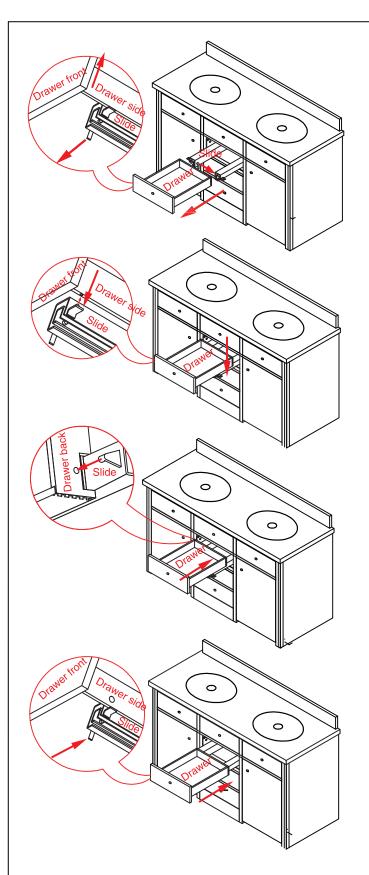

1. For removal, pull out the locking pin from the drawer side. Lift the drawer and pull it out from the cabinet.

2. For the assembly of drawer, pull out the drawer member of the slide from the cabinet, lay the drawer onto the slide.

3. Align drawer back board hole and slide the hook of slide end, push the hook will slide into the hole.

4. Press the locking pin into the drawer side hole to lock the position of the drawer.

Visit our website for a video showing drawer removal and installation. www. jamesmartinvanities. com

Knowledge Base / Solutions / Installation and Assembly