



# OVAL SHOWER CURTAIN ROD

## BEFORE INSTALLING

Read entire shower rod Installation Instructions. Observe all local building and safety codes. For the following installation instructions it is assumed that any old fixtures have been removed and any repairs to the wall have been completed.

## INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your shower curtain rod contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the walls or ceiling, or for personal injury during installation.

## TOOLS AND MATERIALS:



Drill



Level



Tape Measure



Screwdriver



Pencil



Hammer



Hacksaw




1/4" Drill Bit

## INSTALLATION

1. Lay the rod sections on the floor. Slide the 1" loops onto the sections and assemble the rod with the connector pieces.




2. Measure the distance from the ceiling to the desired mounting location. If needed, trim the ceiling supports to the proper length with a hacksaw.

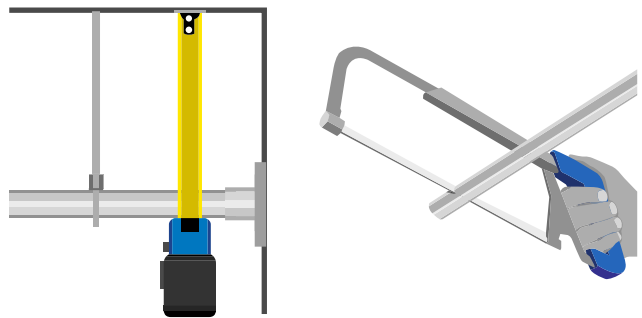

3. Insert the ceiling support rods into the 1" loops. Attach the ceiling brackets to the other end and tighten the set screws to secure.

**Note:** Position the loops around the rod so that the weight of the rod will be evenly distributed.

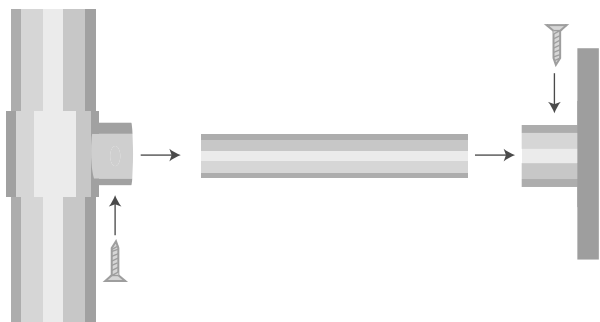





## OVAL SHOWER CURTAIN ROD

### INSTALLATION


4. Hold the shower ring in place and mark the placement of the mounting holes.

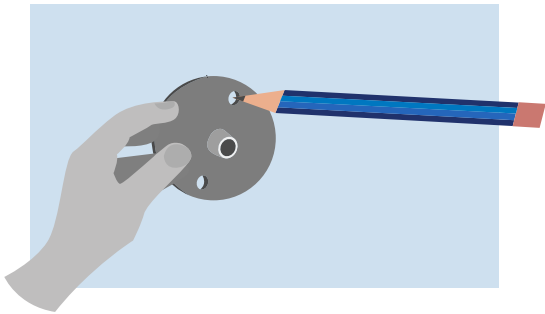

5. Drill pilot holes for the ceiling anchors.

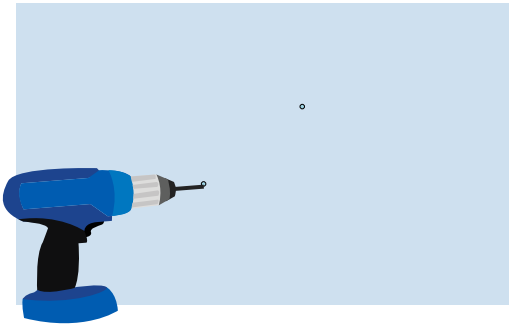

6. Gently tap the anchors into the pilot holes with a hammer.

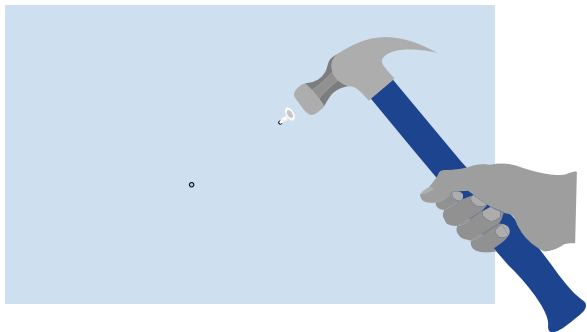

7. Attach the ceiling brackets to the anchors with the mounting hardware provided.

