

# INSTALLATION INSTRUCTIONS

*American Standard*

## DRAIN KIT

**Model: 1680100.XXX FOR FREESTANDING TUB 2765, 2766, 2767**

*Thank you for selecting American Standard...the benchmark of fine quality for over 100 years. To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.*

### **BEFORE YOU BEGIN....**

Local building codes vary by location. Observe all local plumbing and building codes.

Your new bath is shipped to you after careful inspection.

To insure maximum performance and pleasure from this product, please follow the instructions and cautions.

**▲ NOTE:** Take extra care in handling surfaces of the bath. Use only non-abrasive cloths to avoid scratching.

### **TOOLS & MATERIALS MAY BE REQUIRED**



#### **TOOLS:**

- Level
- Square
- Tape Measure
- Pipe Wrench
- Plug Wrench
- Slip Joint Pliers
- Standard Woodworking Tools
- Personal Safety Equipment
- Caulking Gun

#### **MATERIALS:**

- Silicone Caulking
- Tub & Tile Caulk


### **KIT INCLUDES:**

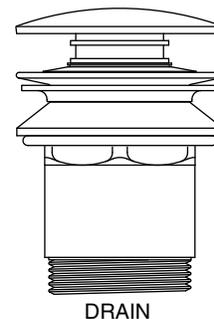

### **CHANGE OVERFLOW COVER**


- 1** Remove 2 set screws on existing overflow cover using supplied Allen wrench. (See Fig. 1)

Fig. 1

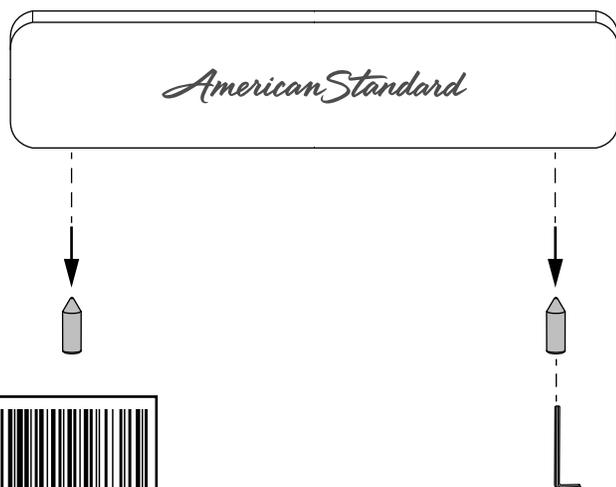

- 2** Replace with overflow cover included in this kit. Use Allen wrench to tighten 2 set screws. (See Fig. 2)

Fig. 2

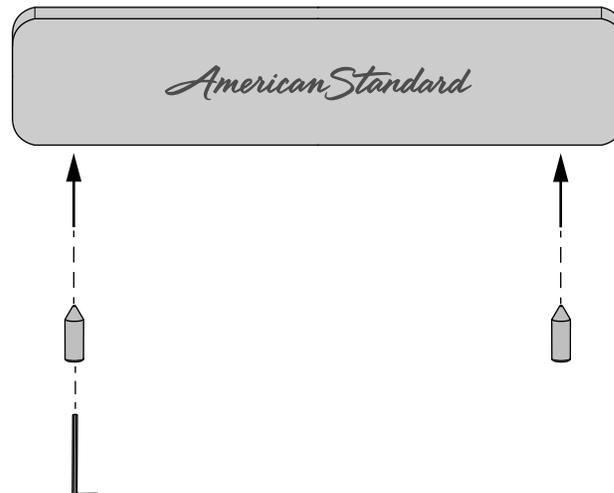

755143-100A

All product names listed herein are trademarks of AS America, Inc. unless otherwise noted.  
© AS America, Inc. 2016

755143-100 Rev. A 10/16

SAVE FOR FUTURE USE

## CHANGE THE DRAIN


**1** Use a pipe wrench and plug wrench to loosen the drain nut in the bottom of the outside of the tub as shown in Fig. 3.

Remove toe tap drain cover.


Place the tub on it's side. Place the plug wrench inside the drain from the inside so that the pipe wrench does not turn.

With the plug wrench in place unscrew the drain nut and remove it by turning the pipe wrench.

From the inside of the tub remove the drain body.

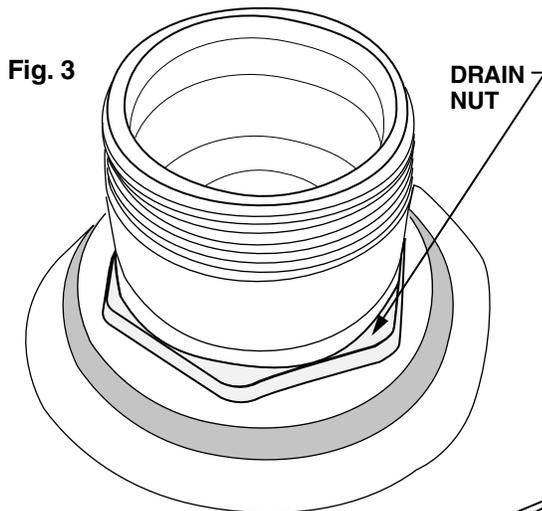


\* **PLUG WRENCH**

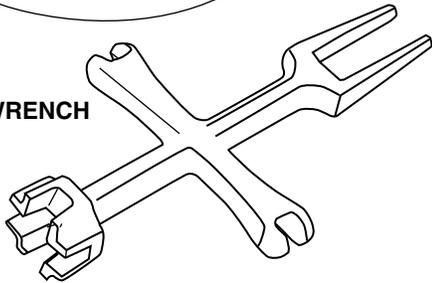

\* *PLUG WRENCH not included in kit.*

**3** Install the replacement finish drain as shown in Fig. 4.

**Fig. 4**

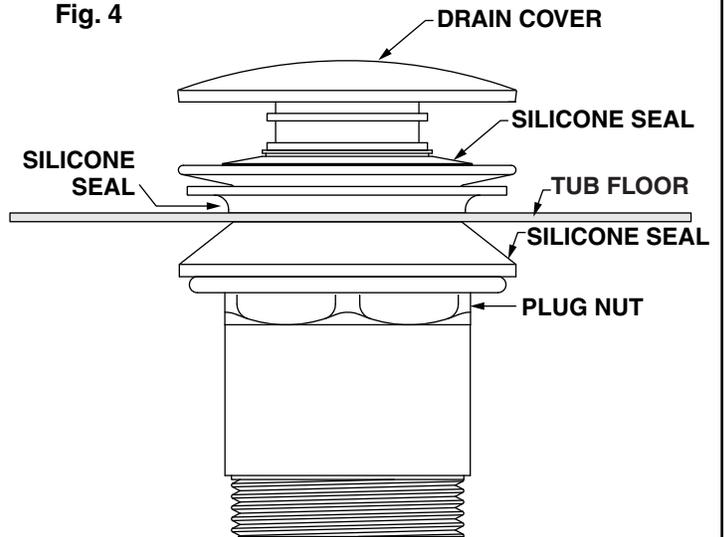

**4** Tighten drain nut using a pipe wrench and plug wrench. Make sure all of the silicone seals are in the proper location (as shown in Fig. 4) and there is no water leaking.

**5** Install the tub by following the instructions included with the tub.

**2** Remove the old drain assembly. Separate the replacement drain body from the drain nut.

**In the United States:**  
 American Standard Brands  
 1 Centennial Ave.  
 Piscataway, New Jersey 08854  
 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902

[www.americanstandard.com](http://www.americanstandard.com)

**In Canada:**  
 AS Canada, ULC  
 5900 Avebury Rd.  
 Mississauga, Ontario  
 Canada L5R 3M3

Toll Free: (800) 387-0369

[www.americanstandard.ca](http://www.americanstandard.ca)

**In Mexico:**  
 American Standard B&K Mexico  
 S. de R.L. de C.V.  
 Via Morelos #330  
 Col. Santa Clara  
 Ecatepec 55540 Edo. Mexico

Toll Free: 01-800-839-1200

[www.americanstandard.com.mx](http://www.americanstandard.com.mx)