



WELLSFORD™ FLOOR MOUNT TUB FILLER

Traditional Wellsford™

WE2339L/TO

FEATURES


- Exposed mixer
 - Floor mounted single column
 - Side mounted metal lever handle
 - Diverter to handshower
 - Ceramic disc cartridge
 - Single-function handshower with easy cleaning face
 - Solid brass construction
 - 10 1/4" Spout reach
 - Rough must be recessed under the finished floor
 - Remote thermostatic valve may be needed; check local code requirements
 - To complete package order R922390000 rough
- Note: Flow rate of the hand shower is 1.8 gpm

COLORS/FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel

WARRANTY

- Limited Lifetime

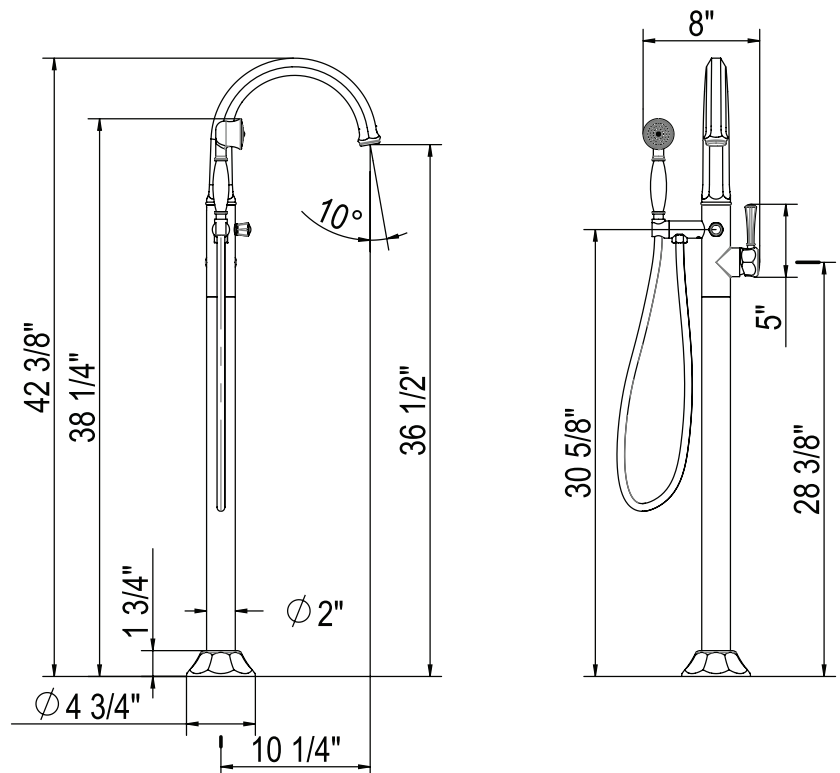

ROHL

Authentic Luxury for Kitchen and Bath®

www.rohlhome.com

INSTALLATION INSTRUCTIONS

ROHL WELLSFORD BATH FREE STANDING TUB FILLER WE2339LAPC, WE2339LPN, WE2339LSTN INSTALLATION INSTRUCTIONS

Care and Maintenance: After use, wipe down with a soft, dry cloth. For all chrome plated surfaces clean this product with warm soapy water and then dry with a dry soft cloth.

Nickel plated, satin and Inca brass finishes should be cleaned with a soft cloth and warm water. Then dry with a dry soft cloth.

Do not use cream cleaners or cleaning agents containing a corrosive acid or scouring agent including: Softscrub, Comet, Ajax and Bonami, as these may damage the surface of the faucet.

Do not use any spray cleaners with ammonia or alcohol like Windex, 409 or Fantastik.


Any use of unsuitable cleaning agents causing damage to the surface will not be covered by the warranty.

For further understanding, please refer to your ROHL Homeowner's Guide to Care & Maintenance brochure.

WARRANTY: Warranty is limited lifetime. See ROHL website for details.

(www.rohlhome.com)

A basic in-line filter system is recommended for the house to protect any debris from entering the water supply line to the house (i.e. due to construction or service work on the street water main).

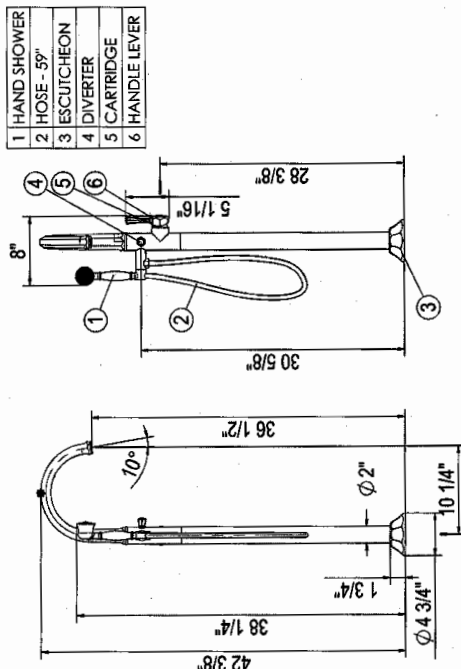

Please leave instructions with the home owner once installed.

SYSTEM REQUIREMENTS

To ensure the optimum performance and customer satisfaction, please adhere to the following:

Flush out all pipe work prior to installation.

Maximum operating pressure

75psi

NOTE: Pressures over 75psi will require that the house have a pressure regulator installed to limit the pressure below 75psi.

Maximum hot water temperature

145°F

if the water temperature exceeds 145°F an approved tempering valve must be fitted. Maximum flow rate: 8.2 US gallons/minute at 60psi flow pressure.

Hand shower flow rate is 2gpm.

Please follow local code guidelines for Asse 1016.

#41990 09/16

ROHL
Authentic Luxury for Kitchen and Bath®


ROHL LLC 3 Parker, Irvine, CA 92618
714-557-1933 www.rohlhome.com

INSTALLATION INSTRUCTIONS

WELLSFORD FREE STANDING TUB FILLER

Wooden floor installations

When you have access to the bottom of the floor under the tub filler, please consider these instructions.

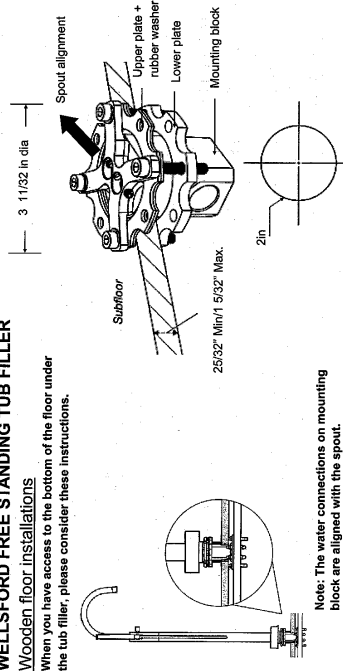

2. Verify the distance of the faucet from the bath to insure that the water will flow into the bath.
 - a. Spout alignment
 - b. Cut hole in wood floor 2 inch diameter. Floor min 25/32 – Max 1 5/32.

Note: Wood floor area top, bottom + inside hole needs to be sealed for protection from any moisture.

3. Remove block plate. Not required when there is no subfloor.

1. Remove base mounting plate.
 - a. Temporary remove plugs and grub screws. (Do not lose.)
 - b. Temporary fit faucet to mounting block to ensure correct alignment of the spout.
 - c. Note: The water connections on mounting block are aligned with the spout.

4.
 - a. Remove screws and plates.
 - b. Position mounting block.
 - c. Mark drill holes for mounting block.
5.
 - a. Position upper plate over marked holes.
 - b. Mark drill holes for upper plate.
6. Drill marked holes with 1/4 in. drill.

7.
 - a. Install the rubber washer then the upper plate and install the mounting block over drill holes.
 - b. Install screws into mounting block and through upper plate washer.
8.
 - a. From under floor: Install lower plate.
 - b. From above floor: Install clamping screws to lower plate and tighten.
9.
 - a. Connect water supply to mounting block under wooden floor.

Note: There are no shutoffs, but the hot and cold supplies do have plugs to remain in place during construction.

Note: Arrow for approx faucet spout.

10. To install Trim:
 - a. After the finish floor is in place:
 - i. Slide in water supply.
 - ii. Remove plugs and grub screws.
 - b. Plug in water supply.
11.
 - a. Slide chrome base cover onto faucet.
 - b. Screw the base mounting plate to faucet base with the 4 screws and washers supplied and tighten.
12.
 - a. Apply grease to faucet O-rings.
 - b. Install faucet by easing onto mounting block (4 O-rings spare in kit).

Note: Flat side of plate must be facing downwards.

13.
 - a. With locking screws supplied tighten mounting plate.
 - b. Turn on the water and do a pressure test.
14.
 - a. Apply a silicone bead around base behind cover on finished floor for seal.
 - b. Slide cover over mounting.
15. Install hand shower and hose: ensure washers are in place.

#41992 09/16

