



1

Trace adapter plate opening on plenum.

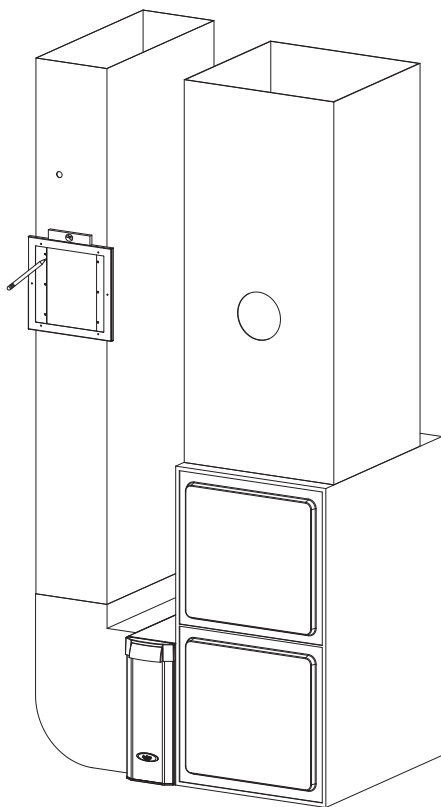

2


Cut out opening using dimensions traced in step 1.

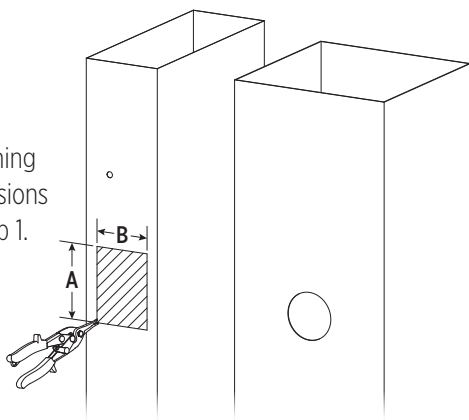

Model	Fits	A	B
5553	500 Series, SBP	9-5/8"	7"
5557	400 Series, 600 Series, LBP	12-3/4"	7"


3

Mount adapter plate using (6) #8 x 1/4" sheet metal screws.

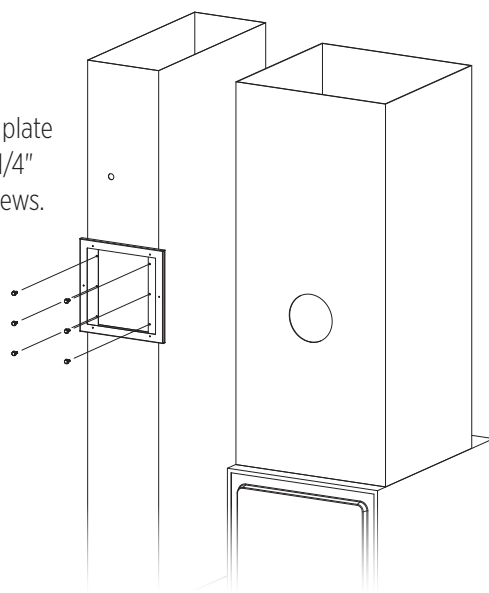

4

Mount humidifier base to the adapter plate using (6) #8 x 1/4" sheet metal screws.

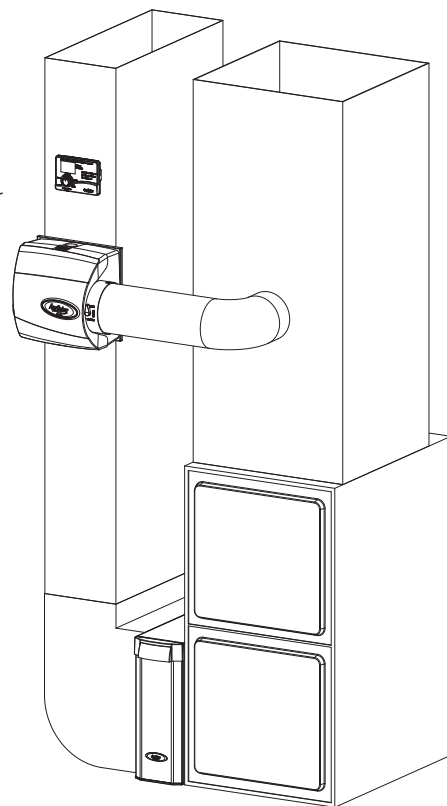

90-2451