



SHOWER DRAIN

BEFORE INSTALLING

Read the following installation instructions carefully. Observe all local plumbing and building codes.

INSTRUCTIONS

For the following instructions it is assumed that the shower pan and drain flange coupling are already in place. Your application and conditions may call for variations to these procedures. Signature Hardware accepts no liability for any damage to floor, walls, plumbing, etc., or for personal injury during installation. We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing.

Unpack and inspect the drain and parts for damage. If damage is found, please call customer service at 1-866-855-2284. If you need assistance while installing your shower drain, contact customer service.

TOOLS AND MATERIALS:



Silicone Sealant



Level



Thinset Mortar




Pea Gravel
(32 ounces)

INSTALLATION


1. Insert the rubber drain gasket into the drain flange coupling.



2. Insert the drain outlet into the rubber gasket and place in the desired position. Adjust or remove the drain feet if necessary.

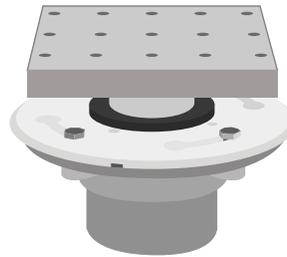


3. Place pea gravel over the drain flange coupling weep holes and around the perimeter to prevent mortar from filling and blocking the holes.

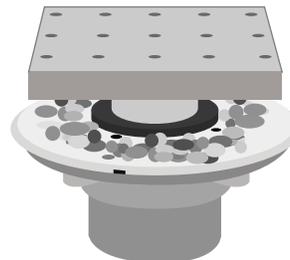




4. Apply mortar over the waterproof shower pan liner, starting from the drain and continuing to the wall. Using a level, create a 1-2° slope from the wall to the drain.

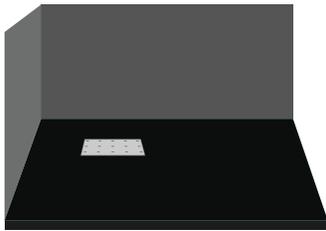

6. Once the tiling and grouting are complete, apply a thin bead of silicone sealant around the drain to fill any gaps between the drain and tile.

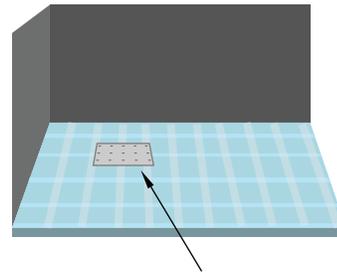

Note: Be sure to leave room for final thinset and tile application. The top of the drain should be level and 1/16" below the adjacent tile.

5. Allow the mortar to cure.

