

TOILET PAPER HOLDER

INSTALLATION INSTRUCTIONS

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing fixtures. Signature Hardware accepts no liability for any damage to the hook or for personal injury during installation.

Read entire Edison Robe Hook Installation Instructions. Observe all local building and safety codes.

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1-866-855-2284. If you need assistance or have questions while installing your robe hook, contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the floor, walls or for personal injury during installation.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.

TOOLS AND MATERIALS:




Screwdriver



Pencil



Stud Finder



Drill


REVISED 07/10/2019

TOILET PAPER HOLDER


INSTALLATION INSTRUCTIONS

INSTALLATION


1. Determine the installation location and mark the wall through each of the mounting holes in the toilet paper holder.

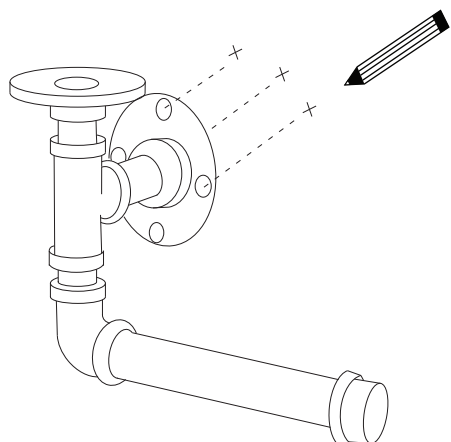

Note: We recommend anchoring any fixtures that will bear weight to wall studs or solid wood blocking. If the studs in your bathroom do not line up to the mounting location, wood blocking can be installed between the studs using standard 2 x 4's. If wood blocking needs to be installed behind the finished wall, we recommend consulting a professional if you are unfamiliar with this type of installation.

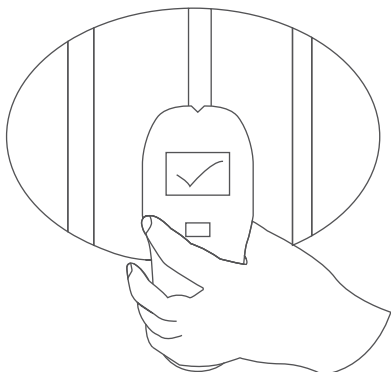

2. Drill the screw holes with the appropriate drill bit for the wall surface or material.

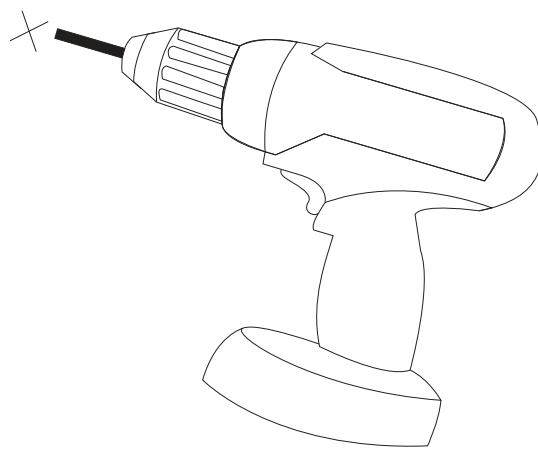

3. Use a screwdriver to fasten the toilet paper holder to the wall with the provided screws.

