


# THERMOFRAMES<sup>Patented™</sup>


## RETURN AIR GRILLE DRY WALL FRAMES

### INSTALLATION INSTRUCTIONS

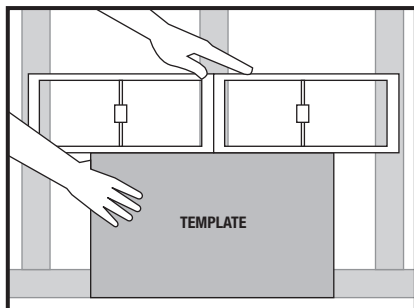


- 1 For sidewall grilles, cut leveling template from wood or other suitable material for desired height. For baseboard grilles, set frames on or at finished floor level.


**Note:** RA Frames must be level.

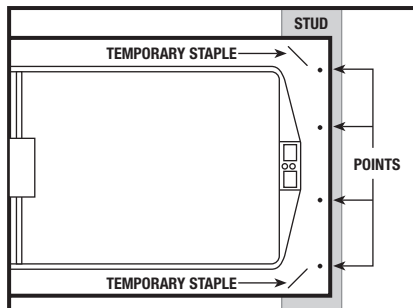

- 2 Temporarily staple to secure in place for proper nailing. Staple or nail to studs on marked points.

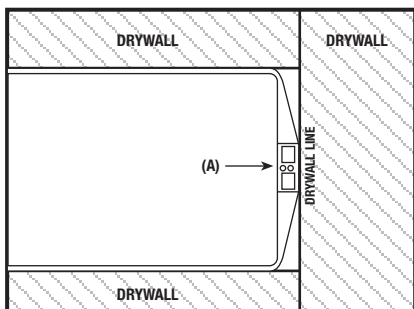

- 3 Position drywall to drywall line indicated on frame. Place grille over frame and attach with screw into molded hole, (A), in frame.

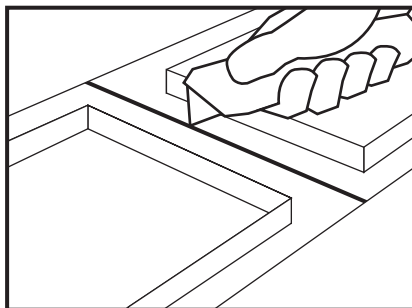

- 4 If using a 30"x 6" frame, you may use a utility knife or snips to cut on V-Groove to make 2 single 14"x 6" frames.

**MADE IN U.S.A.**

FRAMES ARE AVAILABLE IN:

- **STANDARD:** Allows unfiltered airflow.
- **WINDOWED:** Allows no dirt or air.
- **FILTERED:** Allows clean airflow.

**THERMO MANUFACTURING INC.**

CANTON, OHIO / TOLL FREE PHONE 888-678-3709 TOLL FREE FAX 888-678-8711

[www.THERMOPAN.com](http://www.THERMOPAN.com)

Lit #031903