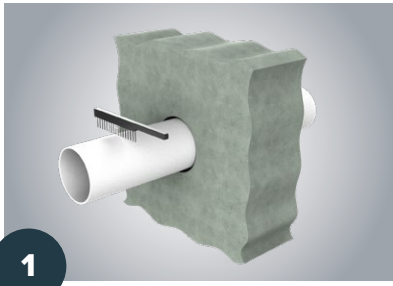


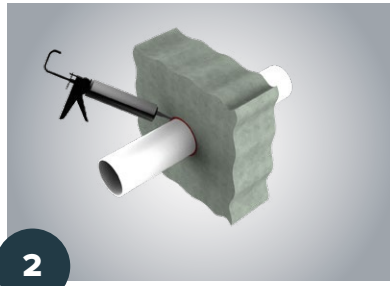
Installation Instructions

HoldRite® HydroFlame™ Pipe Collar

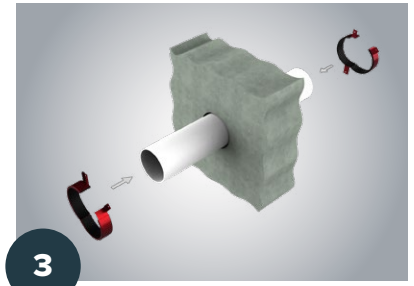
WALL INSTALLATION

**1**

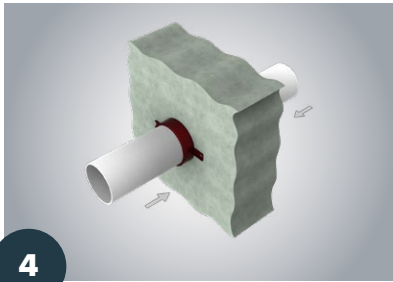
Clean plastic pipe.

**2**

Apply caulking as required to close remaining gap to both sides of wall assembly; providing a fire smoke and gas resistant seal. Spread caulking smoothly and evenly all around.

**3**

Install collars around pipe.

**4**

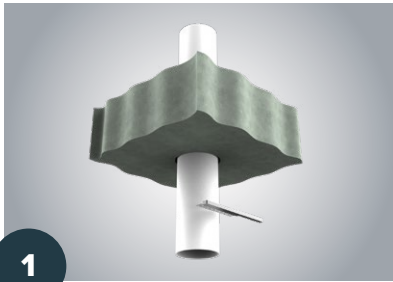
Close collars and slide along the pipe until flush with wall. Anchors as required.



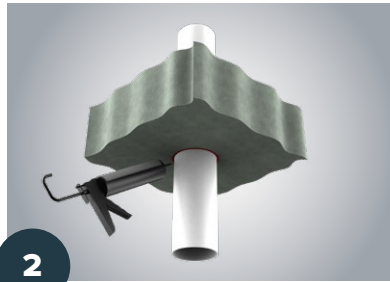
Installation Instructions

HoldRite® HydroFlame™ Pipe Collar

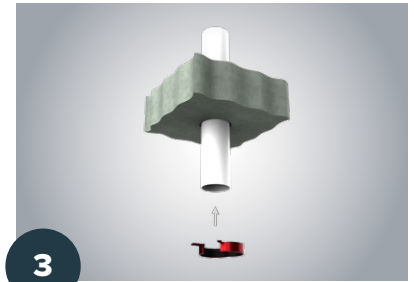
FLOOR INSTALLATION

**1**

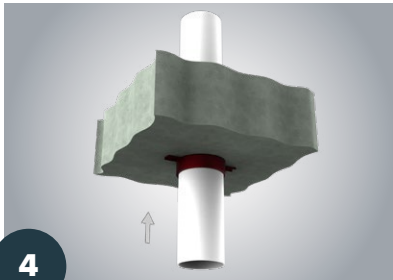
Clean plastic pipe.

**2**

Apply caulking as required to close remaining gap to the bottom side of floor assembly; providing a fire smoke and gas resistant seal. Spread caulking smoothly and evenly all around.

**3**

Install collar around pipe from the bottom of floor.

**4**

Close collar and slide along the pipe until flush with bottom of floor. Anchors as required.

