



INSTALL WITH CONFIDENCE • INSTÁLE CON CONFIANZA

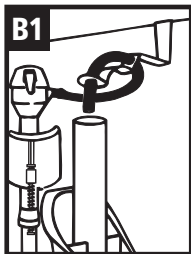

Tilt flush valve / overflows

Válvula de descarga por inclinación / desbordamientos

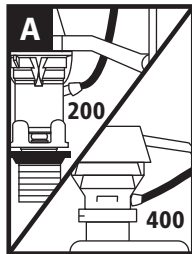

Built-in china overflows

Desbordamientos de porcelana integrados

1. Turn off water supply. Flush toilet. Remove old tube & clamp.
2. Attach one tube end to fill valve nipple located near top for 400 models & bottom for 200 models and thread other end through clamp. Slip clamp over back lip of toilet tank.

NOTE: Flow from refill tube must be positioned **above** overflow pipe. **DO NOT** insert tube into pipe.

3. Turn on water supply.

1. Corte el suministro de agua. Descargue el inodoro. Quite el tubo y la abrazadera antiguos.

2. Conecte un extremo del tubo a la boquilla de la válvula de llenado situada cerca de la parte superior en el caso de los modelos 400 y cerca de la parte inferior en los modelos 200 y enrosque el otro extremo a través de la abrazadera. Deslice la abrazadera sobre el borde posterior del depósito del inodoro.

NOTA: El flujo del tubo de llenado debe colocarse por encima de la tubería de desborde. NO inserte el tubo en la cañería.

3. Abra el suministro de agua.