



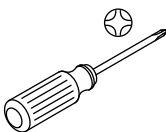

Stainless (Non-Staining) Plumbers Putty

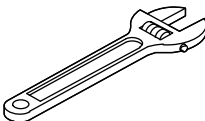

Sealant Tape



Record your model number below for future reference:

Important Information
Observe all local plumbing and building codes.

Do not use petroleum-based plumbers putty on marble or stone surfaces.

1 Install the O-ring to the underside of the escutcheon.

2 Place the escutcheon over the spout hole.

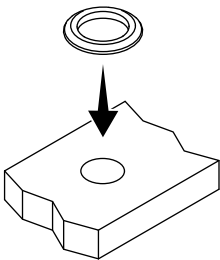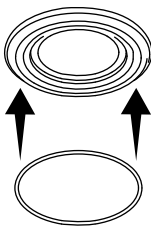






3 Install and secure the faucet.

4 Partially thread the screws into the rings.

5 Install the O-ring. Install the handle.

6 Install the washer and ring. Do not tighten the screws.

7 Turn the handles to "Off." Align the handles. **Optional:** For Saint-Louis handles, align so the logo faces away from the spout.

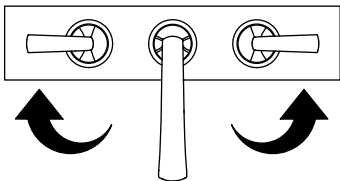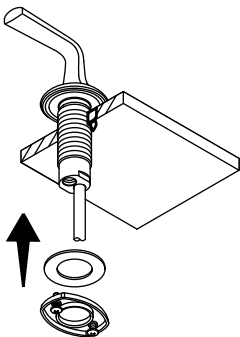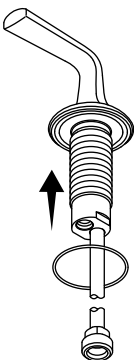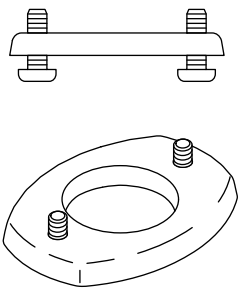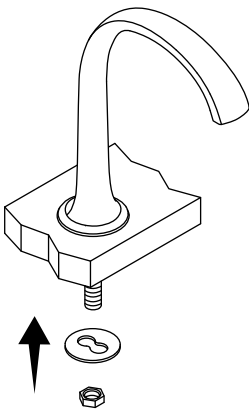





8 Secure the handles.

9 Install and tighten the tee.

10 Connect the hoses.

11 Disassemble the drain.

12 Apply plumbers putty to the flange and attach.

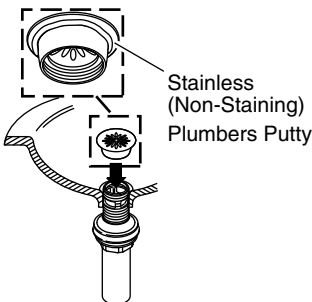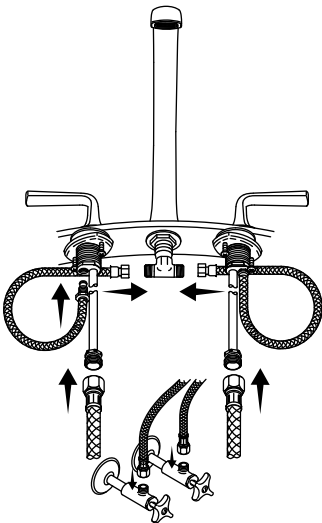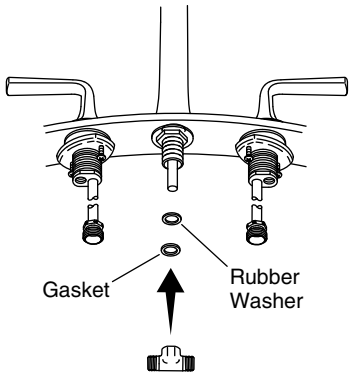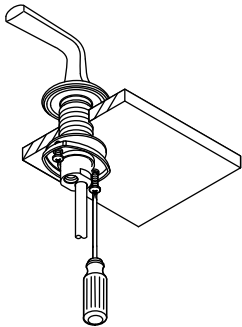

13 Apply thread sealant tape to the drain pipe threads. Tighten the nut.

14 Connect the trap. Wipe away excess plumbers putty.

15 Turn on the water, flush the hoses, and check for leaks.

16 Turn off the water. Install the aerator.

