


Florestone Saflor® Molded Receptors Installation Instructions

1. Examine sub-floor shower area for movement and/or squeaks. Fix any problems encountered.
2. Integral drain requires minimum 5" diameter by 2¼" deep recess in sub-floor for adequate clearance.
3. Level and plumb pan on sub-floor. Shim or use mortar if needed to compensate for out of level sub-floor.
4. Install Wedge-Lok® seal. Use soapy water to lubricate.
5. Do not nail or screw into tiling flange. May cause tiling flange to crack or break.
6. Pour water into shower pan to test for proper drainage upon connection of wastepipe prior to finishing walls.


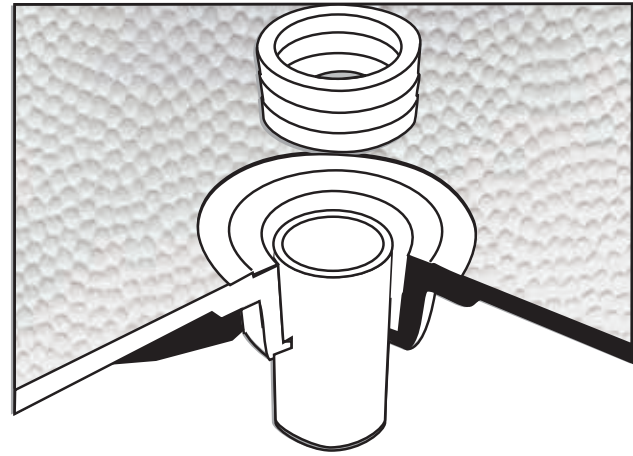


Exclusive Wedge-Lok® Seal

Florestone Saflor Shower Receptors come with an integral drain molded into the receptor, eliminating the need for a separate drain. The exclusive seal is easily installed without special tools. No caulking, no mess, no places to leak. Drain will also accept conventional lead joint.

2" I.P.S. **Wedge-Lok®** Seal fits plastic and steel only. For copper waste, specify **Josam Jiffy-Joint™** or equal. For cast iron, **Josam Jiffy-Joint™** or equal may be required because of OD variance. Specify for copper or cast iron pipe.

Bottom

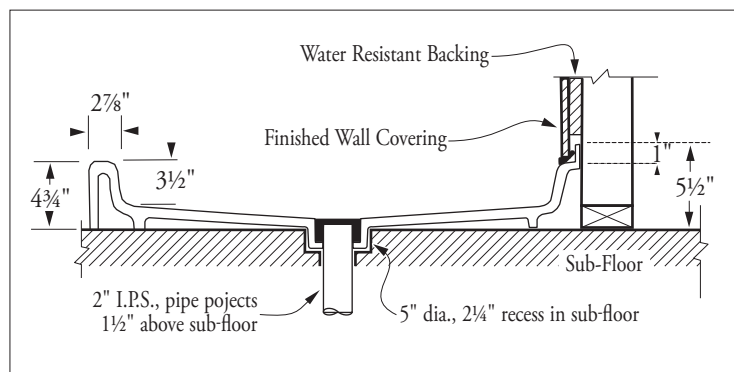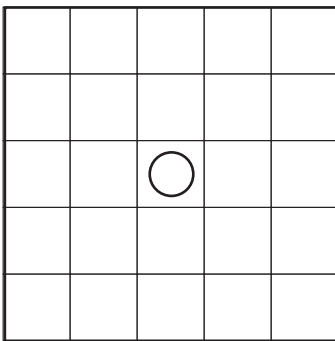

FLORESTONE PRODUCTS CO., INC.

2851 Falcon Drive • Madera, CA 93637

T. 559.661.4171 • T. 800.446.8827

F. 559.661.2070 • florestone.com