



Como Series Sink Consoles: C325-V27.6-GW C325-V27.6-BNK C325-V27.6-MBK
 Como Series Wood Shelves: C325-SH27-GW C325-SH27-WLT C325-SH27-NPW
Assembly / Installation Instructions

**Materials
for
Installation:**

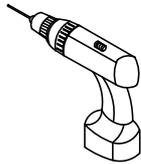


Drill

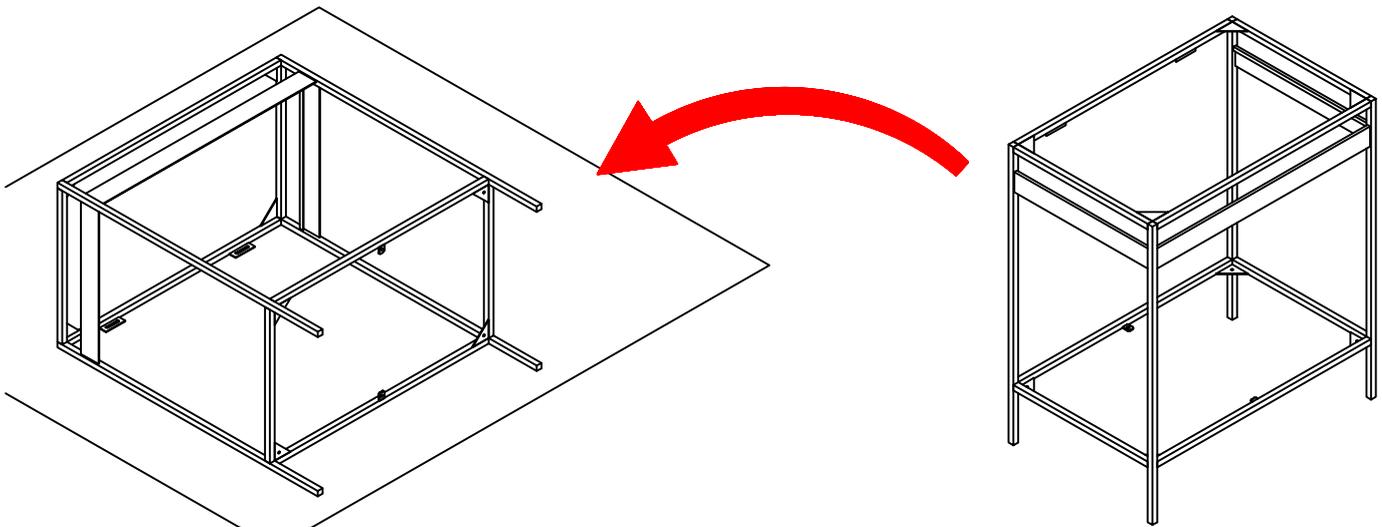

Step 1 Notes:

Please place a blanket or other soft material on the floor and then place the sink console on its back.

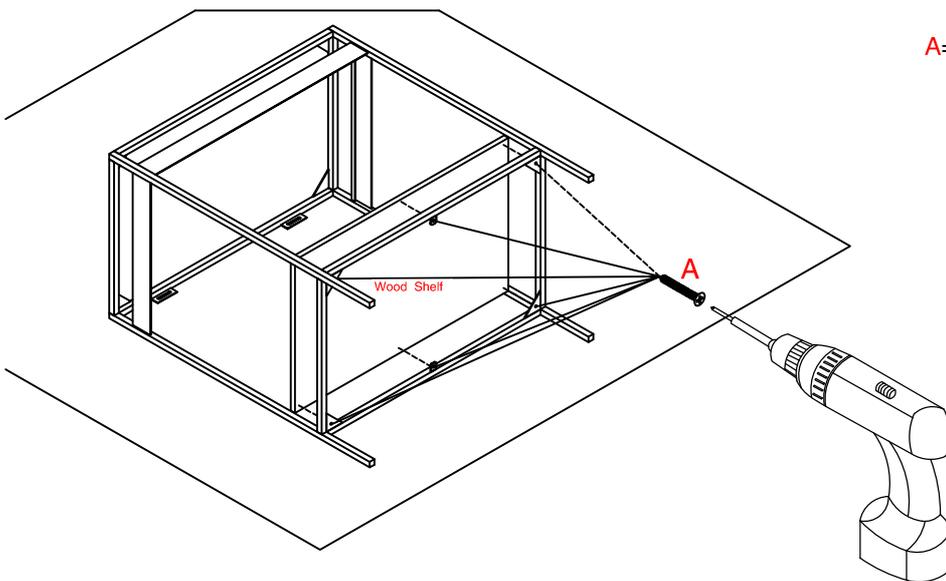

A=6PCS Screws Ø3*12mm



* For your safety and to achieve the best possible installation of this vanity cabinet, James Martin Vanities always recommends you consult with a professional contractor. Two people are required for the assembly and installation of this vanity cabinet.


Warning: To prevent accidental tip-over of these cabinets, you must follow these steps.

Step 2 Notes:


Please locate the red hardware bag which is included with the sink console. Place the wood shelf to the sink console and secure the shelf to sink console using Screw A.

Como Series Sink Consoles: C325-V27.6-GW C325-V27.6-BNK C325-V27.6-MBK
 Como Series Wood Shelves: C325-SH27-GW C325-SH27-WLT C325-SH27-NPW
Assembly / Installation Instructions

**Materials
for
Installation:**

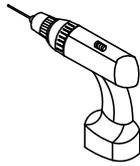

Drill

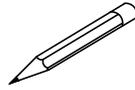


Pencil




Hammer

Step 3 Notes:

Put the sink console against the wall, mark the positions with a pencil through the pre-drilled holes on the back rail.

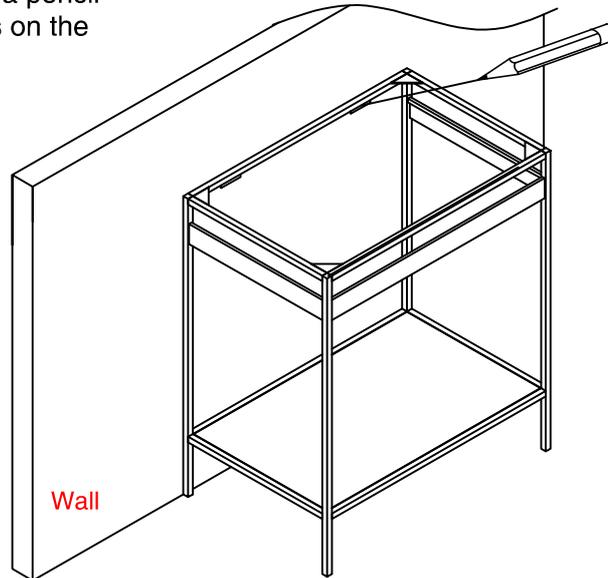

B=2PCS Drywall anchor Ø8*38mm

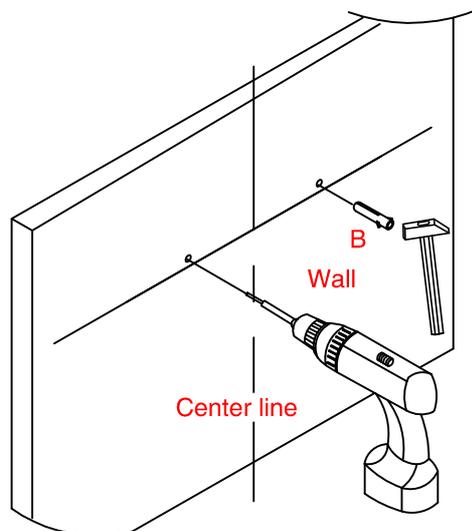

Step 4 Notes:


Drill holes for the screws in the positions you have marked with the pencil.

Drill the holes' depth no less than 1 1/2", insert hardware **B** (drywall anchors) to the holes by using hammer if wall studs are not in the correct positions.




Como Series Sink Consoles: C325-V27.6-GW C325-V27.6-BNK C325-V27.6-MBK
Como Series Wood Shelves: C325-SH27-GW C325-SH27-WLT C325-SH27-NPW
Assembly / Installation Instructions

**Materials
for
Installation:**

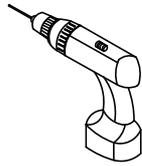

Drill

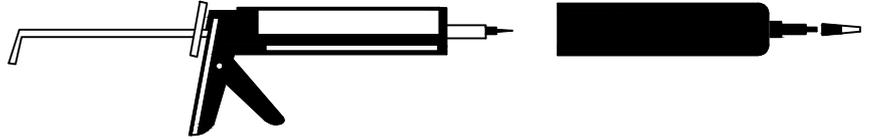

C=2PCS Screws Ø4*40mm





D =2pcs Flat Washer 1/4" x 1/2"



Step 5 Notes:

Secure the cabinet to the wall using Screw **C** and Flat Washer **D** for wall studs.

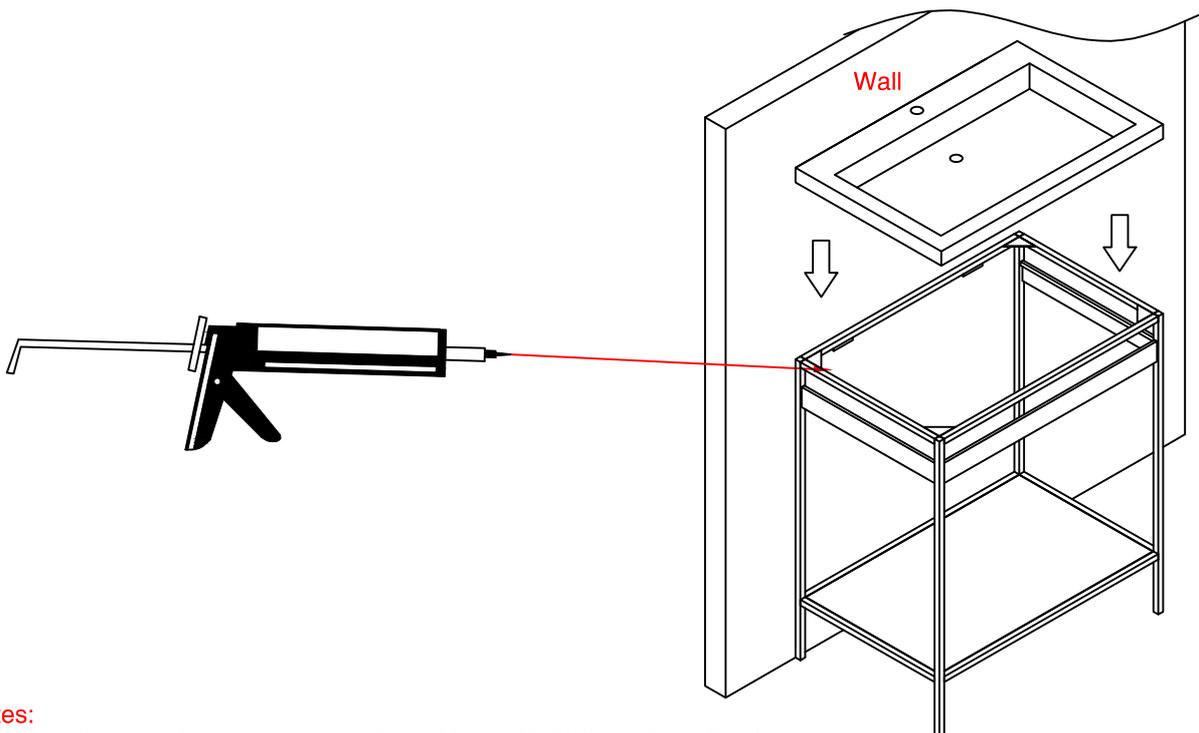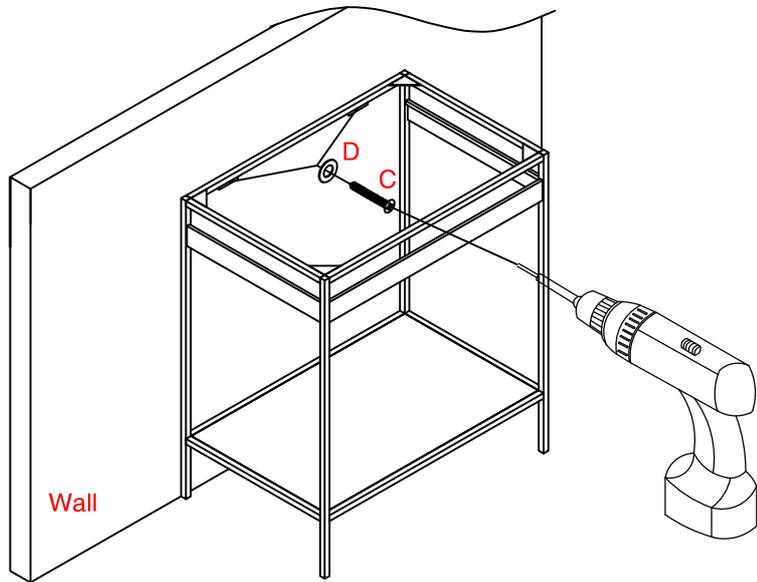

Step 6 Notes:

Properly align and secure the countertop to the cabinet with high quality adhesive.