

# FREY 60" VANITY

WITH UNDERMOUNT SINK

SKU: 949568, 949569, 949572

## BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the vanity, plumbing, countertop, sink, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the product for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

## GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.

## TOOLS AND MATERIALS:



Pencil



Silicone Sealant  
(100% Neutral Cure)



Damp Cloth

## HARDWARE LIST



Screw  
M6x20 - 20pcs



Washer  
19x2 - 16pcs



Allen wrench  
4mm - 1pc

For Warranty information, please visit: [signaturehardware.com/services/warranty](https://signaturehardware.com/services/warranty)

REVISED 01/28/2021  
CODES: 531239, 531240, 531241


# FREY 60" VANITY

WITH UNDERMOUNT SINK

SKU: 949568, 949569, 949572

## INSTALLATION

1. Turn vanity cabinet upside down on soft surface.  
Align mounting holes in feet with mounting points on vanity cabinet.

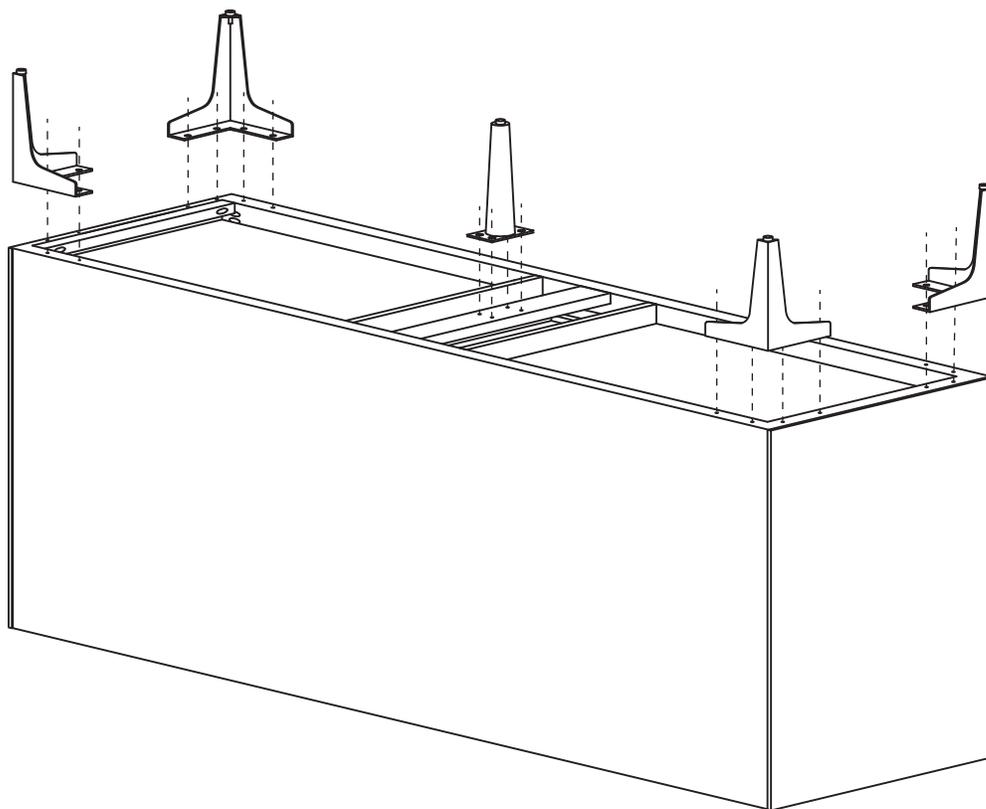


# FREY 60" VANITY

WITH UNDERMOUNT SINK

SKU: 949568, 949569, 949572

2. Using provided allen wrench (C) fasten feet to vanity cabinet with washer (B) and screw (A) as shown.

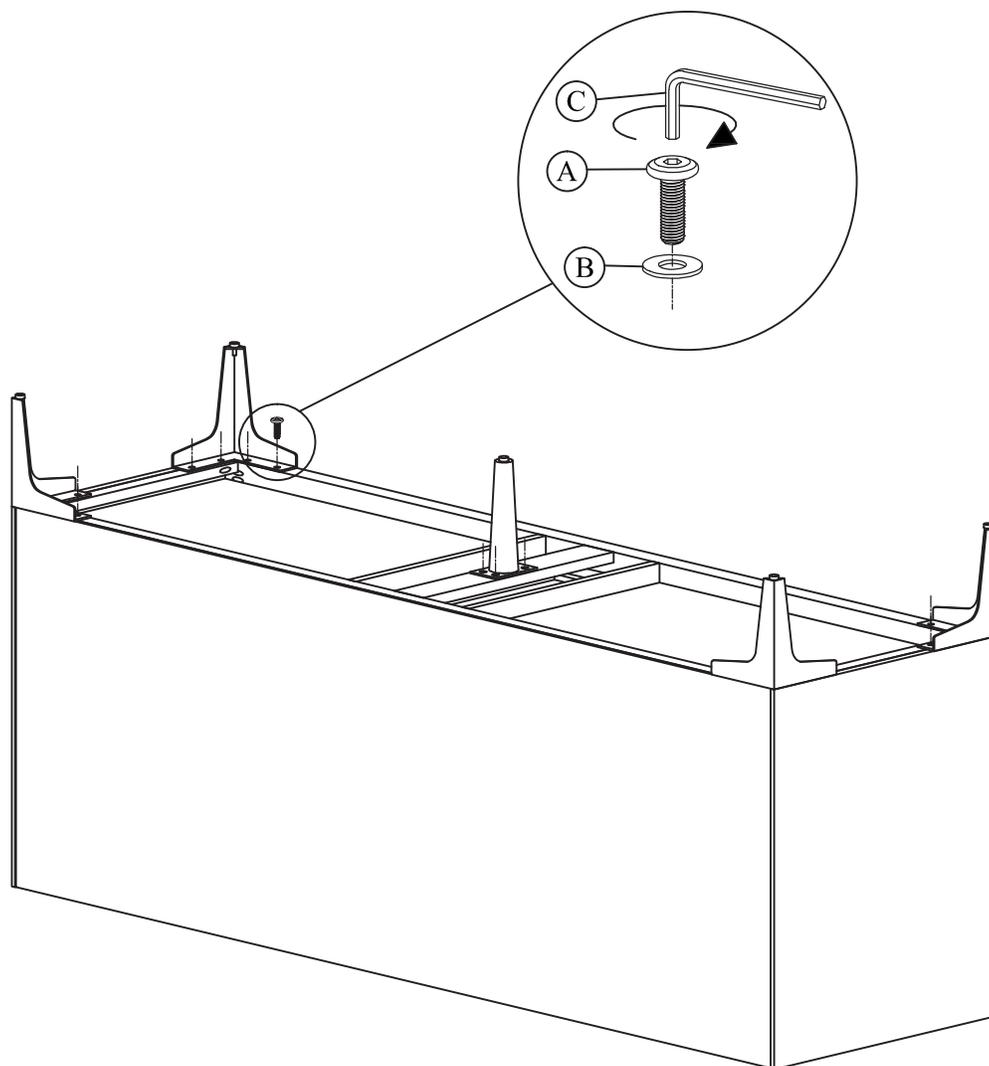

# FREY 60" VANITY


WITH UNDERMOUNT SINK

SKU: 949568, 949569, 949572


## SINK INSTALLATION

1. Carefully turn the countertop over, resting it on a soft, stable surface to prevent damage.


**Important:** The countertop is very fragile. Take caution when handling, and have someone assist you.

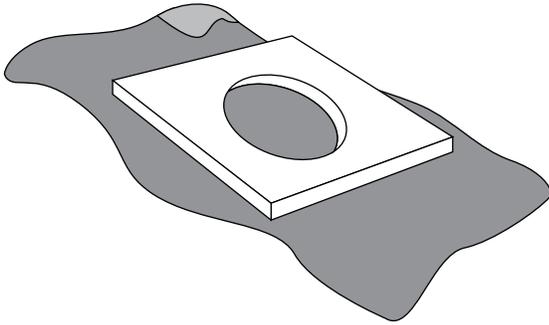


2. Position the sink over its cutout on the countertop. Make sure the sink is centered with the faucet hole and is evenly spaced between the bolt holes.

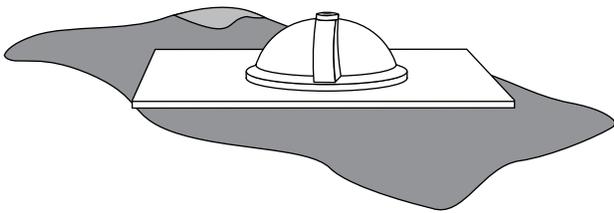

3. Use a pencil or marker to draw an outline around the sink perimeter.

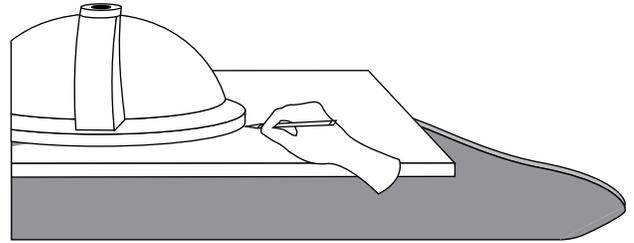

4. Remove the sink from the countertop. Apply a bead of silicone sealant around the top edge of the sink rim.

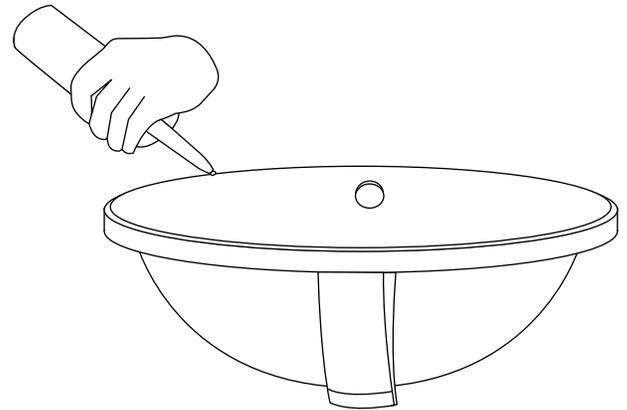


# FREY 60" VANITY


WITH UNDERMOUNT SINK

SKU: 949568, 949569, 949572


5. Carefully place the sink upside down on the countertop, positioning it within your marked outline. Once positioned, press firmly into place.

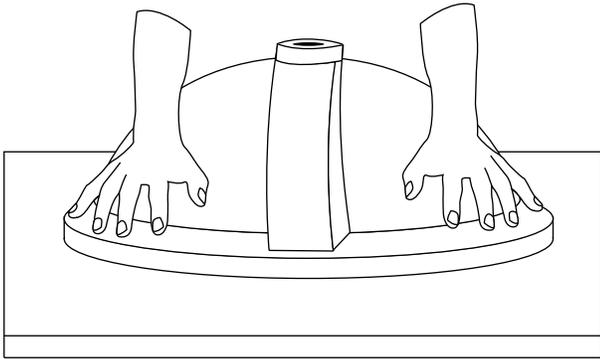


6. At each of the bolt holes in the countertop, attach sink clips by placing the long end of the bracket flat against the sink lip. Screw the wing bolts through the brackets and bolt holes and tighten.

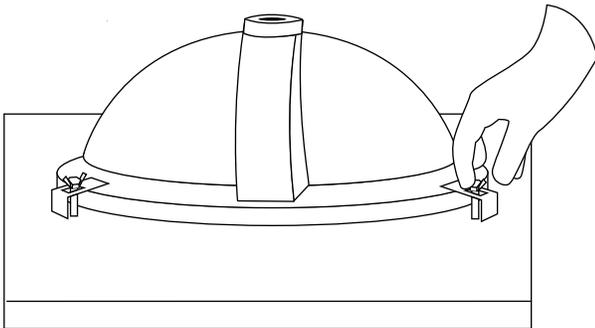

7. Carefully turn the countertop and sinks over. If needed, reposition the sinks by slightly loosening the wing bolts and adjusting.

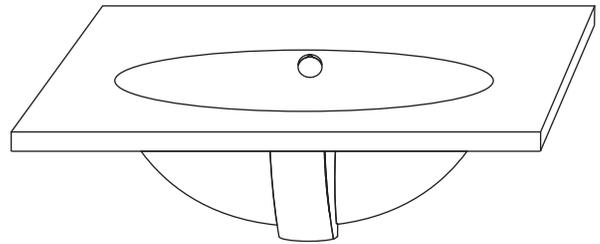

8. Wipe away any excess sealant with a damp cloth, and allow the sealant to dry.

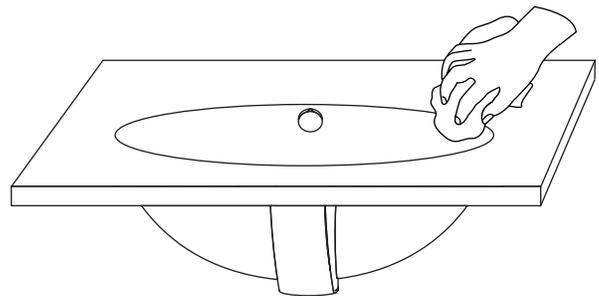


# FREY 60" VANITY

WITH UNDERMOUNT SINK

SKU: 949568, 949569, 949572


## COUNTERTOP INSTALLATION

1. Apply a bead of silicone sealant around the top edge of the vanity cabinet.

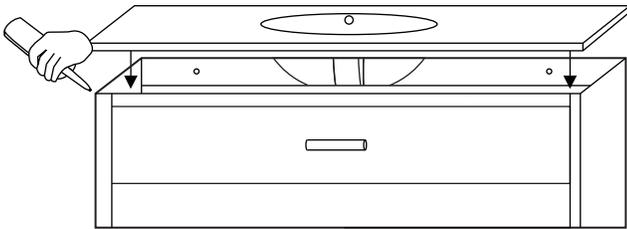


2. With assistance from another person, slowly and carefully set the countertop onto the vanity cabinet. Once positioned, press firmly into place. Wipe away any excess sealant using a damp cloth.

**Important:** The countertop is very fragile. Take caution when handling, and have someone assist you.

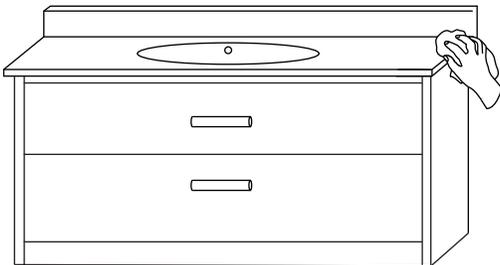

3. If you are installing a side-splash and/or back-splash, place a generous amount of silicone sealant on the back of it and press it into place against your bathroom wall. Fill any gaps that are left with silicone sealant. Wipe away any excess sealant with a damp cloth.

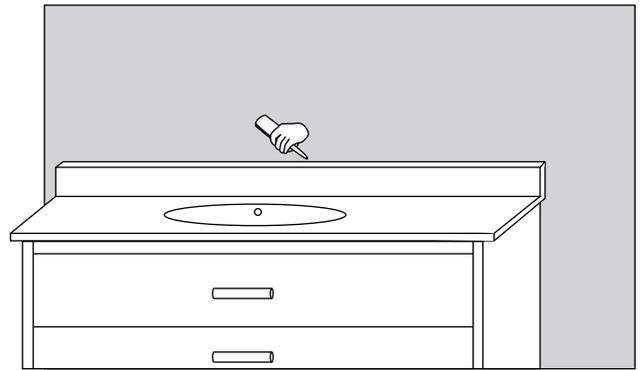

4. Let the assembled vanity sit for 24 hours to allow all the silicone sealant to fully dry. Once dry, proceed to the installation of your faucet and drain.

**Note:** In some situations, it may be necessary to cut the inner cabinet shelves to allow space for your drain's P-traps.



# FREY 60" VANITY

WITH UNDERMOUNT SINK

SKU: 949568, 949569, 949572

5. For stone tops, such as marble and granite, it is recommended that you apply a high-quality sealer to protect from staining and discoloration. Stone sealer should be reapplied once or twice per year, depending upon usage.

