


Installation & User Guide

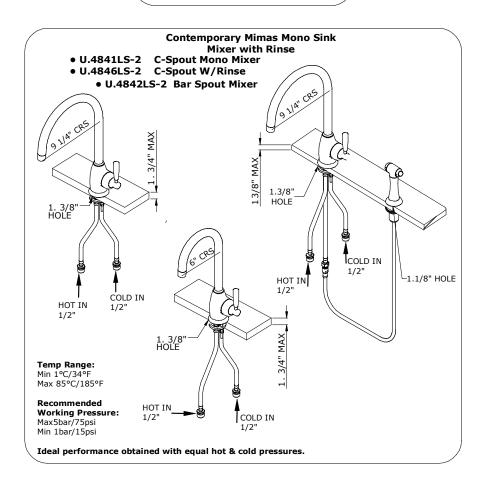

The Contemporary Kitchen Collection Installation & User Guide

Congratulations on the purchase of your Perrin & Rowe Kitchen Product. Correctly installed and with sensible care, this product will give you many years of trouble free service.


## **IMPORTANT INFORMATION**

The following instructions are for the rinse and non-rinse version of the model you are installing. Please read carefully to ensure correct installation.

Before you proceed... We recommend you engage the services of a registered plumber to install this product.


For ease of possible future servicing, we also recommend the fitting of conveniently placed isolating valves.

In addition to the guide below it is essential that the written information overleaf is carefully read and understood.



Once unpacked remove large & small base seals, rosette, fixing nut, securing nut and clamp plate ready for installation.

• Temperature of the hot water supply does not exceed 185°F. • Recommended minimum water supply pressure - 25psi. • Recommended maximum water supply pressure - 100psi. BASE RING • Ideal performance obtained with equal hot & cold pressures. Mimas - Lever should be on the right when viewed from the front of the fitting. Hole centre a minimum of 2. 1/2" from the wall. -SECURING STUD LARGE BASE SEAL Monobloc mixers require a Ø1. 3/8" hole through the surface they are to be installed on. Maximum counter top thickness 1. 3/4". Insert the flexible connections through the hole ensuring that the base seal is in place between the mixer and mounting surface. CLAMP PLATE-From the underside of the counter top, place the clamp plate on SECURING NUT the securing stud and using the box spanner supplied, put fixing nut in spanner and tighten until mixer is held firmly in position. BOX WRENCH Secure spout with supplied Box Wrench. Ensure all connections are firmly tightened

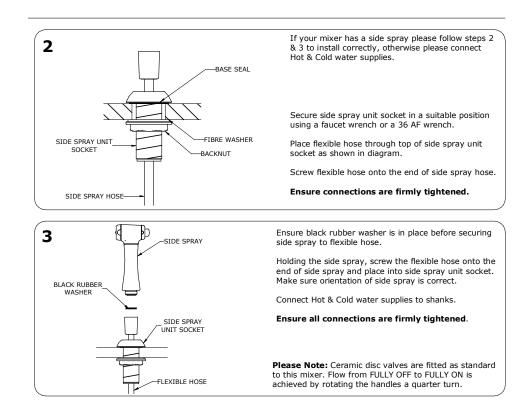

## **BEFORE USE**

- Carefully check the installation for leaks.
- If further building work is to be carried out in the vicinity, cover the tap with a plastic bag to avoid damaging the finish.
- Please ensure that the installation complies with the water supply bye-laws.

## **CARE & MAINTENANCE**

Wipe down after use to avoid water spotting and mineral build up.

Occasional cleaning with warm soapy water, followed by a polish with a soft cloth is all that is required to keep the plated finish in good condition.

Do not use proprietary abrasive liquids, powders, or pads to clean the shower. Do not use any products with ammonia bleach or limescale remover. You will damage the plated finish and void your guarantee.