


LINDLEY 1938, 1955 INSTALLATION INSTRUCTIONS



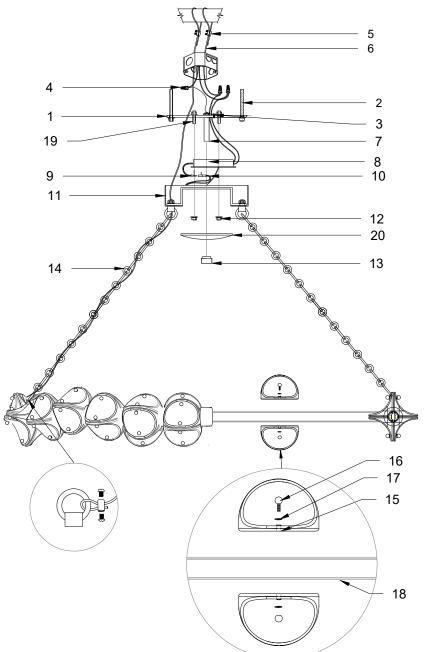

- DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.
- TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL
  APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES. THE INSTALLATION AND
  MAINTENANCE OF THIS UNIT SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN OR CERTIFIED
  FACTORY TRAINED TECHNICIAN.
- CALIFORNIA PROP 65: THIS LIGHTING FIXTURE CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, AND/OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USE.
- REMOVE THE FIXTURE, PARTS AND PARTS BAG(S) FROM THE CARTON. BEFORE DISCARDING THE
  CARTON, DOUBLE CHECK TO MAKE CERTAIN THAT ALL PARTS ARE FOUND. INSPECT THE FIXTURE
  PRIOR TO INSTALLATION FOR ANY DAMAGE TO THE FIXTURE.
- DIMMING: THE FIXTURE CAN BE CONTROLLED BY A WALL DIMMING DEVICE. ONLY USE TRIAC/ELECTRONIC DIMMER. MAKE SURE THE CARTON IS MARKED FOR USE WITH LED COMPACT FLUORESCENT-INCANDESCENT LIGHT SOURCE ONLY. THESE CAN BE PROVIDED BY YOUR LOCAL ELECTRICAL DISTRIBUTOR, HOME CENTER, OR HARDWARE STORE.
- PLEASE CLEAN WITH A SOFT, DRY CLOTH ONLY! DO NOT USE CLEANSERS

### **FIXTURE INSTALLATION**

- 1. Remove the outlet box from the approved support, and install additional support bracket (Not included)
- Slide crimp type CABLE CLAMP (5) onto the SAFETY CABLE (6).
   Feed the SAFETY CABLE (6) down through one of the holes in the top of the outlet box.
   Loop the SAFETY CABLE (6) over the approved support.
   Feed the SAFETY CABLE (6) back through the top of the box and the CABLE CLAMP (5).

Using the crimping tool, tightly crimp the CABLE CLAMP (5) to lock the SAFETY CABLE (6) in position.

- 3. Reinstall the outlet box to the approved support.
- 4. Attach the MOUNTING PLATE (1) onto existing structure using the MOUNTING SCREWS (2). The fixture must be supported Independtly from the outlet box. This fixture is designed to cover a standard round or octagon junction box. The junction box must be securely mounted to the structure of the building.
- Open the end link on the CHAIN (14) and attach the loop on the FIXTURE ASSEMBLY (18), hang the FIXTURE ASSEMBLY (18) on the CHAIN (14) at your desired height, and remove excess CHAIN (14).
- Feed the wire through the CHAIN (14), CANOPY (11), insert the MALE CONNECTOR (10) from the fixture assembly into the FEMALE CONNECTOR (9) from DRIVER (8), then hide the excess wire in the CANOPY (11).
- 7. Open the top link on the CHAIN (14), and Hang the FIXTURE ASSEMBLY (18) to the hook of the CANOPY(11).
- 8. Attach the Ground wire (Green) to the ground inside the junction box (Generally green or bar copper wire) or the GROUND SCREW (3) on the MOUNTING PLATE (1). **NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!**
- 9. Connect the white fixture lead to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUT) (4). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
- 10. Connect the black fixture leads to the hot (Generally black) wire in the junction box. Fasten the joined wires same as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!



### LINDLEY 1938, 1955 INSTALLATION INSTRUCTIONS


# **FIXTURE INSTALLATION**

- 11. Push the wires back into the junction Box, Lift the CANOPY (11) and FIXTURE ASSEMBLY (18) up and secure with the HEX NUTS (12)
- 12. Lift up the CAP (20) to the CANOPY (11) and secure with the FINIAL (13)
- 13. Attach the Glass to the FIXTURE ASSEMBLY and secure with the BALL NUT (16) putting a PLASTIC RING (17) Between each BALL NUT
- 14. Restore power to the outles at the breaker or fuse box

ITEM	DESCRIPTION	PART NUMBER
1	MOUNTING PLATE	HDW-001955
2	MOUNTING SCREW	HDW-001955
3	GROUND SCREW	HDW-001955
4	WIRE NUT	HDW-001955
5	CABLE CLAMP	HDW-001955
6	SAFETY CABLE	CBL-001955-S
7	NIPPLE	HDW-001955
8	DRIVER	POW-TLM90W-2.1-42
9	MALE CONNECTOR	CON-001955-M
10	FEMALE CONNECTOR	CON-001955-F
11	CANOPY	CPY-001955
12	HEX NUT	HDW-001955
13	FINIAL	HDW-001955
14	CHAIN	CHN-001955
15	GLASS	GLS-001904
16	BALL NUT ASSEMBLY	MIS-001955
17	PLASTIC RING	RNG-001955
18	FIXTURE ASSEMBLY	FAS-001955
19	CANOPY MOUNTING SCREWS	HDW-001955
20	CAP	CAP-001955



LINDLEY 1938, 1955 INSTALLATION INSTRUCTIONS

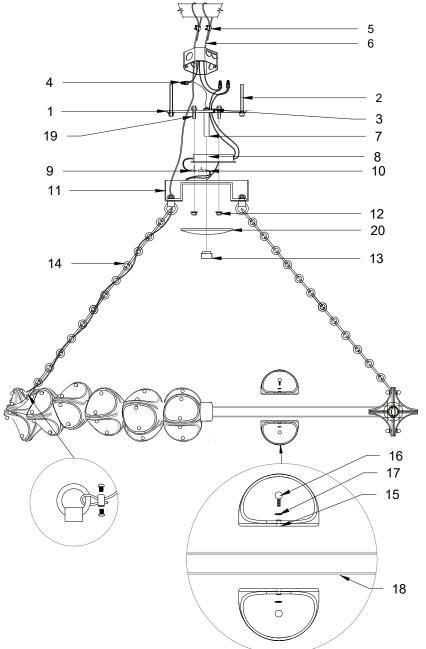

# ATTENTION PRUDENCE

- DÉBRANCHEZ L'ALIMENTATION AVANT DE REMPLIR OU DE CÂBLER LE LUMINAIRE. LISEZ COMPLÈTEMENT TOUTES LES INSTRUCTIONS AVANT DE COMMENCER L'INSTALLATION
- POUR ÉVITER LE RISQUE D'INCENDIE OU D'ÉLECTROCUTION, LE LUMINAIRE DOIT ÊTRE INSTALLÉ CONFORMÉMENT À TOUS LES CODES ÉLECTRIQUES/DE CONSTRUCTION NATIONAUX ET LOCAUX APPLICABLES. L'INSTALLATION ET L'ENTRETIEN DE CET APPAREIL DOIVENT ÊTRE EFFECTUÉS PAR UN ÉLECTRICIEN AGRÉÉ OU UN TECHNICIEN CERTIFIÉ FORMÉ EN USINE.
- CALIFORNIE PROP 65 : CET APPAREIL D'ÉCLAIRAGE CONTIENT DES PRODUITS CHIMIQUES CONNUS PAR L'ÉTAT DE CALIFORNIE POUR PROVOQUER LE CANCER, DES MALADIES CONGÉNITALES ET/OU D'AUTRES DOMMAGES À LA REPRODUCTION. LAVER LES MAINS APRÈS UTILISATION.
- RETIRER LE LUMINAIRE, LES PIÈCES ET LE(S) SAC(S) DE PIÈCES DU CARTON. AVANT DE JETER LE CARTON, VÉRIFIEZ DOUBLE POUR VOUS ASSURER QUE TOUTES LES PIÈCES SONT TROUVÉES. INSPECTER LE LUMINAIRE AVANT L'INSTALLATION POUR TOUT DOMMAGE AU LUMINAIRE.
- GRADATION: LE LUMINAIRE PEUT ÊTRE CONTRLÉ PAR UN DISPOSITIF DE GRADATION MURALE. UTILISER
  UNIQUEMENT UN GRADATEUR TRIAC/ÉLECTRONIQUE. ASSUREZ-VOUS QUE LE CARTON EST MARQUÉ
  POUR UNE UTILISATION AVEC UNE SOURCE DE LUMIÈRE FLUORESCENTE À INCANDESCENTE COMPACTE
  UNIQUEMENT. CEUX-CI PEUVENT ÊTRE FOURNIS PAR VOTRE DISTRIBUTEUR ÉLECTRIQUE LOCAL,
  CENTRE À DOMICILE OU MAGASIN DE QUINCAILLERIE.
- VEUILLEZ NETTOYER UNIQUEMENT AVEC UN CHIFFON DOUX ET SEC! N'UTILISEZ PAS DE NETTOYANTS

### **FIXTURE INSTALLATION**

- 1. Remove the outlet box from the approved support, and install additional support bracket (Not included)
- Slide crimp type CABLE CLAMP (5) onto the SAFETY CABLE (6).
   Feed the SAFETY CABLE (6) down through one of the holes in the top of the outlet box.
   Loop the SAFETY CABLE (6) over the approved support.
   Feed the SAFETY CABLE (6) back through the top of the box and the CABLE CLAMP (5).

Using the crimping tool, tightly crimp the CABLE CLAMP (5) to lock the SAFETY CABLE (6) in position.

- 3. Reinstall the outlet box to the approved support.
- 4. Attach the MOUNTING PLATE (1) onto existing structure using the MOUNTING SCREWS (2). The fixture must be supported Independtly from the outlet box. This fixture is designed to cover a standard round or octagon junction box. The junction box must be securely mounted to the structure of the building.
- Open the end link on the CHAIN (14) and attach the loop on the FIXTURE ASSEMBLY (18), hang the FIXTURE ASSEMBLY (18) on the CHAIN (14) at your desired height, and remove excess CHAIN (14).
- Feed the wire through the CHAIN (14), CANOPY (11), insert the MALE CONNECTOR (10) from the fixture assembly into the FEMALE CONNECTOR (9) from DRIVER (8), then hide the excess wire in the CANOPY (11).
- 7. Open the top link on the CHAIN (14), and Hang the FIXTURE ASSEMBLY (18) to the hook of the CANOPY(11).
- Attach the Ground wire (Green) to the ground inside the junction box (Generally green or bar copper wire) or the GROUND SCREW (3) on the MOUNTING PLATE (1). NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- 9. Connect the white fixture lead to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUT) (4). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
- Connect the black fixture leads to the hot (Generally black) wire in the junction box. Fasten the joined wires same as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!