



ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:


7/16 in. Socket Wrench, 7/16 in. Wrench,
Drill with 5/16 in. Drill Bit

BOLT KIT:

1/4-20 X 5/8 in. Carriage Bolt	QTY 21
1/4-20 Nylon Lock Nut	QTY 33
1/4-20 X 1-1/4 in. Hex Head Bolt	QTY 12
1/4 in. Flat Washer	QTY 8


1 Assemble Base Frame

Arrange frame, utilizing etched L & R indicators for left and right pieces. Secure pieces together with 1/4-20 X 5/8 in. Carriage Bolts and 1/4-20 Nylon Lock Nuts.

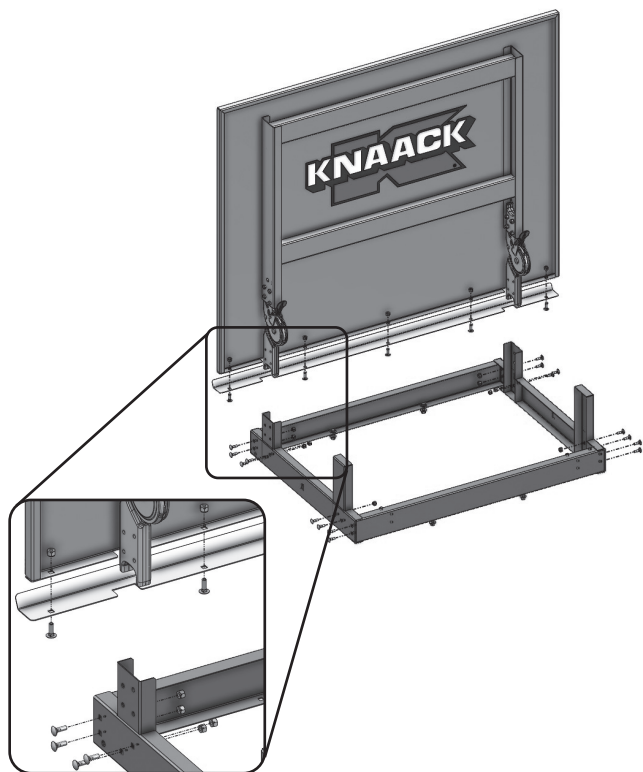


2 Attach Worktop

Slide hinge assembly into open topped bracket, and secure with 1/4-20 X 1-1/4 in. Hex Head Bolts and 1/4-20 Nylon Lock Nuts.

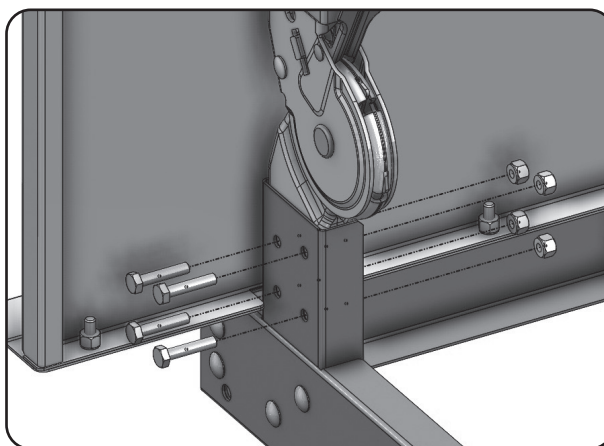

3 Secure Worktop

Set assembled PLANZBOARD on top of Utility Cart. Drill mounting holes in cart using 5/16 in. drill bit. Secure to cart using 1/4-20 X 1-1/4 in. Hex Head Bolts, Flat Washers, and 1/4-20 Nylon Lock Nuts.

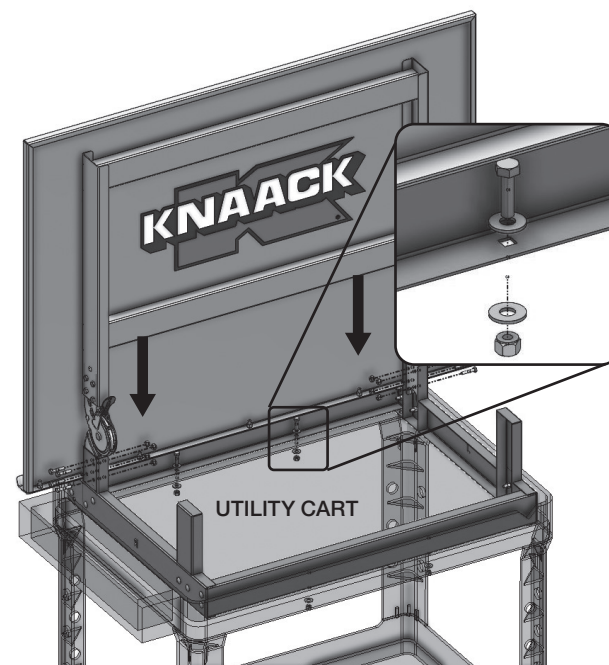

CAUTION

CART MAY TIP IF NOT ON A LEVEL SURFACE. FOLLOW ALL SAFETY PROCEDURES OF CART MANUFACTURER.