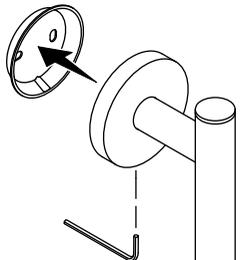
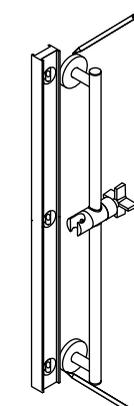
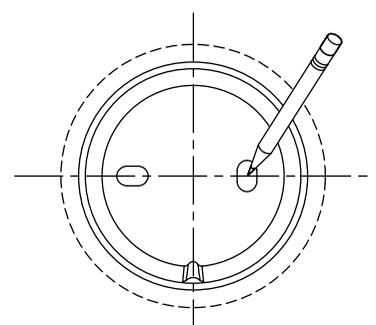
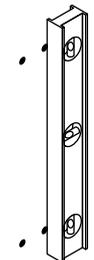
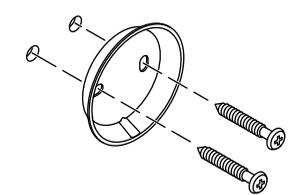
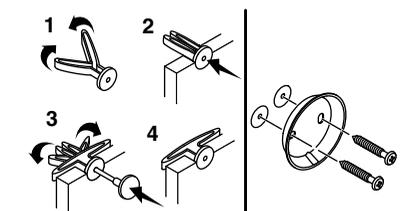
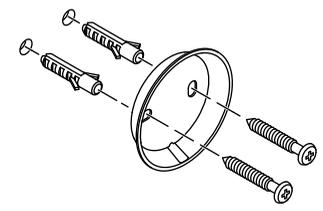
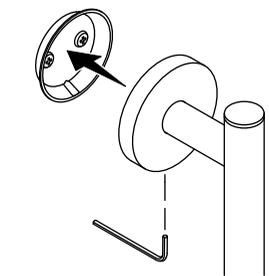
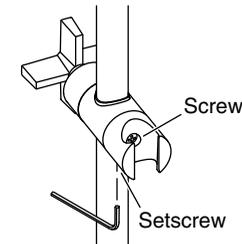


<p>Record your model number.</p>	<p>⚠ CAUTION: Risk of personal injury. Do not install where the product might be used as a grab or support bar.</p>	<p>Important Information These products should be located and mounted to a wall stud. While it is possible to mount to any surface, a stud-mounted product will yield the best results.</p>	<p>1 For All Installations: Loosen the setscrews and remove the wall plates from the sidebar.</p> 	<p>2 Position and verify that the sidebar is plumb. Trace the top and bottom mount locations.</p> 	<p>3 Center the wall plates within the outlines and mark the hole locations.</p> 
<p>4 Verify that the top and bottom marks are plumb. Adjust as necessary.</p> 	<p>5 Drywall Into Studs: Drill 1/8" holes. Secure each wall plate with the notch at the bottom.</p> 	<p>Drywall Between Studs: Drill 5/16" holes. Use the provided pin to install the drywall anchors. Secure each wall plate with the notch at the bottom.</p> 	<p>Ceramic Tile: Drill 1/4" holes. Insert ceramic anchors. Secure each wall plate with the notch at the bottom.</p> 	<p>6 Position the sidebar on the wall plates. Tighten the setscrews.</p> 	<p>To Adjust and Tighten the Bracket To adjust the bracket, loosen the handle and move to the desired location. If the bracket will not stay in place, loosen the setscrew, tighten the screw, and retighten the setscrew.</p> 

Questions? Problems? For additional assistance, please contact KALLISTA's Customer Service Department at 1-888-4-KALLISTA (1-888-452-5547) or kallista.com.