

# ROHL

Authentic Luxury for Kitchen and Bath®

[www.ferguson.com](http://www.ferguson.com)



## WELLSFORD™ WALL MOUNT DOUBLE ROBE HOOK

Traditional Wellsford™

**WE7D**

### FEATURES


- Solid construction
- Mounting hardware included

### COLORS/FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel

### WARRANTY


- Limited Lifetime

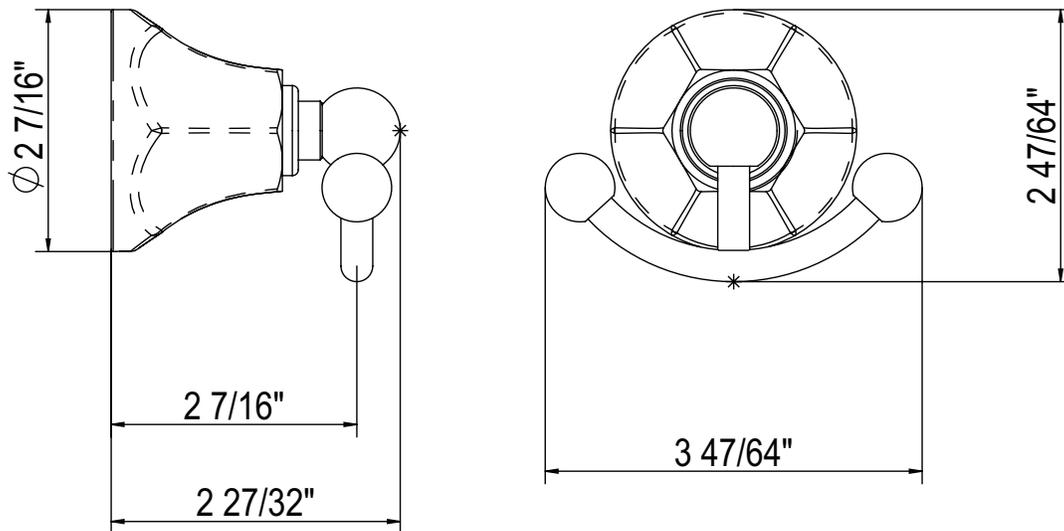


## Installation Instructions

### ROHL WELLSFORD ACCESSORIES INSTALLATION INSTRUCTIONS


#### DOUBLE ROBE HOOK WE7DAPC, WE7DPN, WE7DSTN

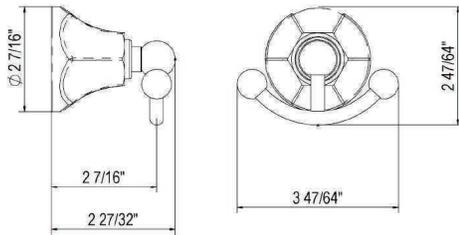


#### 24 INCH TOWEL BAR WE1/24APC, WE1/24PN, WE1/24TN

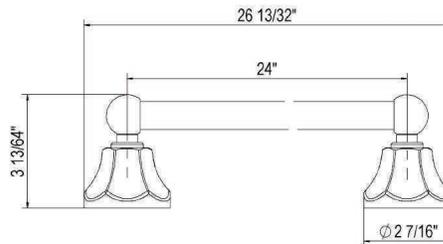

#### TOILET PAPER HOLDER WE8APC, WE8PN, WE8STN

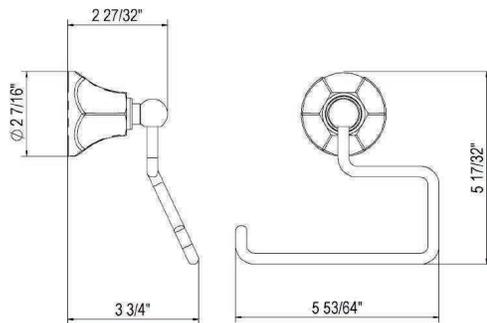

#### HAND TOWEL HOLDER WE4APC, WE4PN, WE4STN

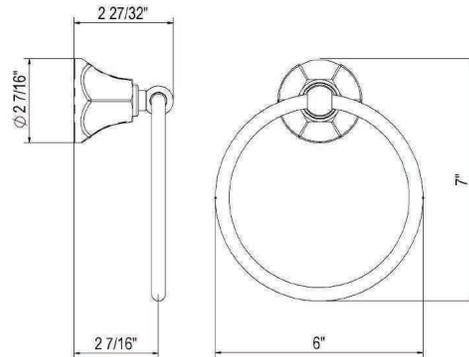


Please leave instructions with the home owner once installed.

#41927 01/14


## Installation Instructions

### DOUBLE ROBE HOOK


1	ANCHORS SLEEVE
2	STEEL MOUNTING PLATE
3	SELF-TAPPING SCREW
4	ACCESSORY
5	GRUB SCREW - M5

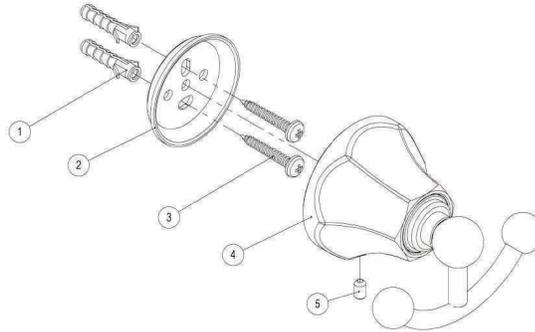

### TOILET PAPER HOLDER

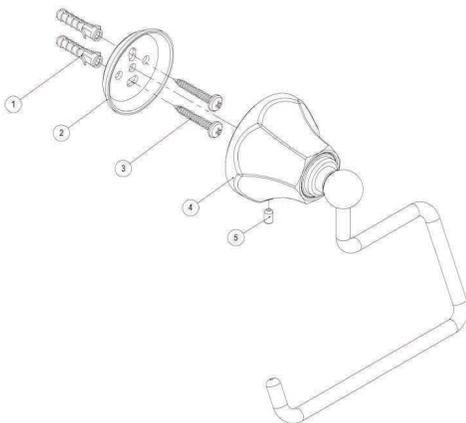

### HAND TOWEL HOLDER

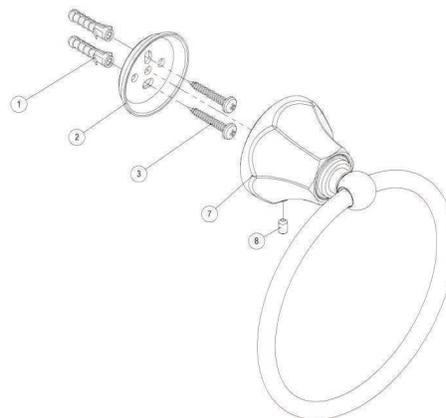

## Robe Hook, Toilet Paper Holder and Hand Towel Installation Instructions


Anchors, pillars and screws are loose in the box.  
#4 to #11 are assembled out of the box.

Place the steel mounting plate #2 in the required position and mark out for fixings using the mounting plate as a template.

- Install the steel mounting plate #2 to wall using the self tapping screws #3.
  - Anchor sleeves #1 are provided for masonry walls.
  - Drill pilot holes, if required.
- Install the accessory, position and tighten the grub screws #8, as shown.

## Installation Instructions

### 24INCH TOWEL BAR

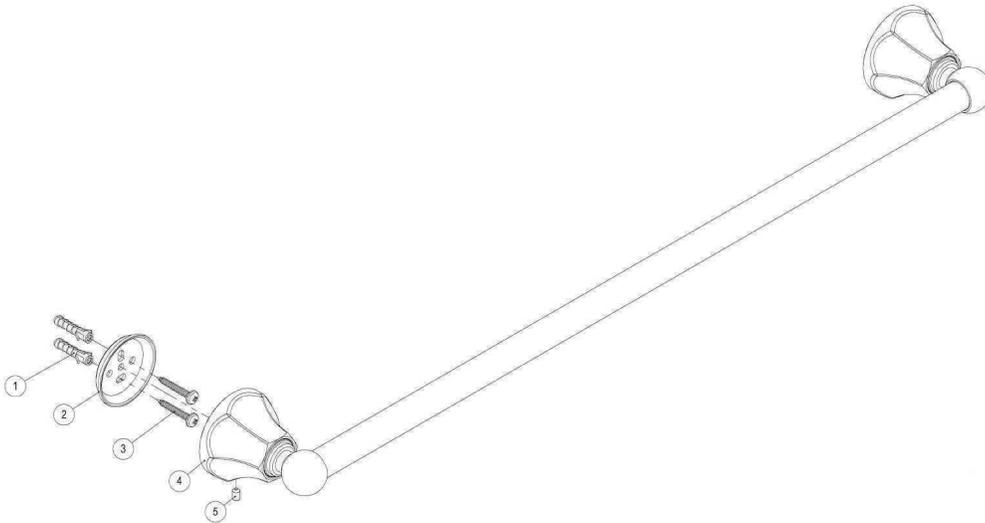

### 24 Inch Towel Bar Installation Instructions

Anchors, pillars and screws are loose in the box.

#4 to #11 are assembled out of the box.

1. Place the steel mounting plates #2 in the required position and mark out for fixings using the mounting plates as a template at **24 inch centers**.
  - a. Note: **The mounting plates must be level.**
2. Install the 2 steel mounting plates #2 to wall using the self tapping screws #3.
  - a. Anchor sleeves #1 are provided for masonry walls.
  - b. Drill pilot holes, if required.
3. Install the towel bar and tighten the grub screws #8, as shown.

# ROHL

Authentic Luxury for Kitchen and Bath®

[www.ferguson.com](http://www.ferguson.com)

## Installation Instructions

**Care and Maintenance:** After use, wipe down with a soft, dry cloth.

For all chrome plated surfaces clean this product with warm soapy water and then dry with a dry soft cloth.

Nickel plated, satin and Inca brass finishes should be cleaned with a soft cloth and warm water. Then dry with a dry soft cloth.

Do not use cream cleaners or cleaning agents containing a corrosive acid or scouring agent including: Softscrub, Comet, Ajax and Bonami, as these may damage the surface of the faucet.

Do not use any spray cleaners with ammonia or alcohol like Windex, 409 or Fantastik.

Any use of unsuitable cleaning agents causing damage to the surface will not be covered by the warranty.

**WARRANTY:** Warranty is limited lifetime. See ROHL website for details. ([www.rohlhome.com](http://www.rohlhome.com)).

A basic in-line filter system is required for the house to protect any debris from entering the water supply line to the house (i.e. due to construction or service work on the street water main).