

V11 Series Three-Way Solenoid Air Valve

Application

V11 three-way valves are for use in applications where the operation of a pneumatically operated device is dependent upon an electrical circuit.

The valves direct supply air to the pneumatic device when the coil is energized or deenergized, depending on the supply and exhaust air connections.

Specifications

pecinications		
	V11HAA-100	110/120 V, 50/60 Hz
Product Number	V11HBA-100	220/240 V, 50/60 Hz
	V11HBA-115	110/120 V, 50/60 Hz; included internal grounding lug
	V11HCA-100	208 V, 50/60 Hz
	V11HDA-100	440/480 V, 50/60 Hz
	V11HFA-100	277 V, 50/60 Hz
	V11HGA-100	24 V, 50/60 Hz
	V11PNA-105	24 VDC
Air Connections		1/4" Barb connections in common port and normally closed. Normally open port is 1/8" FNPT.
Ambient Temperatures	Alternating Current	Minimum 32° F (0° C)
	Models	Maximum 140° F (60° C)
	Direct Current Models	Minimum 32° F (0° C)
	woders	Maximum 104° F (40° C) 7/8" Diameter
Conduit Opening	With Dist	.,, =
Finish	Valve Body	Dull Gray (Iridate)
	Cover and Case	Gray Baked Enamel
Material	Valve Body	Die Cast Aluminum
	Cover and Case	Cold Rolled Steel
Maximum Pressure Rating		30 PSIG (207 kPa)
Operating Pressure (All Three Ports)		0 to 20 PSIG (0 to 138 kPa)
Packaging		Bulk pack normally supplied to OEMs. Individual pack available at extra cost.
Power Consumption	Alternating Current Models	6 Watts
	24 VDC Models	9 Watts
	115, 230 VDC Models	8 Watts
Pressure and Flow Ratings		With a 15 PSIG (103 kPa) inlet and 0 PSIG (0kPa) outlet. The valve will pass 1.5 cfm (2592 SCIM) (0.71 l/s) of air from the common to the normally closed connections (when energized) or from the common to the normally open connection (when de-energized).
Shipping weights	Bulk Pack-60 Units Per Carton	55 lb (24.9 kg)
	Individual Pack 56 Units Per Carton	50 lb (22.7 kg)
Wiring Connections		18" Wire Leads

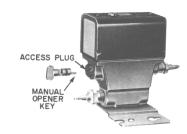


Fig. 1 -- Series V11 Three-Way Solenoid Valve with optional manual opener key.

All Series V11 air valves are designed for use **only** as operating devices. Where system closure, improper flow, or loss of pressure due to valve failure can result in personal injury and/or loss of property, it is recommended that additional devices be added to indicate proper system operation, (for example, blade position indication on the damper blades in smoke damper applications).

Features

- · Positive air seal.
- Some models may be manually operated for testing and checkout.
- Compact and lightweight.
- Can be mounted in any position.

General Description

The solenoid air valve is furnished for two-position action and has three identified connections: a normally open (N.O.) port with 1/8 in. FNPT connection, a normally closed (N.C.) port, and a common (COM) port with 1/4 in. barbed fittings.

The ports in the die cast aluminum valve body have No. 60 mesh (217 micron openings) monel screens to avoid allowing foreign material from entering the valve ports to give positive air seal.

In a typical application, supply air is connected to the normally closed port and the control device is connected to the common port. When the solenoid is energized, a magnetic field activates a plunger-type valve stem and supply air is directed to the control device. When the solenoid is de-energized, the supply air connection is closed and the normally open port exhausts air from the control device. Reverse action may be obtained by connecting the supply air to the normally open port, using the normally closed port for exhaust. (See Fig. 2.)

Manual Operation

The V11 may be manually operated independently of the electrical circuit. This makes it possible to actuate the pneumatic circuit for testing or checkout without closing the electrical circuit. To manually operate, remove the access plug and insert the key shown in Fig. 1. The manual opener key is not supplied as standard. Part No. Y99AA-4 key may be supplied separately at additional cost, when specified.


Repairs and Replacement

Field repairs must not be made except for coil replacement. The replacement coil is supplied with a cover and nameplate. For a replacement air valve or replacement coil, contact the nearest Johnson Controls wholesaler.

Ordering Information

To order, specify:

- 1. Complete Product Number.
- If complete Product Number is not available, specify Type Number, voltage and other specifications not standard.
- Manual opener key Part Number Y99AA-4, if required.







Fig. 2 — Typical application diagrams.

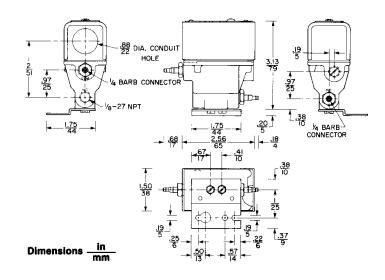

U.L. Guide No. Y10Z File MH3536 (Except V11PNA-105 Model)

Performance specifications appearing herein are nominal and are subject to accepted manufacturing tolerances and application variables.

Building Efficiency

507 E. Michigan Street, Milwaukee, WI 53202

Johnson

Metasys® and Johnson Controls® are registered trademarks of Johnson Controls, Inc. All other marks herein are the marks of their respective owners. © 2014 Johnson Controls, Inc.