

Central Brass®

The Easy Choice

TWO-VALVE BATH FILLER, SHOWER & BATH & SHOWER Cast Brass Body



8" Centers, Direct Sweat, Compression Stems, Replaceable Seats

0805 Series	Bath Valve only
0808 Series	Bath Filler Valve with Spout
0806 Series	Bath Filler Valve only with Twin Ell & 3/4 IPS Diverter
0807 Series	Bath & Shower Valve same as 0806 with Spout, Shower Head, Arm & Flange
0826 Series	Shower Valve with Shower Head, Arm & Flange
0886 Series	Bath Filler Valve with Transfer Valve & Slip Fit Diverter Spout
0887 Series	Bath & Shower Valve same as 0886 with Spout, Shower Head , Arm & Flange
0895 Series	Bath Valve only with Transfer Valve
0896 Series	Bath Valve with Transfer Valve & 1/2 IPS Diverter Spout
0897 Series	Shower Valve same as 0896 with Shower Head , Arm & Flange


8" Centers, Direct Sweat, Ceramic Stem Assemblies

80808 Series	Bath Valve with 1/2 IPS Spout
80826 Series	Shower Valve with Shower Head, Arm & Flange
80897 Series	Bath Valve with 1/2 IPS Diverter Spout, Shower Head, Arm & Flange


CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127


Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

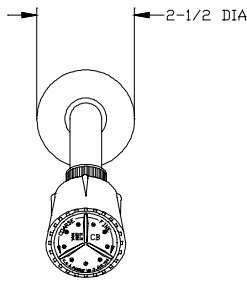

INSTALLATION INSTRUCTIONS

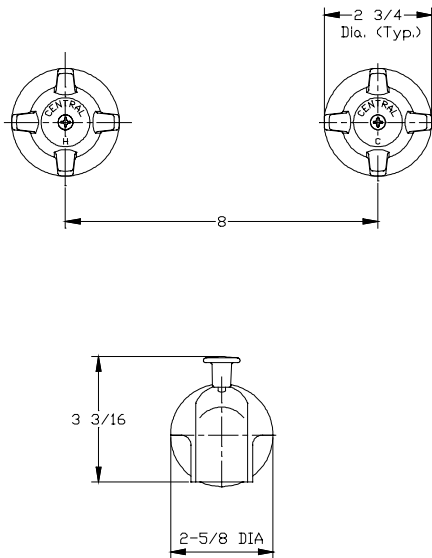

NOTE: Flush waterlines to remove debris before installation.

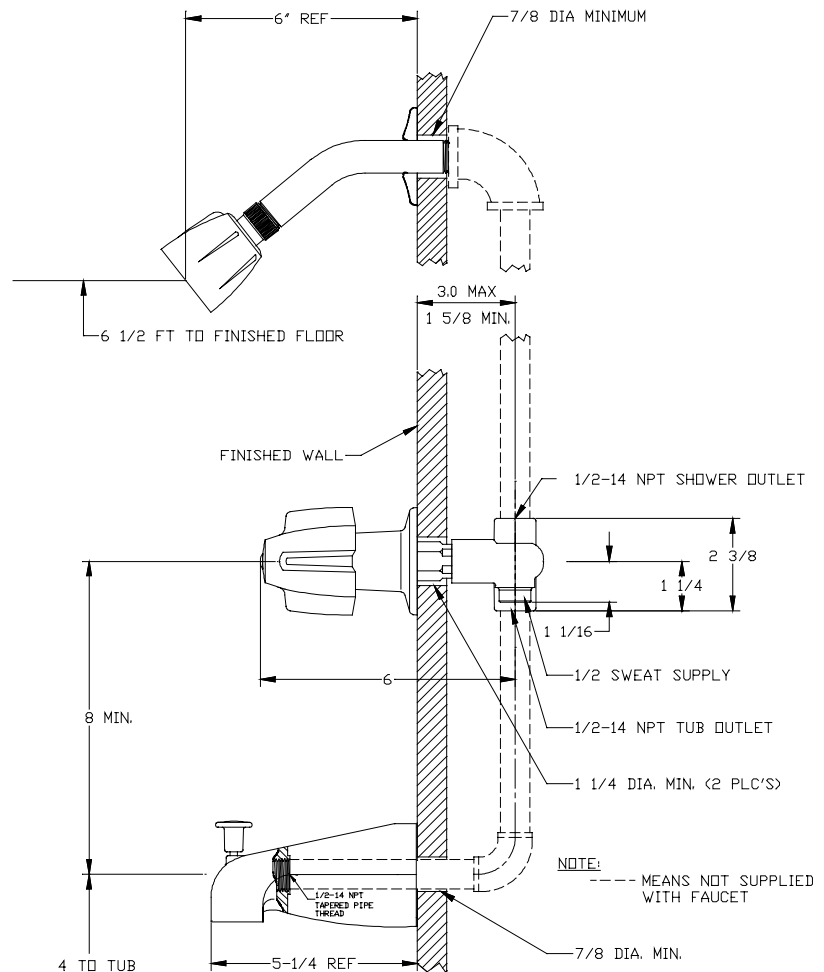

3/4 IPS Diverter Spout

Roughing In Instructions

1. Locate and install valve assembly as shown.
2. Connect hot and cold supply lines.
3. Fabricate and install line for showerhead and spout.
4. Anchor fittings to studs in proper location.
5. Test for operation and leakage before finishing wall.
6. Install protectors on all exposed fittings.

Finishing Instructions

1. Remove fitting protectors.
2. Apply putty as required to prevent water damage to wall.
3. Install finished trim.
4. Test for operation and leakage.

CAUTION for

Compression Stem Assemblies

Soldered connections should be made with valve stems OPEN. DO NOT overheat. Let valve assembly cool after connection is made before closing valve stems

WARNING for

Ceramic Stem Assemblies

Remove hot and cold stem units before soldering. Failure to do so will result in damage to ceramic stem units. Cool valve assembly after solder connections are completed before reinstalling ceramic stem assemblies.

CENTRAL BRASS MFG CO


2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220


Fax: 216-883-0875

Email: sales @CentralBrass.com

1/2 IPS Spout

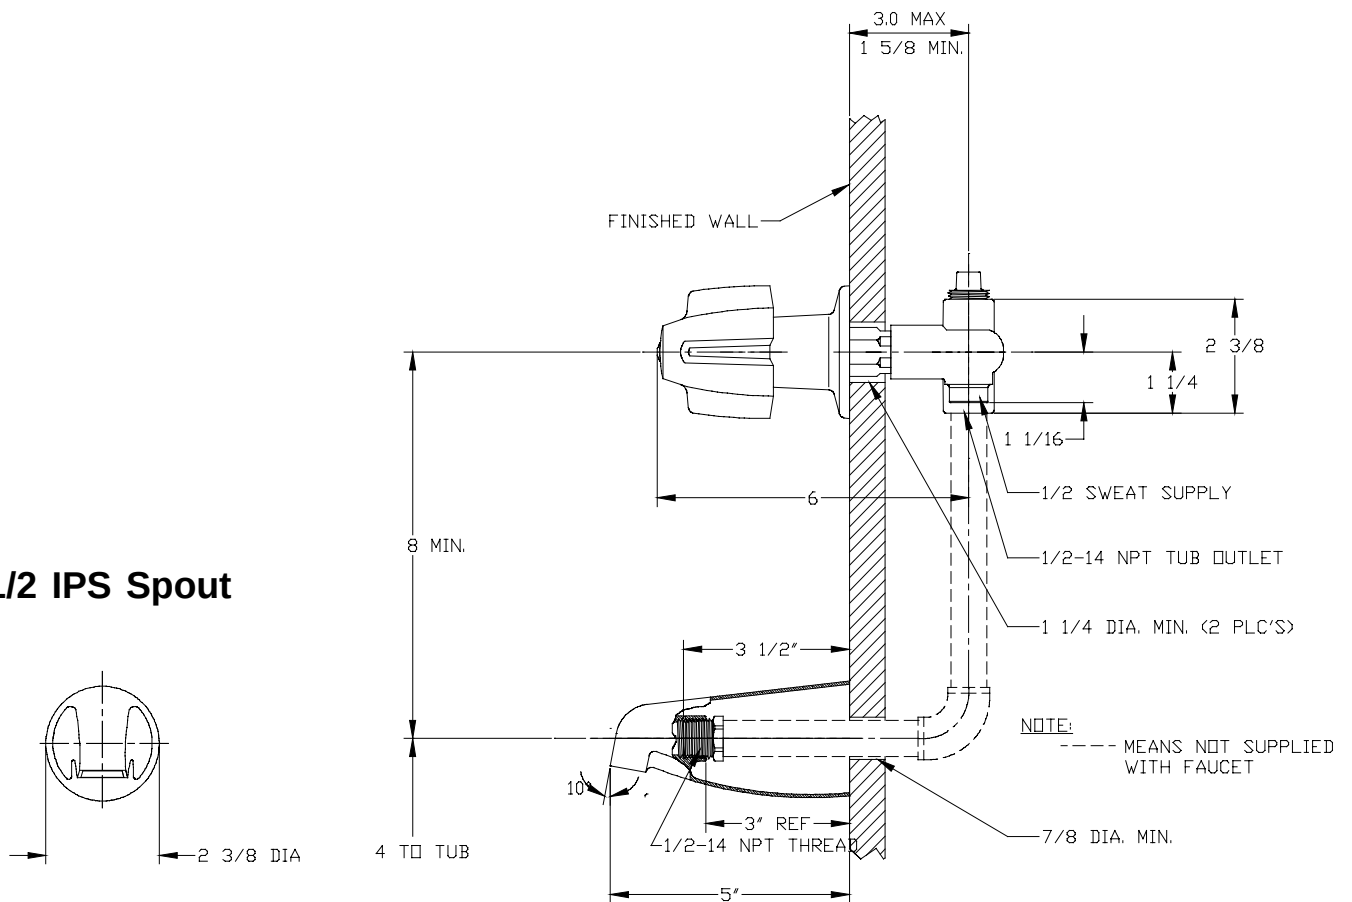

80 - Silver Crown Handle Suffix

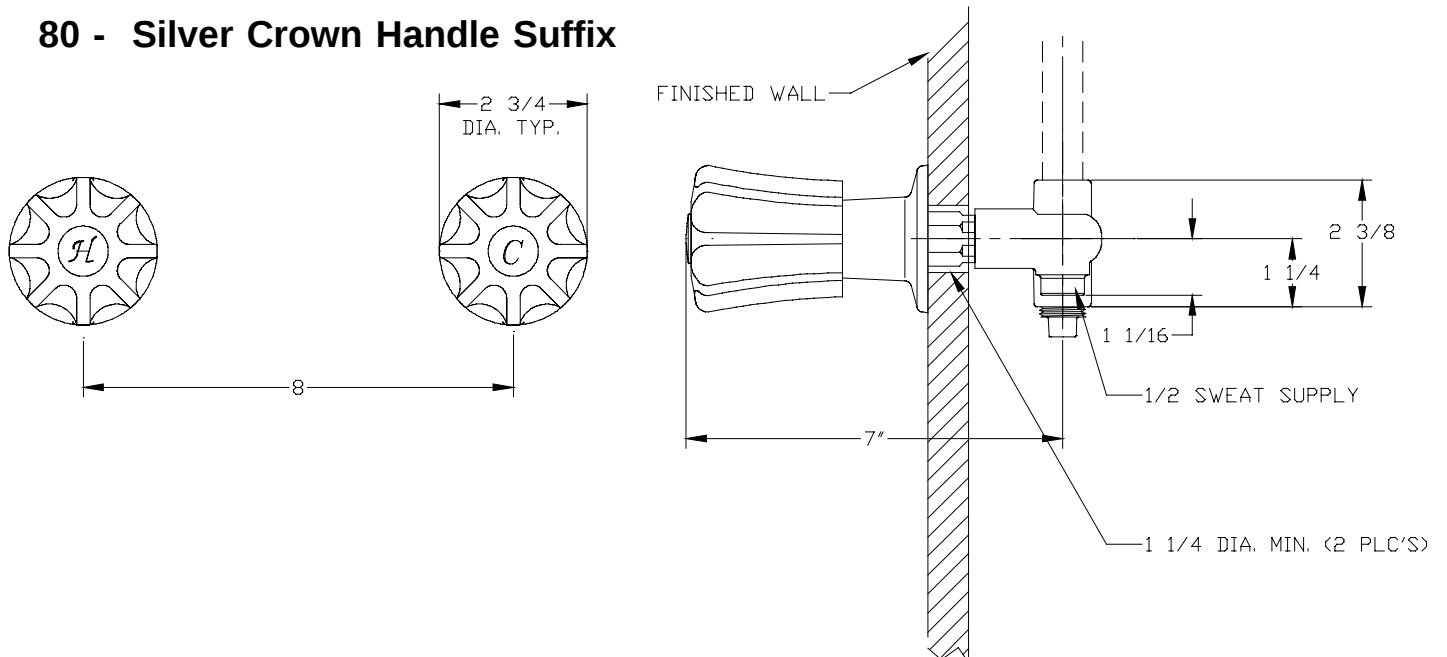


CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875

Email: sales@CentralBrass.com

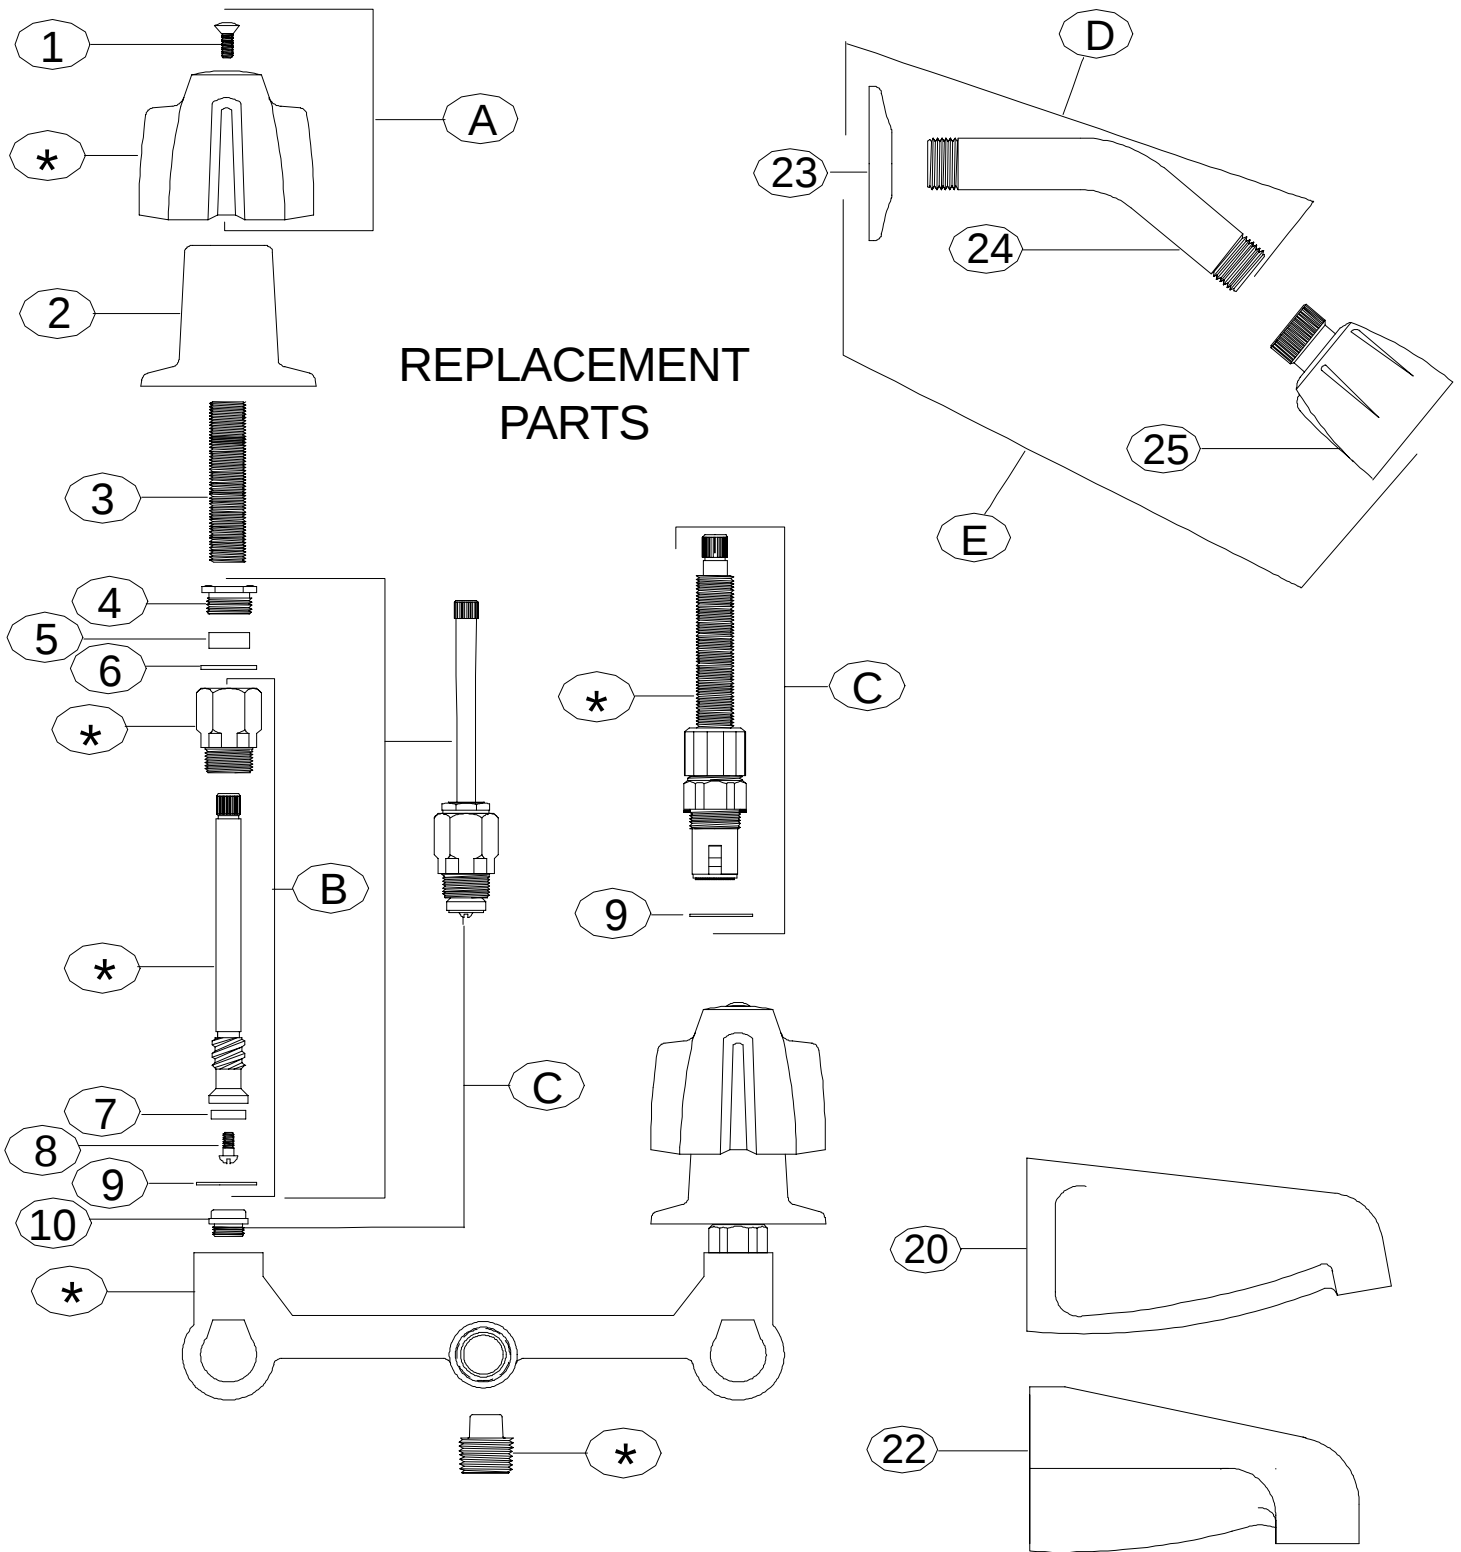

* These items are not offered individually and must be purchased as a group or unit. Please contact Central Brass for more information.

CENTRAL BRASS MFG CO
 2950 East 55th Street, Cleveland, Ohio 44127
 Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

REPLACEMENT PARTS

#	Part #	Description
A	G-508-C	Large Canopy Handle indexed C with Screw (X107-F)
A	G-508-H	Large Canopy Handle indexed H with Screw (X107-F)
B	G-1549-CT	Stem & Bonnet Group with Seat Washer (X901-WN), Screw (X104) & Gasket (X1028-Y) for items 0805, 0808 & 0826
C	K-3-CT	Complete Stem Assembly with Gasket (X1028-Y) & Bronze Seat (X263-BC) for items 0805, 0808 & 0826
C	K-351-C	Ceramic-disc Stem Cartridge Cold with Gasket (X1028-Y) for items 80808 & 80826
D	3007-6	6-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
E	G-3113-6	Shower Head (3034-1/2-02), 6-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
1	X107-F	Handle Screw (25 pcs per pack)
2	521-B	Escutcheon
3	X269-29/16	2 ⁹ / ₁₆ Long Nipple (10 pcs per pack)
4	X765-TA	Packing Nut (6 pcs per pack) for items 0805, 0808 & 0826
5	X814-BA	Packing (10 pcs per pack) for items 0805, 0808 & 0826
6	X4-L	Packing Washer (6 pcs per pack) for items 0805, 0808 & 0826
7	X901-WNN	Seat Washer (25 pcs per pack) for items 0805, 0808 & 0826
8	X104	Seat Washer Screw (25 pcs per pack) for items 0805, 0808 & 0826
9	X1028-Y	Gasket (25 pcs per pack)
10	XPF-263-B	Replacement Seat (4 pcs per pack) for items 0805, 0808 & 0826
20	3145-D	½ IPS Brass Spout for items 0808 & 80808 only
22	3154-Z	Zamak Spout for items 0808-Z & 80808-Z only
23	X1035-SS	Shower Arm Flange (10 pcs per pack)
24	714-WT-02	6-inch Shower Arm
25	3034-1/2-02	Shower Head 2.5 GPM

- If faucet has round handles (G-508) or (80 suffix) , use two Cold stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

OPTIONS & REPLACEMENT PARTS

Suffix Number	Replaces Item #	Part Number	Description
80	A	K-505-1C	Silver Crown Acrylic Handles with Screw (X126-625B) & indexed C metal button (G-503-M-02)
		K-505-1H	Silver Crown Acrylic Handles with Screw (X126-625B) & indexed H metal button (G-503-M-02)
		X126-625B	Handle Screw for Acrylic Handles suffix 80 (6 pcs per pack)
		G-503-M-02	Metal indexed buttons C & H for Acrylic Handles suffix 80 (one pair per pack)
	10	X263-BC	Bronze Replacement Seat (10 pcs per pack) for items 0805, 0808 & 0826
	D	3007-8	8-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
	E	G-3113-8	Shower Head (3034-1/2-02), 8-inch Shower Arm (PF-714-WT8) & Flange (X1035-SS)
		G-1548-ET	Stem Extension with Screw (X105-F)
		X105-F	Screw for stem extension (4 pcs per pack)
Prefix Number	Replaces Item #	Part Number	Description
8	C	K-351-C	Ceramic-disc Stem Cartridge Cold with Gasket (X1028-Y)
8	C	K-351-H	Ceramic-disc Stem Cartridge Hot with Gasket (X1028-Y)
		Only for	80808 & 80826





- If faucet has round handles (G-508) or (80 suffix) , use two Cold stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

CENTRAL BRASS MAINTENANCE INSTRUCTIONS

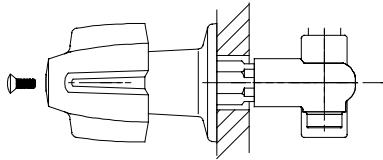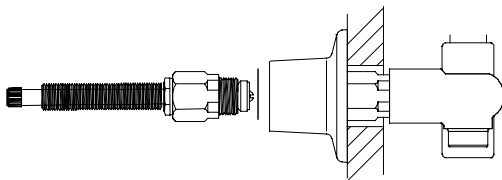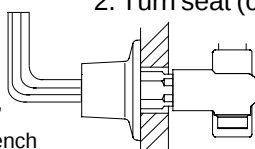DISASSEMBLY		REPLACEMENT	
1	REMOVE HANDLE 1. Turn off water supply 2. Remove the handle screw & handle 3. Unscrew the escutcheon 	4	Use Only Central Replacement Parts K-3-CT  K-351-C 
2	REMOVE STEM ASSEMBLY 1. Use adjustable wrench. 2. Turn stem to open position 3. Unscrew counterclockwise. Remove stem unit. 		
3	REMOVE SEAT 1. Insert 5/16" allen wrench in seat. 2. Turn seat (counterclockwise) to remove.  Use 5/16" Allen Wrench For Compression stems only		NOTE: If replacing compression units with ceramic units make sure PF-263-B seat is removed from body before installing stem units. Replace components In reverse order of disassembly

- If faucet has round handles (70 or 80 suffixes) , use two Hot stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

CENTRAL BRASS MFG CO
 2950 East 55th Street, Cleveland, Ohio 44127
 Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com