

Central Brass®

The Easy Choice

2950 East 55th St. Cleveland, Ohio 44127

Phone:(216)883-0220 Fax: (216)883-0875

www.CentralBrass.com

MODEL NOS. 0886 0887 0895

0896 0897 80897 Series



Two-Valve Bath & Shower Fitting

Direct Sweat with built-in transfer valve

Heart of Brass

Quality Castings Made in U S A

REPLACEMENT PARTS

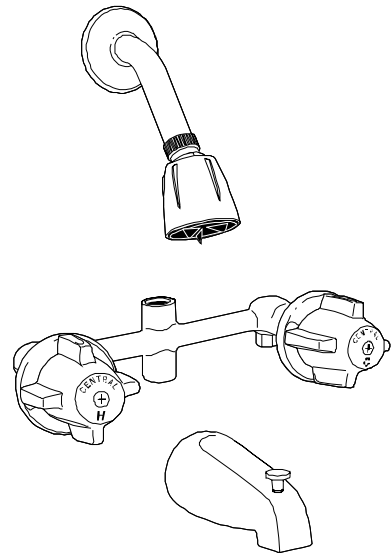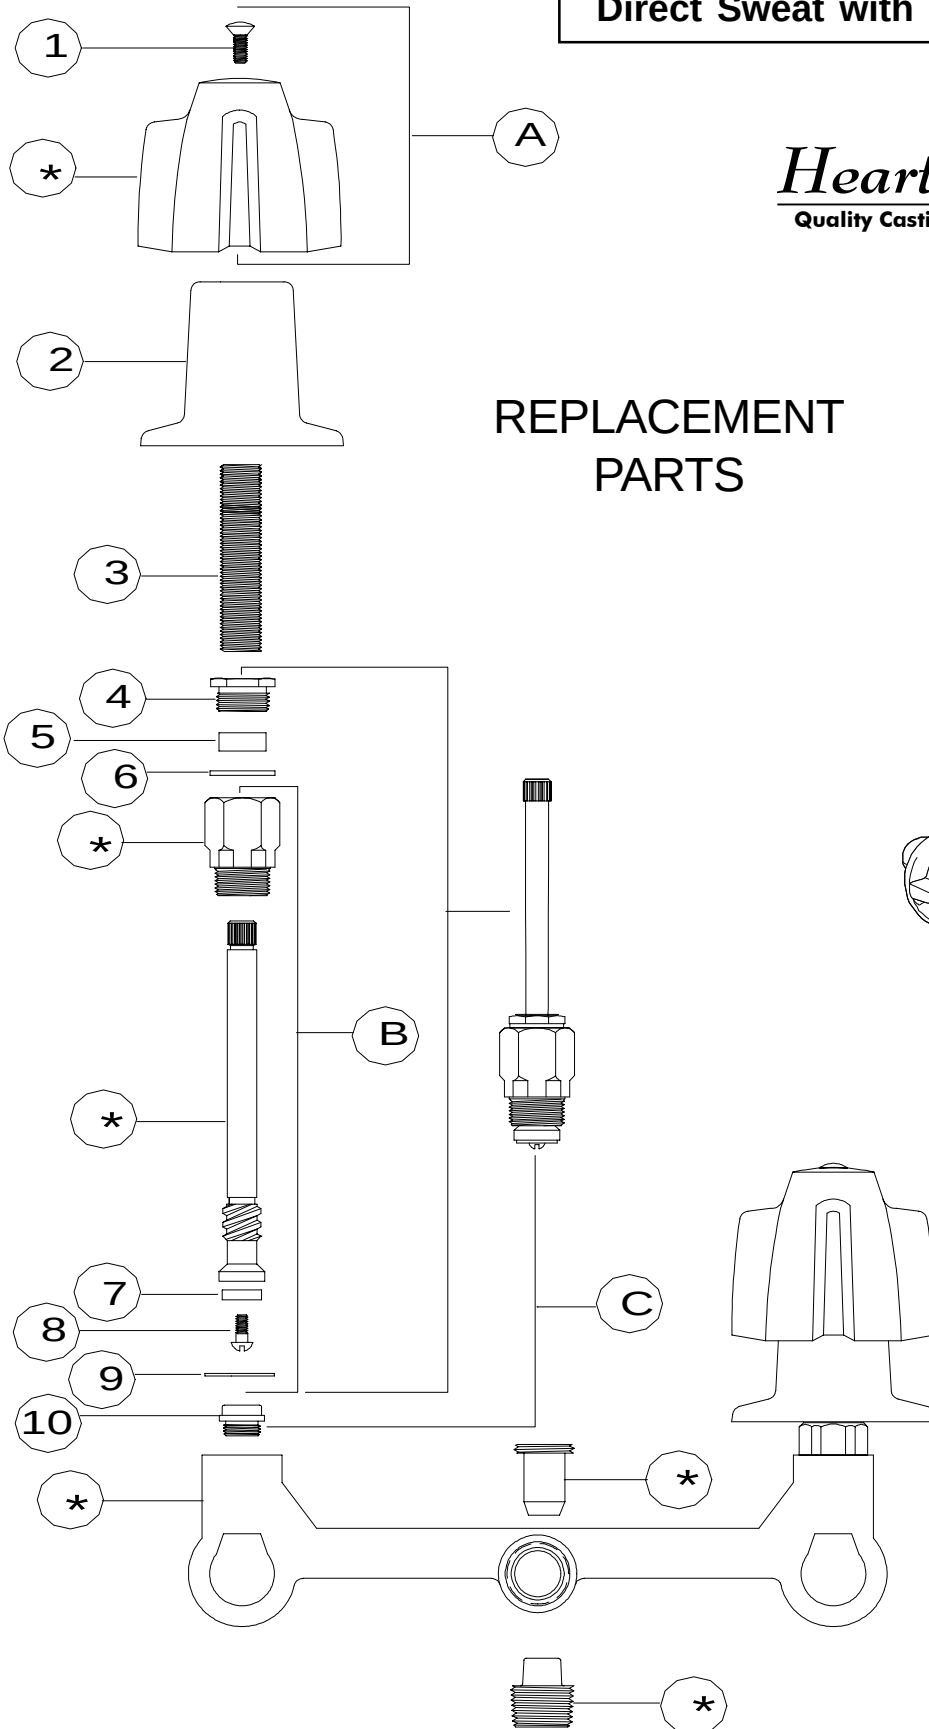

* These items are not offered individually and must be purchased as a group or unit. Please contact Central Brass for more information.

Central Brass®

The Easy Choice

2950 East 55th St. Cleveland, Ohio 44127

Phone:(216)883-0220 Fax: (216)883-0875




www.CentralBrass.com

MODEL NOS. 0886 0887 0895

0896 0897 80897 Series

Two-Valve Bath & Shower Fitting

Direct Sweat with built-in transfer valve

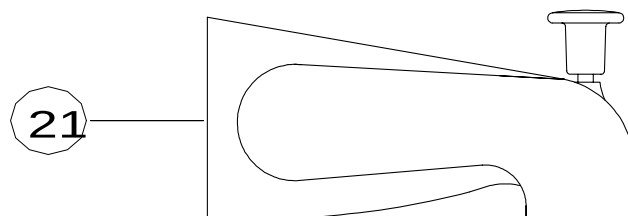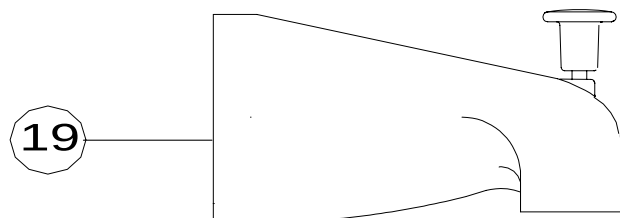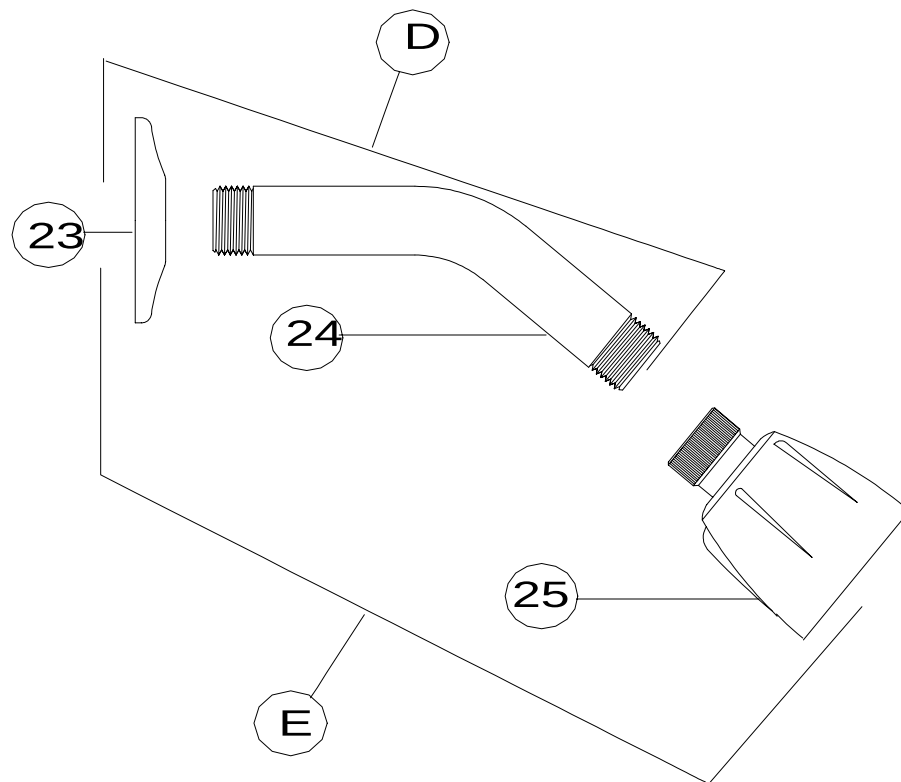

REPLACEMENT PARTS

#	Part #	Description
A	G-508-C	Large Canopy Handle indexed C with Screw (X107-F)
A	G-508-H	Large Canopy Handle indexed H with Screw (X107-F)
B	G-1549-CT	Stem & Bonnet Group with Seat Washer (X901-WN), Screw (X104) & Gasket (X1028-Y) for items 0886, 0887, 0895, 0896, 0897 only
C	K-3-CT	Complete Stem Assembly with Gasket (X1028-Y) & Bronze Seat (X263-BC) for items 0886, 0887, 0895, 0896, 0897 only
C	K-351-C	Ceramic-disc Stem Cartridge Cold with Gasket (X1028-Y) for item 80897 only
D	3007-6	6-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
E	G-3113-6	Shower Head (3034-1/2-02), 6-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
1	X107-F	Handle Screw (25 pcs per pack)
2	521-B	Escutcheon
3	X269-29/16	2 ⁹ / ₁₆ Long Nipple (10 pcs per pack)
4	X765-TA	Packing Nut (6 pcs per pack) for items 0886, 0887, 0895, 0896, 0897 only
5	X814-BA	Packing (10 pcs per pack) for items 0886, 0887, 0895, 0896, 0897 only
6	X4-L	Packing Washer (6 pcs per pack) for items 0886, 0887, 0895, 0896, 0897 only
7	X901-WNN	Seat Washer (25 pcs per pack) for items 0886, 0887, 0895, 0896, 0897 only
8	X104	Seat Washer Screw (25 pcs per pack) for items 0886, 0887, 0895, 0896, 0897 only
9	X1028-Y	Gasket (25 pcs per pack)
10	XPF-263-B	Replacement Seat (4 pcs per pack) for items 0886, 0887, 0895, 0896, 0897 only
19	3061-AZ1/2	½ IPS Diverter Spout for items 0896, 0897 & 80897 only
21	1062	⁵ / ₈ Slip Joint Diverter Spout for items 0886 & 0887 only
23	X1035-SS	Shower Arm Flange (10 pcs per pack)
24	714-WT-02	6-inch Shower Arm
25	3034-1/2-02	Shower Head 2.5 GPM

See **0805, 0806, 0807, 0808, 0826, 80808 & 80826** for items with more options including twin ell and Ceramic Stem Cartridges

- If faucet has round handles (G-508) or (80 suffix) , use two Cold stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

MODEL NOS. **0886 0887 0895**

0896 0897 80897 Series

Two-Valve Bath & Shower Fitting
Direct Sweat with built-in transfer valve

OPTIONS & REPLACEMENT PARTS for options
(see replacement part sheets for individual items)

Suffix Number	Replaces Item #	Part Number	Description
80	A	K-505-1C	Silver Crown Acrylic Handles with Screw (X126-625B) & indexed C metal button (G-503-M-02)
		K-505-1H	Silver Crown Acrylic Handles with Screw (X126-625B) & indexed H metal button (G-503-M-02)
		X126-625B	Handle Screw for Acrylic Handles suffix 80 (6 pcs per pack)
		G-503-M-02	Metal indexed buttons C & H for Acrylic Handles suffix 80 (one pair per pack)
	10	X263-BC	Bronze Replacement Seat (10 pcs per pack) for items 0886, 0887, 0895, 0896, 0897 only
	D	3007-8	8-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
	E	G-3113-8	Shower Head (3034-1/2-02), 8-inch Shower Arm (PF-714-WT8) & Flange (X1035-SS)
		G-1548-ET	Stem Extension with Screw (X105-F)
		X105-F	Screw for stem extension (4 pcs per pack)
Prefix Number	Replaces Item #	Part Number	Description
8	C	K-351-C	Ceramic-disc Stem Cartridge Cold with Gasket (X1028-Y)
8	C	K-351-H	Ceramic-disc Stem Cartridge Hot with Gasket (X1028-Y)
		Only for	80897

- If faucet has round handles (G-508) or (80 suffix) , use two K-351-C Cold stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

MODEL NOS. 0886 0887 0895

0896 0897 80897 Series

Two-Valve Bath & Shower Fitting
Direct Sweat with built-in transfer valve


For item 80897 only

K-351-C

K-351-H

**Ceramic-disc Stem Cartridges
with Gasket for Bath Valves**

REPLACEMENT PARTS

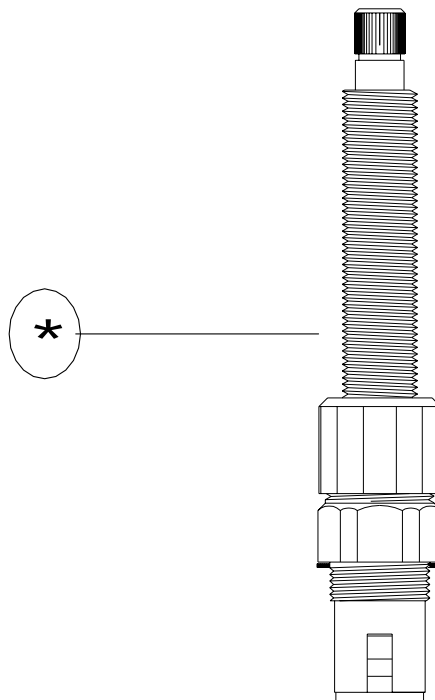

#	Part Number	Description
	K-351-C	Ceramic-disc Stem Cartridge Cold with Gasket (X1028-Y)
	K-351-H	Ceramic-disc Stem Cartridge Hot with Gasket (X1028-Y)
1	X1028-Y	Gasket (25 pcs per pack)

- If faucet has round handles (G-508) or (80 suffix) , use two K-351-C Cold stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

K-351-C & K-351-H

Installation Instructions to replace Compression Stem Assemblies with Ceramic-Disc Cartridges

DISASSEMBLY

1. Turn off water supply.
2. Remove handle and trim.
3. Remove old ceramic stem assembly using an adjustable wrench and turning counterclockwise.

ASSEMBLY

1. Insert stem cartridge (with nylon gasket) into faucet. All components of the ceramic disc unit must be assembled as shown in the illustration.

2. Using an adjustable wrench, turn stem assembly clockwise with no more than 18 ft-lbs of torque, until secure.

CAUTION: 18 ft-lbs is produced with a good pull on an 8-inch long wrench.


DO NOT OVERTIGHTEN.

3. Turn unit to off position and turn on water supplies. Check for leakage around nylon gasket. If leaking, tighten stem slowly until leaking stops.

4. If the "on to off" rotation of the handle is incorrect, it may be reversed by removing the hex cap nut from the unit (see diagram) and sliding the stop washer off stem. Turn stop washer over, slide stop washer back onto unit and replace hex cap nut.

5. Replace handle and trim.

NOTE: If Cartridge becomes disassembled, replace components as shown in illustration. Ceramic discs must be positioned with the polished seal surfaces together.

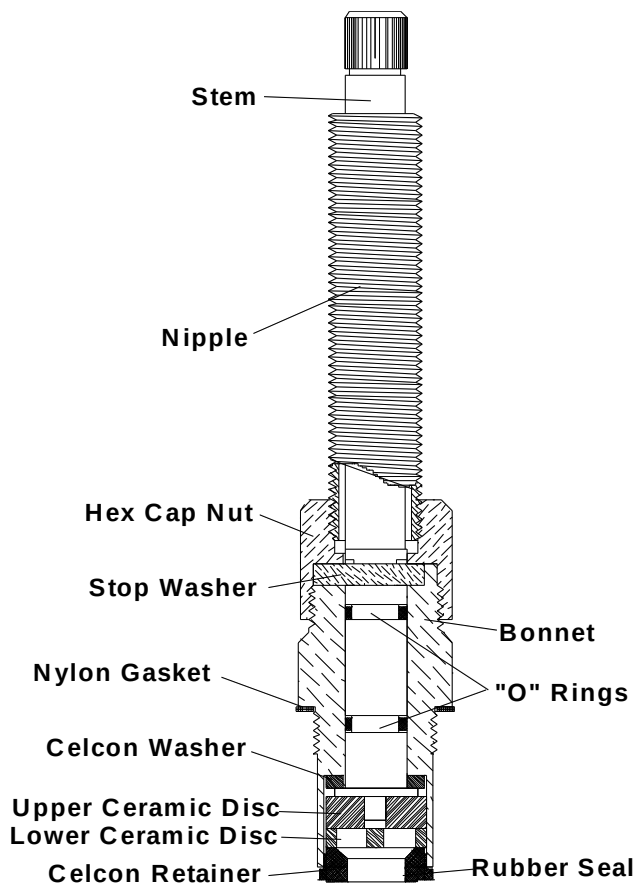

- If faucet has round handles (G-508) or (80 suffix) , use two K-351-C Cold stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies