


ELKAY With **FLEXI-GUARD** **INSTALLATION, CARE & USE MANUAL** **SWIRLFLO**TM fountains with **FLEXI-GUARD**TM



EDFPB114C

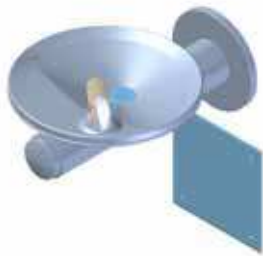

EDFPBWM114C

INSTALLER



CAUTION:

Review these instructions before beginning installation. Be sure that installation conforms to all plumbing, electrical and other applicable codes.



WARNING:

When installation is complete, ensure these instructions are left in the plastic bag provided inside the installed unit for future reference.



WARNING:

Service to be performed by authorized service personnel only.

NOTE: It is common practice to ground electrical hardware such as telephones, computers and other devices to available water lines. This can, however, cause electrical feedback in the plumbing circuit, which results in an “electrolysis” effect occurring in the fountain. This may result in water which has a metallic taste to it or has a noticeable increase in the metallic content of the water.

When inspecting plumbing circuit, remember the line may be grounded some distance from the installation, and may occur outside the building or area in which the unit is being installed.

This condition can be avoided (in most cases) by using recommended materials during installation. Any drain fittings provided by the installer should be made of **plastic** which will electronically isolate the fountain from the remainder of the building’s plumbing circuits.

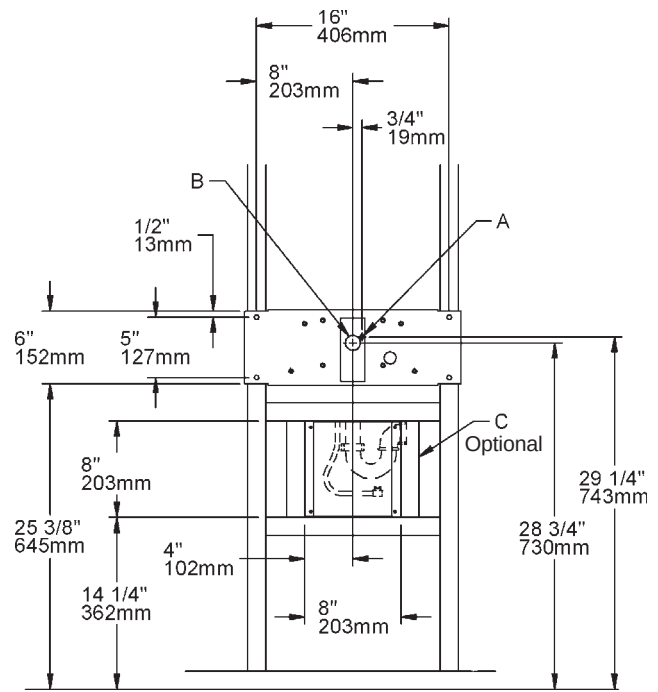


Figure 1 - Rough-in for EDFPB114C W/MP86 Mounting Plate

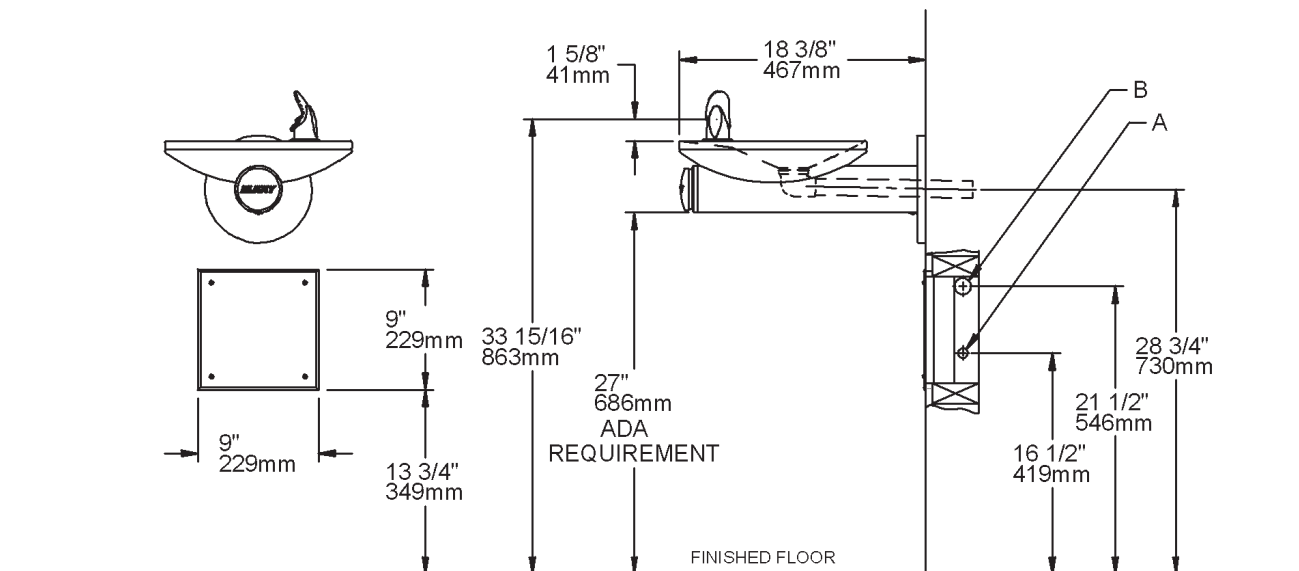


Figure 2 - Rough-in Assembly For EDFPB114C

LEGEND

- A = Water Inlet Location Left Or Right Side. 3/8" O.D. Unplated Copper Tube Connect.
- B = Fountain Waste Location Left Or Right Side. Waste Is Shown in Wall But May Be Behind Wall. 1-1/4" O.D. Drain (Trap Not Furnished)
- C = Opening For Optional AP-99 Access Panel

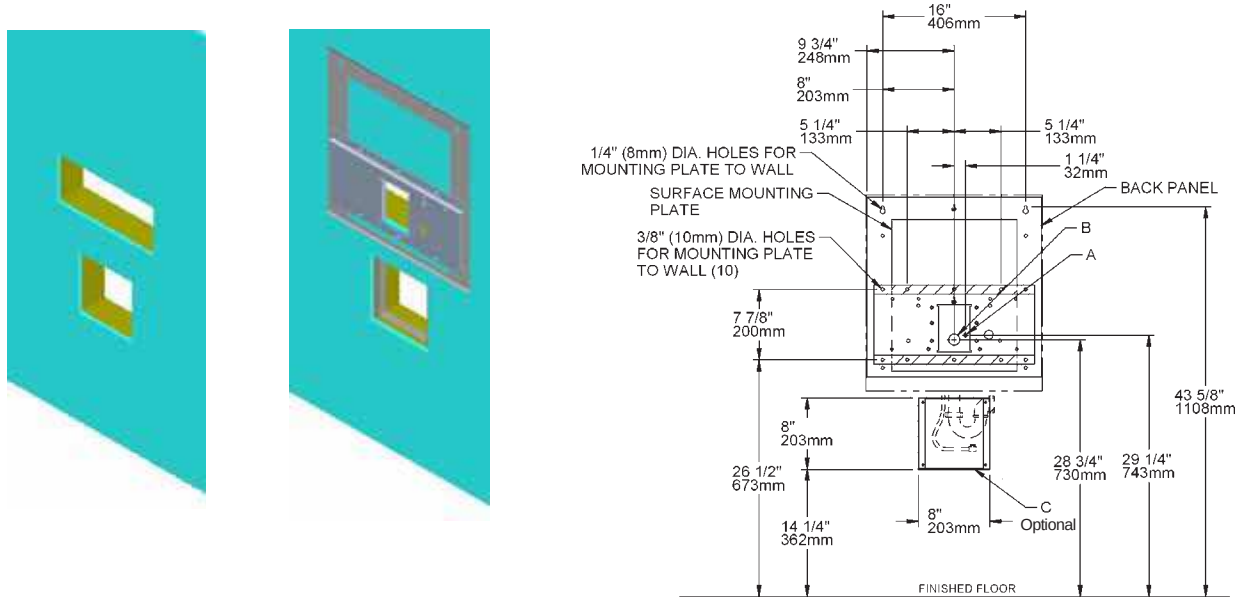


Figure 3 - Rough-in for EDFPBWM114C

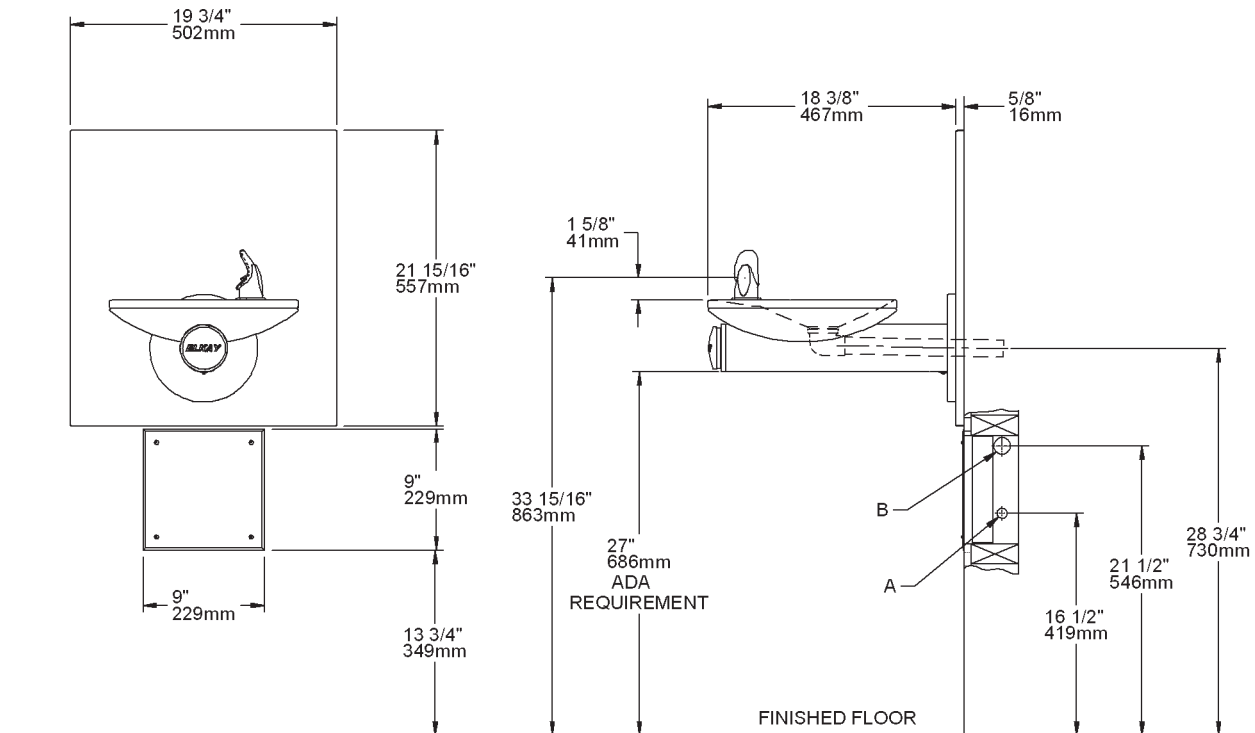


Figure 4 - Rough-in Assembly for EDFPBWM114C

LEGEND

- A = Water Inlet Location Left Or Right Side. 3/8" O.D. Unplated Copper Tube Connect.
- B = Fountain Waste Location Left Or Right Side. Waste Is Shown in Wall But May Be Behind Wall. 1-1/4" O.D. Drain (Trap Not Furnished)
- C = Opening For Optional AP-99 Access Panel

NOTE: Reinforce The Wall In The Shaded Areas

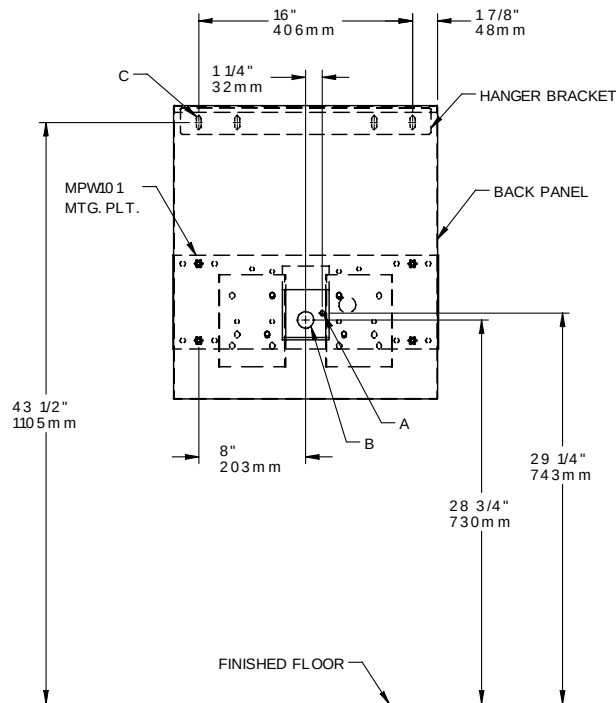


Figure 5 -Rough-in EDFPB(V)114C W/MPW101 MOUNTING PLATE

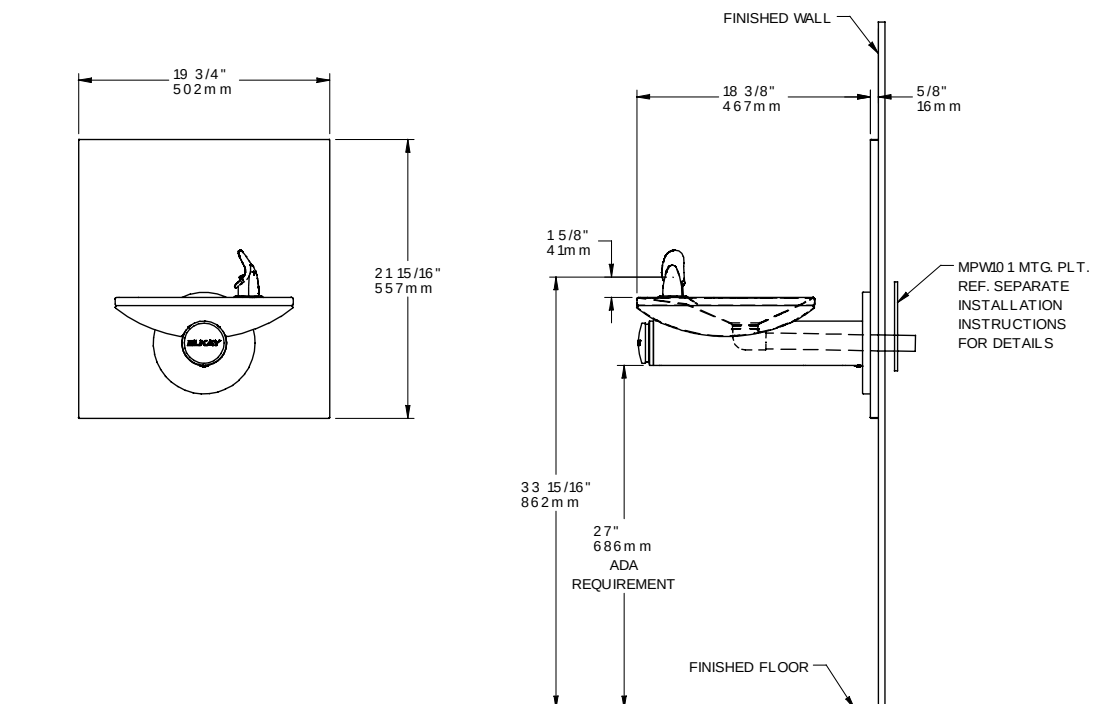


Figure 6 -Rough-in Assembly EDFPB(V)114C W/MPW101 MOUNTING PLATE

LEGEND

A = Water Inlet Location Left Or Right Side. 3/8" O.D. Unplated Copper Tube Connect.
B = Fountain Waste Location Left Or Right Side. Waste Is Shown in Wall But May Be Behind Wall. 1-1/4" O.D. Drain (Trap Not Furnished)
C = 3/8" (10mm) DIA. Slots For Mounting Hanger Bracket To Wall

Installation Instructions: EDFPB114C W/MP86 MTG. PLT.

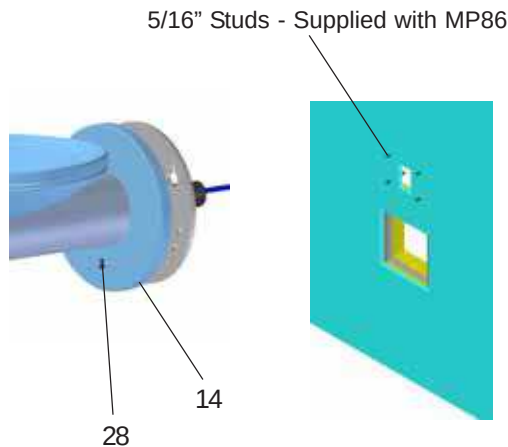


Figure 7 - EDFPB114C Fountain Installation

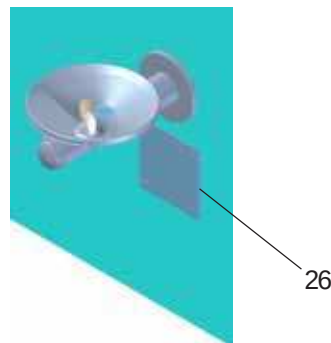


Figure 8 - AP-99 Panel (Optional)

1. **Wall** should already be framed for the fountain using the positioning dimensions shown in Figure 1. Shown dimensions pertain to installation location (framing must support up to 300 lbs. weight). These dimensions are required for compliance with ANSI Standard A117.0.
 2. **Install** rough-in plumbing as shown in Figure 1. Run supply water inlet line through the back panel. Install a service stop (not provided). Turn on supply water and flush thoroughly.
 3. **Install fountain.** Remove screw (Item 28) from cover plate and slide cover plate (Item 14) toward basin. Mount the fountain to the wall and mounting plate with (4) 5/16" hex nuts (provided with mounting plate). Tighten securely. (See Figure 7)
 4. **Determine** required length of waste line and cut to appropriate length. 1-1/4" O.D. waste tube furnished. 1-1/4" slip trap, waste elbow and extension not provided.
 5. **Make water** supply connections from service stop to the 3/8" O.D. unplated copper tube coming out of the strainer. Turn on water supply and check for leaks (See Figure 17). Newly installed water supply line should be insulated after leak check is completed.
- CAUTION: DO NOT SOLDER tubes inserted into the strainer as damage to the o-rings may result.
6. **These** products are designed to operate on 20-105 PSIG supply line pressure. If the inlet pressure is above 105 PSIG, a pressure regulator must be installed in the supply line. Any damage caused by reason of connecting these products to supply line pressures lower than 20 PSIG or higher than 105 PSIG is not covered by warranty.

7. **Check** stream height from bubbler. Stream height is factory set at 35 PSI. If supply pressure varies greatly from this, remove push button (Item 17 - Figure 14) and adjust the screw on the regulator (Item 19 - Figure 14). To remove push button, remove setscrew from bottom of sleeve (Item 15). Insert a small punch in screw hole and push up while grasping the push button and pull forward removing the push button. Clockwise adjustment will raise stream height and counterclockwise movement will lower stream height. For best adjustment stream should hit basin approximately 6-1/2" from the bubbler. Reassemble push button by pushing in on button until the push button catches in the sleeve. Reinstall the setscrew (Item 31) in the sleeve (Item 15).

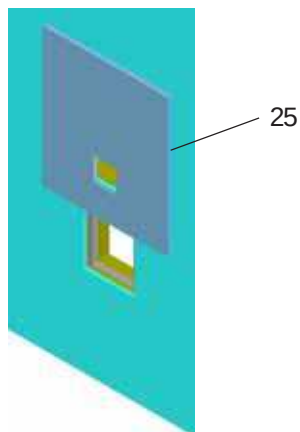


Figure 9 - Panel Installation

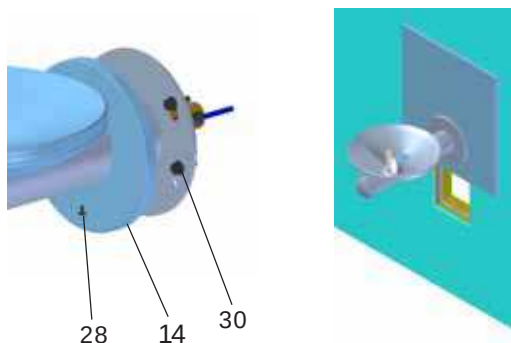


Figure 10 - Fountain Installation

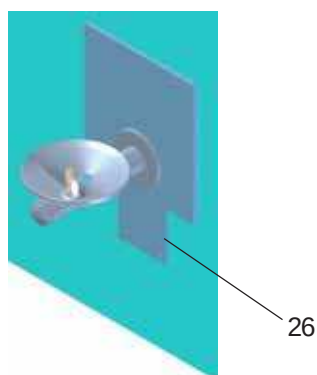


Figure 11 - AP-99 Panel (Optional)


Installation Instructions:

EDFPBWM114C/EDFPB114 W/MPW101 MTG. PLT.

1. **Fountains using the MPW Mounting Plate** refer to Figure 5 for hanger bracket location and rough-in dimensions.
NOTE: Review separate installation instructions for details of the MPW Mounting Plate.
Fountains using the Wall Plate Assy. refer to Figure 3 for rough-in dimensions.
2. Shown dimensions pertain to installation location (framing must support up to 300 lbs. weight). These dimensions are required for compliance with ANSI Standard A117.0.
3. **Install** rough-in plumbing as shown in Fig's. 3 or 5. Run supply water inlet line through the back panel. Install a service stop (not provided). Turn on supply water and flush thoroughly.
4. **Installing back panel.**
Ftn. w/MPW Mounting Plate: Refer to Fig. 16 for placement of braces onto back panel. Place the upper edge of the panel above the hanger bracket. Slide the panel down until it engages the hanger bracket. Be sure back panel is firmly engaged before releasing it.
Ftn. w/Wall Plate Assy.: Place the upper edge of the panel above mounting plate on the wall. Slide the panel down until it engages the mounting plate. Be sure back panel is firmly engaged before releasing it. (See Figure 9)
5. **Install fountain.** Remove screw (Item 28) from cover plate and slide cover plate (Item 14) toward basin. (See Figure 10)
Ftn. w/MPW Mounting Plate: Mount the fountain to the back panel and wall using (4) 5/16" x 6" long threaded rods, washers, and nuts (provided). Tighten securely.
Ftn. w/Wall Plate Assy.: Mount the fountain to the back panel and wall plate assy. with (4) 5/16" x 1" (25mm) long screws (Item 30 - provided). Tighten securely.
6. **Determine** required length of waste line and cut to appropriate length. 1-1/4" O.D. waste tube furnished. 1-1/4" slip trap, waste elbow and extension not provided.
7. **Make water** supply connections from service stop to the 3/8" O.D. unplated copper tube coming out of the strainer. Turn on water supply and check for leaks (See Figure 17). Newly installed water supply line should be insulated after leak check is completed.

CAUTION: DO NOT SOLDER tubes inserted into the strainer as damage to the o-rings may result.

8. **These** products are designed to operate on 20-105 PSIG supply line pressure. If the inlet pressure is above 105 PSIG, a pressure regulator must be installed in the supply line. Any damage caused by reason of connecting these products to supply line pressures lower than 20 PSIG or higher than 105 PSIG is not covered by warranty.
9. **Check** stream height from bubbler. Stream height is factory set at 35 PSI. If supply pressure varies greatly from this, remove push button (Item 17 - Figure 14) and adjust the screw on the regulator (Item 19 - Figure 14). To remove push button, remove setscrew from bottom of sleeve (Item 15). Insert a small punch in screw hole and push up while grasping the push button and pull forward removing the push button. Clockwise adjustment will raise stream height and counterclockwise movement will lower stream height. For best adjustment stream should hit basin approximately 6-1/2" from the bubbler. Reassemble the push button by pushing in on button until the push button catches in the sleeve. Reinstall the setscrew (Item 31) in the sleeve (Item 15).

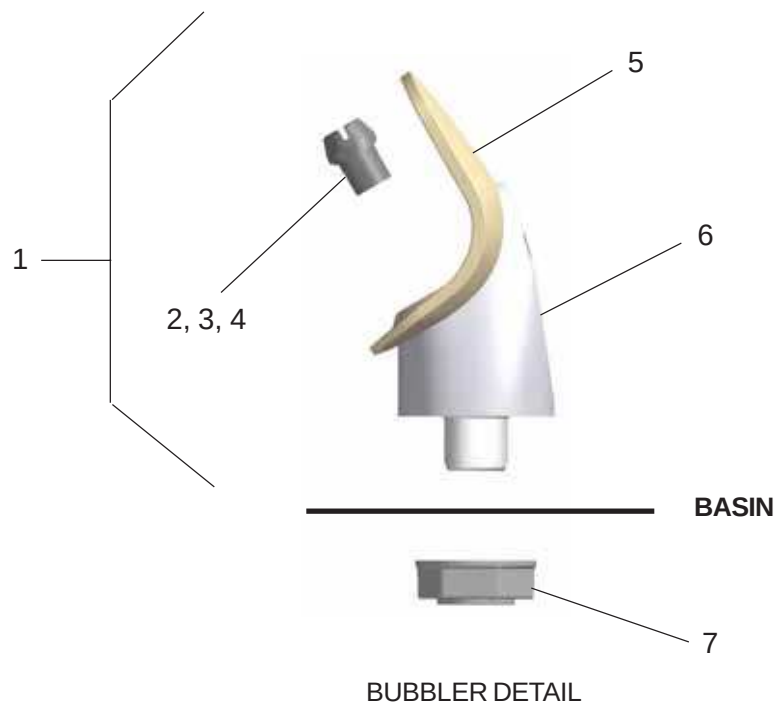

NOTE:

When installing replacement bubbler and pedestal, tighten nut (Item 7) only to hold parts snug in position. Do Not Overtighten.

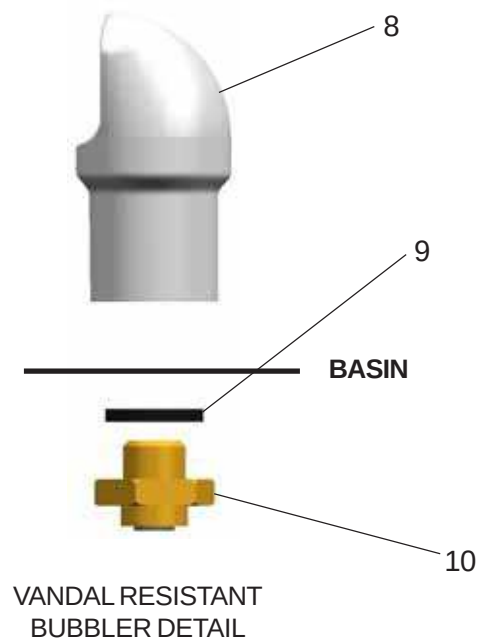


Figure 12 - Bubbler Details

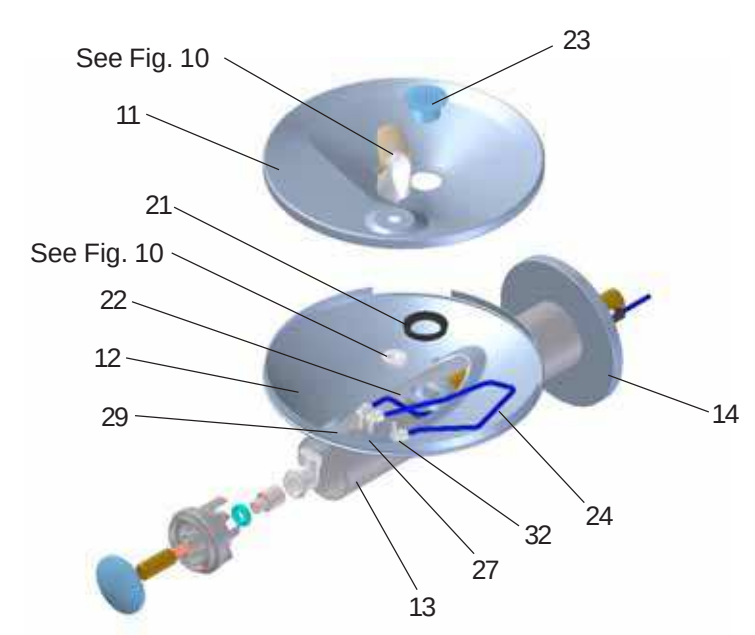


Figure 13 - Fountain Body

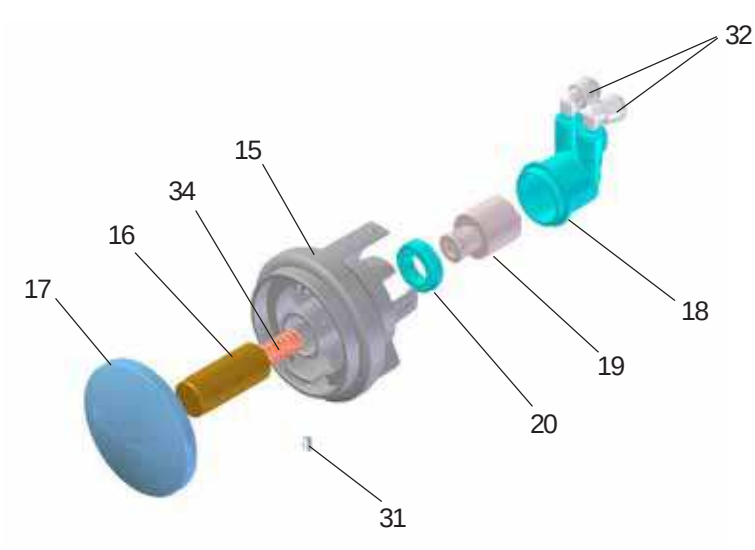


Figure 14 - Push Button

PARTS LIST		
ITEM NO.	PART NO.	DESCRIPTION
1	56073C	Bubbler Assy
2	40319C	Fitting - Orifice
3	50171C	O-Ring
4	50314C	Orifice - Flow Straightener
5	56011C	Housing Assembly
6	55997C	Pedestal
7	75580C	Bubbler Locknut
8	98118C	Body - Bubbler VR
9	100322740560	Gasket - Black .68 x 1.03 VR
10	15009C	Nipple - Bubbler VR
11	55001132	Basin - Swirlflow
12	55000944	Lower Shell
13	45767C	Fountain Body
14	28343C	Cover Plate
15	45781C	Sleeve
16	45847C	Pin - Push Button
17	45848C	Push Button
18	50986C	Holder - Regulator
19	61313C	Regulator
20	15005C	Retaining Nut
21	56163C	Gasket - Drain
22	45769C	Assy - Drain/Tailpipe
23	45768C	Plug - Drain 1-1/2"
24	56092C	Poly Tubing (Cut To Length)
25	28397C	Back Panel
26	AP99	AP-99 Panel (Optional)
27	111008343890	Screw - #10-24 x .62 HHMS
28	70432C	Screw - #8-32 x .38 THSM
29	38417001	Screw - #8-18 x .37 HHSM
30	75560C	Screw - 5/16-18 x 1.00 HHMS
31	75632C	Setscrew - #10-32 x .31
32	70817C	Ftng - Elbow 1/4 x 1/4
33	55996C	Strainer
34	75671C	Spring - Push Button
35	28843C	Back Panel Assy.
NS	27089C	Hanger Bracket

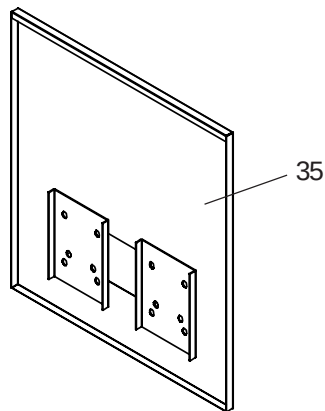


Figure 16 – Back Panel Assembly

Installing Back Panel: When installing back panel assy. (Item 35) with MPW (Mounting Plate), attach channel braces as shown above. Remove the protective backing from the tape installed on the braces. Line up the corresponding holes in the braces and back panel and press firmly in place.

TROUBLESHOOTING & MAINTENANCE

Orifice Assembly: Mineral deposits on orifice can cause water flow to spurt or not regulate. Mineral deposits may be removed from the orifice by poking with a small round file not over 1/8" diameter, or using a small diameter wire.




CAUTION: DO NOT file or cut orifice material.

Stream Regulator: If orifice is clean, regulate flow as in Step 8 of the installation instructions. If replacement is necessary, see parts list for correct regulator part number.

Actuation of Quick Connect Water

Fittings: Cooler is provided with lead-free connectors which utilize an o-ring water seal. To remove tubing from the fitting, relieve water pressure, push in on the gray collar while pulling on the tubing. (See Figure 15) To insert tubing, push tube straight into fitting until it reaches a positive stop (approximately 3/4").

OPERATION OF QUICK CONNECT FITTINGS

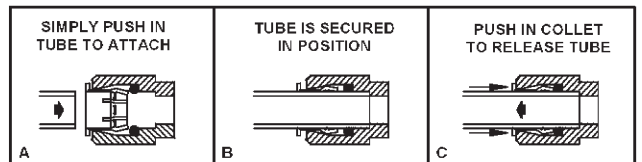

PUSHING TUBE IN BEFORE PULLING IT OUT HELPS TO RELEASE TUBE

Figure 15 – Quick Connect Fittings

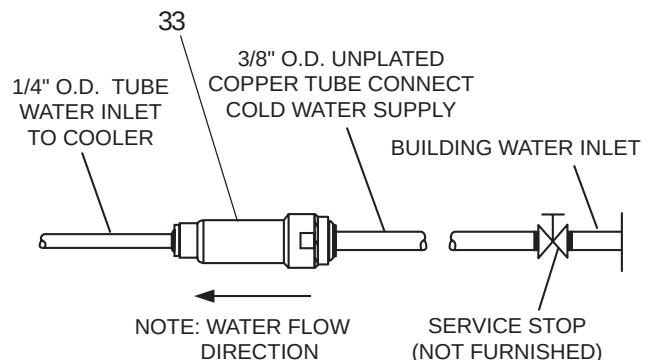


Figure 17 – Water Supply Connections

LIMITED PRODUCT WARRANTY*

FIRST YEAR - - The Manufacturer warrants every water cooler, packaged water chiller, fountain and accessory to be free from defects in material and workmanship under normal use for (1) year from date of installation or eighteen (18) months from date of shipment from the factory, whichever occurs first.

SECOND THROUGH FIFTH YEARS - The Manufacturer warrants the compressor and hermetically sealed refrigeration system, including cooling coils or tank assembly when part of the hermetically sealed refrigeration system, to be free from defects in material and workmanship under normal use for an additional four (4) years from the end of the one (1) year period described above. Packaged water chillers are not subject to the additional four (4) year warranty when used in chilled water commercial/industrial applications other than for potable water.

INSTALLATION AND OPERATION - The foregoing Limited Warranty applies only when the product is installed and operated in accordance with the Manufacturer's written instructions included with each unit. These products are designed to operate on 20 psi to 105 psi supply line pressure. Non-filtered Bi-level units require a minimum of 40 psi supply line pressure to ensure adequate stream height from each bubbler when activated simultaneously. Bi-level filtered models, regardless of supply line pressure, cannot provide adequate stream height from each bubbler when activated simultaneously. It does not apply to products which, on examination by the Manufacturer, or its agent, are found to have been subjected to accident, alteration, abuse, misuse, misapplications, corrosive type atmospheres, or abnormal use.

OWNER'S OBLIGATIONS - The owner has the obligation and responsibility to diagnose and/or make minor adjustments and to reimburse the authorized service center or the Manufacturer for any other repair not covered by the terms of this limited Warranty. Any appearance imperfections are to be noted at time of installation, and the installer or the supplier notified without delay. In the case of products located within the United States or Canada, the owner also has the obligation and responsibility to return the complete unit to the closest authorized service center or to the factory repair department. In the case of products located outside the United States or Canada, the owner is to return any part for which replacement is sought to the closest authorized service center or to the factory repair department.

MANUFACTURER'S OBLIGATIONS - When the product is located within the United States or Canada, the Manufacturer's obligation under this Limited Warranty is limited to the labor and parts to repair or replace any part which is expressly covered by this Limited Warranty at one of its authorized service centers or at its factory repair department. The Manufacturer's obligation also includes cost of outbound freight (but not express freight) of the part or parts from an authorized service center or the factory repair department, but only if the Manufacturer determines that the part or parts, and the purported defect or defects are covered by this Limited Warranty.

When the product is located outside the United States or Canada, the Manufacturer's obligation under this Limited Warranty is limited to providing a replacement part for any part expressly covered by this Limited Warranty which upon examination by the Manufacturer or his agent, is found to be defective, but does not include any obligation to provide labor or to pay labor costs incurred in connection with the replacement. The Manufacturer's obligations also includes cost of outbound freight (but not express freight) of the part or parts from the factory repair department to (but not beyond) the port in the United States from which the part or parts are shipped to their ultimate destination, but only if the Manufacturer determines that the part or parts, and the purported defect or defects, are covered by this Limited Warranty.

WHAT WARRANTY DOES NOT COVER - This Limited Warranty does not include payment for any field labor to provide for normal maintenance including adjustments such as water stream height, water temperature or electric eye sensitivity. The water system and regulating valve are not covered by this Limited Warranty if they become inoperative due to liming, sand or similar residue. This Limited Warranty is voided if repairs are made by an unauthorized party or the serial number data plate is removed or defaced. Normal deterioration of finish due to use and exposure is not covered by this Limited Warranty. The Manufacturer is not liable for repairs, whether cosmetic or structural, to walls where cooler and packaged water coolers are built into the wall. If inlet pressure is above 105 psi, a pressure regulator must be installed in the supply line. Any damage caused by reason of connecting this water cooler to supply line pressures lower than 20 psi or higher than 105 psi is not covered by this warranty.

PERSONS ENTITLED TO BENEFIT OF WARRANTY - This Limited Warranty is applicable only to (i) purchasers who purchase the product for resale in the ordinary course of business, and (ii) the first person who purchases the product other than resale.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, EXPRESSED OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. EXCEPT AS EXPRESSLY PROVIDED HEREIN, THE MANUFACTURER MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO ANY PERSON. THIS WARRANTY MAY NOT BE ALTERED, VARIED, OR EXTENDED, EXCEPT BY A WRITTEN INSTRUMENT EXECUTED BY THE MANUFACTURER. THE REMEDY OF REPAIR OR, WHERE APPLICABLE, REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS EXCLUSIVE. IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES TO ANY PERSON, WHETHER OR NOT OCCASIONED BY NEGLIGENCE OF THE MANUFACTURER, INCLUDING WITHOUT LIMITATION DAMAGES FOR LOSS OF USE, COSTS OR SUBSTITUTION, PROPERTY DAMAGE, OR OTHER MONETARY LOSS.

This Limited Warranty gives specific legal rights and in some states of the United States there may be other rights which vary from state to state.

*See separate Limited Warranty for Bottled Coolers.

DATE OF INSTALLATION _____

SERIAL NUMBER _____

(To Be Filled in By Installer)

Elkay Sales, Inc
2222 Camden Court
Oak Brook, Illinois 60523
630.574.8484

Form to be left with the owner by the installer.

GARANTÍA LIMITADA DEL PRODUCTO*

PRIMER AÑO – El fabricante garantiza que todo enfriador de agua, enfriador de agua empaquetado, fuente de agua potable y accesorio sea libre de defectos de material y mano de obra bajo uso normal durante un (1) año a partir de la fecha de instalación o dieciocho (18) meses a partir de la fecha de envío de la fábrica, lo que ocurra primero.

DURANTE EL SEGUNDO HASTA EL QUINTO AÑO – El fabricante garantiza que el compresor y el sistema frigorífico sellado herméticamente, incluyendo los espirales de refrigeración o el ensamblaje del tanque, cuando formen parte del sistema frigorífico sellado herméticamente, sean libres de defectos en el material y de la mano de obra bajo uso normal durante cuatro (4) años adicionales a partir de uno de los períodos de un (1) año descritos anteriormente. No se cubrirán los enfriadores de agua empaquetados bajo la garantía adicional de cuatro (4) años si se usan en aplicaciones comerciales/industriales que no sea para el suministro de agua potable.

INSTALACIÓN Y OPERACIÓN – La Garantía Limitada anteriormente citada se aplicará únicamente si se haya instalado y operado el producto de acuerdo con las instrucciones escritas del fabricante incluidas con cada unidad. Se han diseñado estos productos para operarse con una presión de 20 PSI a 105 PSI de la línea de suministro. Las unidades de dos niveles sin filtración requieren una presión mínima de 40 PSI en la línea de suministro para asegurar que la altura de flujo de cada sifón sea la indicada al activarse simultáneamente. Los modelos de dos niveles con filtración, sin importar la presión de la línea de suministro, jamás podrán proporcionar la altura de flujo correcta al activarse simultáneamente. No se aplica a aquellos productos que, al examinarlos el fabricante, o su representante, han sido sujetos a accidentes, alteraciones, abuso, mal uso, mala aplicación, atmósferas corrosivas o uso anormal.

RESPONSABILIDADES DEL PROPIETARIO – Al propietario queda la responsabilidad de diagnosticar y/o realizar ajustes menores y de rembolsar al centro de servicio autorizado o al fabricante para toda reparación no cubierta bajo los términos de esta garantía limitada. Toda imperfección de apariencia se deberá anotar en el momento de instalación, y se debe notificar al instalador o al proveedor sin demora. En el caso de productos ubicados dentro de EE.UU. o del Canadá, el propietario también tiene la responsabilidad de devolver la unidad completa al centro de servicio autorizado más cercano o al departamento de reparaciones del fabricante. En el caso de productos ubicados fuera de EE.UU. o del Canadá, el propietario deberá devolver toda parte que por la cual se pretende obtener un reemplazo al centro de servicio autorizado más cercano o al departamento de reparaciones del fabricante.

RESPONSABILIDADES DEL FABRICANTE – Al encontrarse el producto dentro de EE.UU. o del Canadá, la responsabilidad del fabricante bajo esta garantía limitada, se limita a cubrir la labor y las partes para reparar o reemplazar toda parte cubierta expresamente por esta Garantía Limitada en uno de sus centros de servicio autorizados o en el departamento de reparaciones del fabricante. La obligación del fabricante también incluye el costo de transporte en viaje de ida (pero no el transporte rápido) de la parte o las partes desde el departamento de reparaciones del fabricante (pero no más allá) al puerto en EE.UU. a partir del cual se enviará la parte o las partes al destino último, pero solamente si el fabricante haya determinado que la parte o las partes, y el defecto o los defectos pretendidos son cubiertos por esta Garantía Limitada.

En el evento que el producto esté ubicado fuera de EE.UU. o del Canadá, la responsabilidad del fabricante bajo esta Garantía Limitada se limita a proporcionar una parte de reemplazo para toda parte cubierta expresamente por esta Garantía Limitada al ser examinada por el fabricante o su representante, se determina ser defectuosa, pero no incluye la responsabilidad de proporcionar la labor ni de pagar el costo de la mano de obra que surgieran en conexión con el reemplazo. Las obligaciones del fabricante también incluye el costo de transporte en viaje de ida (pero no el transporte rápido) de la parte o las partes desde el departamento de reparaciones del fabricante (pero no más allá) al puerto en EE.UU. a partir del cual se enviará la parte o las partes al destino último, pero solamente si el fabricante haya determinado que la parte o las partes, y el defecto o los defectos pretendidos, son cubiertos por esta Garantía Limitada.

LO QUE NO CUBRE LA GARANTÍA – Esta Garantía Limitada no cubre el pago de la mano de obra en el campo que proporciona mantenimiento normal incluyendo ajustes tales como la altura del flujo de agua, la temperatura del agua o sensibilidad del ojo eléctrico. Esta Garantía Limitada no cubre al sistema de agua y la válvula de regulación, en el caso que se vuelvan inoperantes debido a una capa de lima, arena o residuos parecidos. Se vuelve inválida esta Garantía Limitada si las reparaciones se realizan por una parte sin autorización o se haya quitado o desfigurado la placa con los datos del número de serie. La Garantía Limitada no cubre el deterioro normal del acabado debido al uso y exposición. El fabricante no es responsable de reparaciones, ya sean cosméticas o estructurales, a las paredes en dónde se hayan empotrado los enfriadores de agua o los enfriadores de agua empaquetados. En el evento que la presión de la entrada del agua sea superior a 105 PSI, se requiere la instalación de un regulador de presión en la línea de suministro. Esta garantía no cubre aquellos daños que sean el resultado de la conexión de este enfriador de agua a una línea de suministro con presiones menores a 20 PSI o mayores que 105 PSI.

PERSONAS QUE TIENEN DERECHO DE BENEFICIAR DE LA GARANTÍA – Esta Garantía Limitada es aplicable únicamente a (i) compradores que compran el producto para fines de reventa durante el curso normal de comercio, y (ii) la primera persona que compra el producto para fines ajenos a la reventa.

ESTA GARANTÍA LIMITADA REEMPLAZA TODA GARANTÍA EXPRESA, ENUNCIADA O IMPLÍCITA, QUE SURGIERAN POR MEDIOS LEGALES O DE OTRA MANERA, INCLUYENDO SIN LIMITACION, LAS GARANTIAS IMPLÍCITAS DE APTITUDES PARA LA COMERCIALIZACIÓN Y ADECUACIÓN PARA UN PROPÓSITO DETERMINADO, A NINGUNA PERSONA. CON LA EXCEPCIÓN DE LAS PROVISIONES DE ESTE, EL FABRICANTE NO BRINDA NINGUNA GARANTÍA, ENUNCIADA O IMPLÍCITA, QUE SURGIERA POR MEDIOS LEGALES O DE OTRA MANERA, INCLUYENDO SIN LIMITACION, LAS GARANTIAS IMPLÍCITAS DE APTITUDES PARA LA COMERCIALIZACIÓN Y ADECUACIÓN PARA UN PROPÓSITO DETERMINADO. NO SE PODRÁ ALTERAR, VARIAR O EXTENDER ESTA GARANTÍA, A MENOS QUE UN INSTRUMENTO POR ESCRITO SEA EJECUTADO POR EL FABRICANTE. EL REMEDIO QUE CONSISTIRÁ DE REPARACIÓN O, CUANDO SEA APLICABLE, EL REEMPLAZO, SEGÚN LAS PROVISIONES DE ESTA GARANTÍA LIMITADA ES EXCLUSIVO. EN NINGÚN EVENTO SERÁ RESPONSABLE EL FABRICANTE DE DAÑOS RESULTANTES O INCIDENTALES A NINGUNA PERSONA, YA SEA OCASIONADOS POR NEGLIGENCIA POR PARTE DEL FABRICANTE, INCLUYENDO SIN LIMITACIÓN, DAÑOS DEBIDO A LA PÉRDIDA DE USO, COSTOS O SUBSTITUCIÓN, PERJUICIOS DE PROPIEDADES O MONETARIOS.

Esta Garantía Limitada da ciertos derechos legales y en algunos estados en EE.UU. puede haber otros derechos que varían de estado en estado.

*Consulte la Garantía Limitada por separado para Enfriadores Embotellados.

FECHA DE INSTALACIÓN _____

NÚMERO DE SERIE _____

(El instalador debe completar)

El instalador debe dejar el formulario con el propietario.

Impreso en los EE.UU.

Elkay Sales, Inc
2222 CAMDEN COURT
OAK BROOK, ILLINOIS 60523
630.574.8484

GARANTIE LIMITÉE CONCERNANT LE PRODUIT*

PREMIÈRE ANNÉE - Le Fabricant garantit que chaque distributeur d'eau fraîche, chaque refroidisseur d'eau, chaque fontaine et chaque accessoire sont exempts de défaut de matériel ou de fabrication dans des conditions normales d'utilisation, et ceci pendant un (1) an à compter de la date d'installation ou dix-huit (18) mois à compter de la date de sortie d'usine, selon l'échéance qui arrive en premier.

SECONDE À CINQUIÈME ANNÉES - Le Fabricant garantit que le compresseur et le système de réfrigération hermétiquement scellé, y compris les serpents de refroidissement ou l'ensemble du réservoir lorsqu'ils font partie du système de réfrigération hermétiquement scellé, sont exempts de défaut de matériel ou de fabrication dans des conditions normales d'utilisation, et ceci pendant quatre (4) années supplémentaires à compter de la fin de la période d'un (1) an indiquée ci-dessus. Les refroidisseurs d'eau ne sont pas soumis à la garantie supplémentaire de quatre (4) ans lorsqu'ils sont utilisés dans des applications commerciales/industrielles de refroidissement d'eau autres que pour l'eau potable.

INSTALLATION ET FONCTIONNEMENT - La Garantie limitée mentionnée précédemment n'est applicable que si le produit est installé et utilisé conformément aux instructions écrites du Fabricant, incluses avec chaque unité. Ces produits ont été conçus pour fonctionner avec une pression de conduite d'alimentation de 20 psi à 105 psi. Les unités à deux niveaux sans filtre nécessitent une pression de conduite d'alimentation minimale de 40 psi pour assurer une hauteur de jet adéquate pour chaque barboteur en cas d'activation simultanée. Quelle que soit la pression de la conduite d'alimentation, les modèles à deux niveaux avec filtre ne peuvent pas fournir une hauteur de jet adéquate pour chaque barboteur en cas d'activation simultanée. Cette garantie ne s'applique pas aux produits qui, suite à l'examen par le Fabricant ou son représentant, sont jugés avoir été soumis à un accident, une altération, une utilisation abusive ou inadéquate, des mauvaises applications, des environnements de type corrosif ou une utilisation ne correspondant pas aux conditions normales.

OBLIGATIONS DU PROPRIÉTAIRE DU PRODUIT - Le propriétaire du produit a l'obligation et la responsabilité de diagnostiquer et/ou d'appliquer des ajustements mineurs et de rembourser le centre de réparation homologué ou le Fabricant pour toute autre réparation non couverte par les termes de cette Garantie limitée. Toutes les imperfections concernant l'aspect du produit doivent être notées au moment de l'installation et l'installateur ou le fournisseur doit en être averti immédiatement. En ce qui concerne les produits situés aux États-Unis ou au Canada, le propriétaire du produit a également l'obligation et la responsabilité de renvoyer l'unité intégrale au centre de réparation homologué le plus proche ou au service de réparation en usine. En ce qui concerne les produits situés en dehors des États-Unis ou du Canada, le propriétaire est tenu de renvoyer tout composant à remplacer au centre de réparation homologué le plus proche ou au service de réparation en usine.

OBLIGATIONS DU FABRICANT - En ce qui concerne les produits situés aux États-Unis ou au Canada, l'obligation du Fabricant dans le cadre de cette Garantie limitée ne concerne que la main d'œuvre et les pièces nécessaires pour réparer ou remplacer toute pièce explicitement couverte par cette Garantie limitée à un de ses centres de réparation homologués ou à son service de réparation en usine. Le Fabricant est également tenu de payer les frais de fret sortant (mais non un envoi en express) de la ou des pièces à partir d'un centre de réparation homologué ou du service de réparation en usine, mais seulement si le Fabricant établit que la ou les pièces, ainsi que le ou les défauts prétendus sont couverts par cette Garantie limitée.

En ce qui concerne les produits situés en dehors des États-Unis ou du Canada, l'obligation du Fabricant dans le cadre de cette Garantie limitée ne concerne que la fourniture d'une pièce de rechange pour toute pièce explicitement couverte par cette Garantie limitée qui, suite à l'examen par le Fabricant ou son représentant, est jugée défectueuse ; cette obligation n'inclut pas la main d'œuvre ni les frais de main d'œuvre liés au remplacement de la ou des pièces de rechange. Le Fabricant est également tenu de payer les frais de fret sortant (mais non un envoi en express) de la ou des pièces à partir du service de réparation en usine jusqu'au port des États-Unis (mais pas au-delà) d'où la ou les pièces seront expédiées vers leur destination finale, mais ceci seulement si le Fabricant établit que la ou les pièces, ainsi que le ou les défauts prétendus sont couverts par cette Garantie limitée.

ÉLÉMENTS NON COUVERTS PAR LA GARANTIE - Cette Garantie limitée n'inclut pas les frais de main d'œuvre sur place concernant l'entretien normal, y compris les réglages nécessaires, comme la hauteur du jet d'eau, la température de l'eau ou la sensibilité de la cellule photoélectrique. Le système d'alimentation en eau et la vanne de réglage ne sont pas couverts par cette Garantie limitée si leur fonctionnement est entravé par de la chaux, du sable ou un quelconque résidu similaire. Cette Garantie limitée est annulée si des réparations sont effectuées par une partie non homologuée ou si la plaque d'identification du numéro de série est retirée ou dégradée. La détérioration normale de la finition en raison de l'utilisation et de l'exposition n'est pas couverte par cette Garantie limitée. Le fabricant n'est pas responsable des réparations, qu'elles soient esthétiques ou structurelles, effectuées sur les murs dans le cas des distributeurs d'eau fraîche et refroidisseurs d'eau encastrés dans un mur. Si la pression d'entrée est supérieure à 105 psi, un régulateur de pression doit être installé dans la conduite d'alimentation. Tout dommage causé par le raccordement de ce distributeur d'eau fraîche à une conduite d'alimentation ayant une pression inférieure à 20 psi ou supérieure à 105 psi n'est pas couvert par cette garantie.

PERSONNES HABILITÉES À BÉNÉFICIER DE LA GARANTIE - Cette Garantie limitée est applicable exclusivement (i) aux acheteurs qui achètent le produit en vue de le revendre dans le cadre de leurs activités commerciales normales et (ii) au premier acheteur du produit qui l'achète dans un but autre que la revente.

CETTE GARANTIE LIMITÉE REMPLACE TOUTES LES AUTRES GARANTIES EXPRIMÉES, EXPLICITES OU IMPLICITES, DANS LE CADRE DE LA LOI OU AUTREMENT, Y COMPRIS MAIS SANS S'Y LIMITER, LES GARANTIES IMPLICITES DE VALEUR MARCHANDE ET D'ADAPTATION À UN BUT PARTICULIER. SAUF COMME EXPLICITEMENT STIPULÉ DANS CE DOCUMENT, LE FABRICANT N'ACCORDE À QUICONQUE AUCUNE GARANTIE, EXPLICITE OU IMPLICITE, DANS LE CADRE DE LA LOI OU AUTREMENT, Y COMPRIS MAIS SANS S'Y LIMITER, LES GARANTIES IMPLICITES DE VALEUR MARCHANDE ET D'ADAPTATION À UN BUT PARTICULIER. CETTE GARANTIE NE PEUT ÊTRE ALTÉRÉE, MODIFIÉE OU ÉTENDUE, SAUF PAR UN DOCUMENT ÉCRIT EXÉCUTÉ PAR LE FABRICANT. LE RECOURS CONSISTANT À LA RÉPARATION OU, SI APPLICABLE, AU REMPLACEMENT COMME INDiqué DANS LE CADRE DE CETTE GARANTIE LIMITÉE EST EXCLUSIF. EN AUCUN CAS, LE FABRICANT NE POURRA ÊTRE TENU RESPONSABLE D'UN QUELCONQUE DOMMAGE SECONDAIRE OU ACCIDENTEL ENVERS UNE PERSONNE QUELCONQUE, QUE CE DOMMAGE SOIT OU NON OCCASIONNÉ PAR LA NÉGLIGENCE DU FABRICANT, Y COMPRIS MAIS SANS S'Y LIMITER, TOUT DOMMAGE ENTRAÎNÉ PAR LA PERTE DE JOUISSANCE, DES FRAIS OU LE REMPLACEMENT, DES DÉGÂTS MATÉRIELS OU TOUTE AUTRE PERTE FINANCIÈRE.

Cette Garantie limitée accorde des droits légaux spécifiques et, dans certains États des États-Unis, il se peut qu'il existe également d'autres droits, qui varient selon les États.

*Voir la Garantie limitée distincte, spécifique aux refroidisseurs d'eau à bouteilles.

DATÉ D'INSTALLATION _____

NUMÉRO DE SÉRIE _____

(À remplir par l'installateur)

Formulaire devant être remis au propriétaire par l'installateur.

Imprimé aux États-Unis.

Elkay Sales, Inc
2222 CAMDEN COURT
OAK BROOK, ILLINOIS 60523
630.574.8484