


SE-490 SE-495 SE-580 SE-582

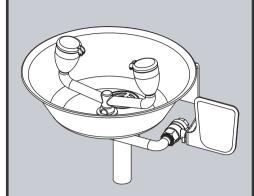

NEED HELP?

For additional assistance or service please contact:

SPEAKMAN® Company 400 Anchor Mill Road New Castle, DE 19720

800-537-2107

customerservice@speakman.com

www.speakman.com

92-SE-490-582-05



↑ IMPORTANT

ANSI Z358.1 states that weekly activation should be conducted on all plumbed emergency equipment to ensure that there is a suitable flushing fluid supply present and to clear the supply line of any sediment build-up that could prevent fluid from properly being delivered to the eye/eyeface wash device, as well as to minimize microbial contamination due to stagnant water. Also per the standard, the unit should be checked annually to ensure the unit still complies with the installation section (7.4) of the ANSI Z358.1 standard. ANSI Z358.1 specifies that the height of the spray heads is to be between 33" - 45" from the floor. The SE-490/495/580/582 unit shall be mounted ensuring the mounting surface [wall,etc.] and mounting hardware are sufficient to carry the load. Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur. SPEAKMAN furnishes a testing record tag (91-0635) with each unit. On this tag, the date of inspection and the inspector's initials should be noted.

MAINTENANCE

•

Please reference the parts listing for the correct repair part numbers. Only use genuine SPEAKMAN parts when repairing or replacing components. To order parts, call 1-800-537-2107. Be sure to turn off water supplies before beginning any maintenance.

SAFETY TIPS

•


0


Be sure to wear proper eye protection.


WARRANTY

10

3 year limited warranty. Additional warranty information can be found at: www.speakman.com After selecting a suitable mounting location, measure to ensure the spray head height is between 33"-45" from the floor. Mark and drill holes according to hardware selection specifications.

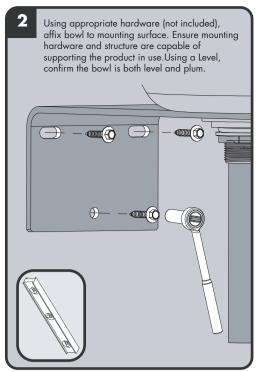

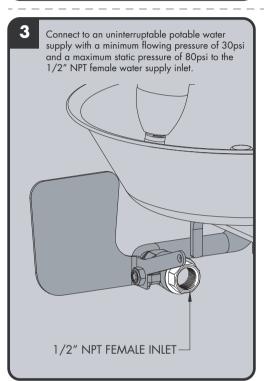

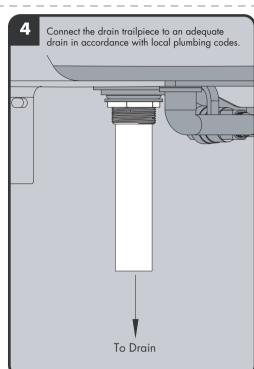



FLOW DATA:

SE-490/495 FLOW DATA

PRESSURE		FLOW RATE	
psi	bar	gpm	L/min
30	2.07	4.5	17.0
60	4.14	4.6	17.4


SE-580/582 FLOW DATA

0L 300/ 302 TEO 11 D/ 11/ 1				
PRESSURE		FLOW RATE		
psi	bar	gpm	L/min	
30	2.07	3.2	12.1	
60	4.14	3.4	12.9	

SE-490 / SE-495 / SE-580 / SE-582 REPAIR PARTS

6 8

SPEAKMAN®

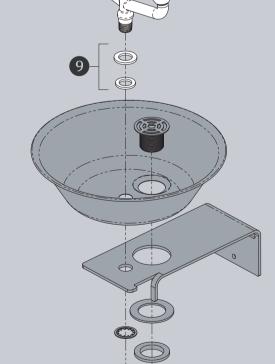

ITEM NO.	PART NO.	DESCRIPTION
0	SE-910	BRASS 1/2" BALL VALVE ASSEMBLY WITH PADDLE HANDLE
2	SE-910-SSBV	STAINLESS STEEL 1/2" BALL VALVE ASSEMBLY
3	RPG05-11 <i>77</i>	AERATOR REPLACEMENT GROUP (6 EACH)
4	RPG21-0082-PC-P	(not shown) in-line strainer repair assembly
6	RPG05-0715	SE-490 / SE-495 NON-AERATED EYE/FACE WASH BULLHORN ASSEMBLY
6	RPG38-0390	SE-490 / SE-495 NON-AERATED SPRAYHEAD ASSEMBLY
7	RPG05-0714	SE-580 / SE-582 AERATED EYE/FACE WASH BULLHORN ASSEMBLY
8	RPG38-0379	SE-580 / SE-582 AERATED SPRAYHEAD ASSEMBLY
9	RPG05-0943	BULLHORN WASHER GROUP
10	RPG07-0104	FLIP TOP DUST CAP REPLACEMENT (20 PER BAG)

