

- K-7500 Machine with AUTOFEED, toolbox, standard tools and C-24 Cable (5/8" x 100' Inner-Core)

### Cables and Flexible Leaders

	Catalog No.	Model No.	Description
	92460	C-25	25' I.C. Cable (7,6m)
	92465	C-26	50' I.C. Cable (15,2m)
	92470	C-27	75' I.C. Cable (22,9m)
	43647	C-24	100' I.C. Cable (30,5m)
	32737	C-27HC	75' Hollow-Core (22,9m)
	58192	C-24HC	100' Hollow-Core (30,5m)
	95762	C-25 IW	25' I.W. Cable (7,6m)
	95757	C-26 IW	50' I.W. Cable (15,2m)
	95752	C-27 IW	75' I.W. Cable (22,9m)
	95747	C-24 IW	100' I.W. Cable (30,5m)
	92475	C-28	25' I.C. Cable (7,6m)
	92480	C-29	50' I.C. Cable (15,2m)
	41212	C-75	75' I.C. Cable (22,9m)
	41697	C-100	100' I.C. Cable (30,5m)
	47427	C-75HC	75' Hollow-Core (22,9m)
	47432	C-100HC	100' Hollow-Core (30,5m)
	92555	T-458	5/8" x 2' Leader
	92560	T-468	3/4" x 2' Leader
	44122	—	5/8" Pigtail
	44117	—	3/4" Pigtail

### Tools and Replacement Blades — Fits C-24, C-25, C-26, C-27, C-28, C-29, C-75, C-100, C-24HC, C-27HC, C-75HC and C-100HC

	Catalog No.	Model No.	Description	Replacement	
				Blade(s)	Holder*
	92485	T-403	P-Trap Cutter, 3"	92835	92900
	92490	T-404	P-Trap Cutter, 3 1/2"	92840	92900
	92495	T-406	Spear Blade	92850	92915
	92500	T-407	Retrieving Auger	—	—
	92505	T-408	Sawtooth Cutter	92890	92915
	51762	T-409	H-D Bulb Auger	—	—
	92510	T-411	Double Cutter, 2"	92815	92905
	92515	T-412	Double Cutter, 2 1/2"	92820	92905
	92520	T-413	Double Cutter, 3"	92825	92910
	92525	T-414	Double Cutter, 4"	92830	92910
	92530	T-416	Double Cutter, 6"	92855	92910
	92535	T-432	3-Blade Cutter, 2"	92860	92895
	92540	T-433	3-Blade Cutter, 3"	92865	92895
	92545	T-434	3-Blade Cutter, 4"	92870	92895
	92550	T-436	3-Blade Cutter, 6"	92875	92895

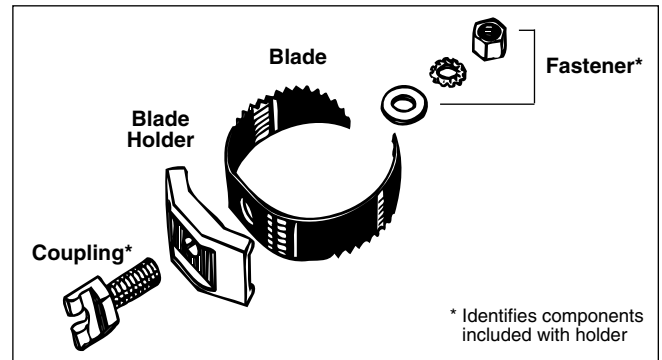


Figure 2 – Tool Assembly

### Machine Assembly

**⚠ WARNING**



To prevent serious injury, proper assembly of the Drain Cleaner is required. The following procedures should be followed:

#### Instructions for Installing Handle

Raise the stair climber to the upper position by pulling out the locking pin and lifting the stair climber by the cross member until the pin locks into the upper position (Figure 3). Insert handle through the motor table rail supports and through the two holes on rear support (Figure 4). Insert the two hairpin cotter fasteners through the holes in the bottom of the handle (Figure 5). Adjust handle to desired height. Securely tighten the two T-shaped mounting knobs on rear support. Lower the stair climber.



Figure 3 – Raising Stair Climbers