


Coupling - Eccentric Reducer

(Continued)

Socket x Socket

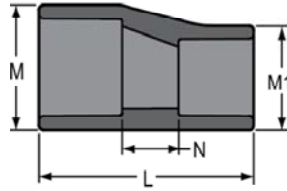


Part Number	Size	L	M	M1	N	Approx. Wt. (Lbs.)
829-760FE ^{2*}	16X10	37	17- 1/2	11-15/16	23- 3/4	59.25
829-762FE ^{2*}	16X12	33	17- 1/2	14- 1/8	18- 3/4	64.09
829-764FE ^{3*}	16X14	24- 5/8	17- 1/2	15- 1/2	9- 5/8	46.25
829-786FE ^{5*}	18X6	69- 1/4	19-11/16	7- 1/2	57	121.36
829-788FE ^{4*}	18X8	60-15/16	19-11/16	9- 5/8	47-11/16	121.91
829-790FE ^{3*}	18X10	52	19-11/16	11-15/16	37- 3/4	109.42
829-792FE ^{3*}	18X12	48	19-11/16	14- 1/8	32- 3/4	109.80
829-794FE ^{2*}	18X14	39- 5/8	19-11/16	15- 1/2	23- 5/8	97.05
829-796FE ^{3*}	18X16	28- 5/8	19-11/16	17-11/16	11- 5/8	66.92

* Fabricated

Eccentric Reducer Coupling Footnotes

Multi-Step Configurations


The number after the part number denotes steps listed below.

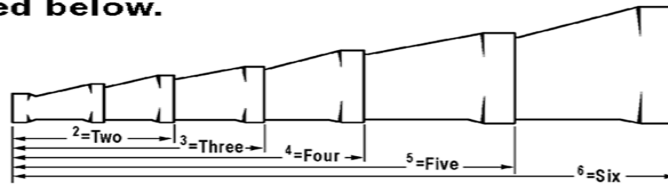

Example: 829-626FE² (2 = 2 Step)

Coupling

Fipt x Fipt

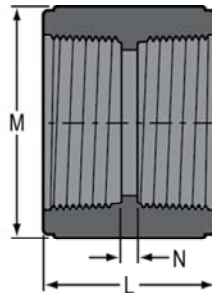

Part Number	Size	L	M	N	Approx. Wt. (Lbs.)
830-002	1/4	1-11/32	13/16	5/32	.02
830-003	3/8	1-15/32	1	9/32	.03
830-005	1/2	1- 5/8	1- 9/32	1/4	.06
830-007	3/4	1-11/16	1- 5/8	3/32	.08
830-010	1	2- 3/32	1-15/16	1/8	.14
830-012	1-1/4	2- 3/16	2- 9/32	3/16	.20
830-015	1-1/2	2- 7/32	2- 5/8	3/16	.28