



## COMMERCIAL ELECTRIC REPLACEMENT PARTS LIST

### ElectriFLEX HD™ (Heavy Duty) Commercial Electric Water Heater CEHD SERIES Immersion Thermostat Models



**CEHD(50,80,120)(A)**

Includes Hydrojet®  
Total Performance System

**Effective: May, 2019**  
**ECO 8264**


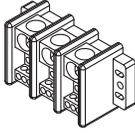
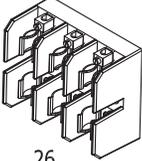


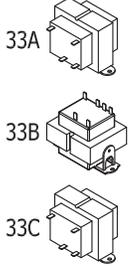
**NOTE: BOTH MODEL AND SERIAL  
NUMBERS ARE REQUIRED FOR  
ORDERING REPLACEMENT PARTS**

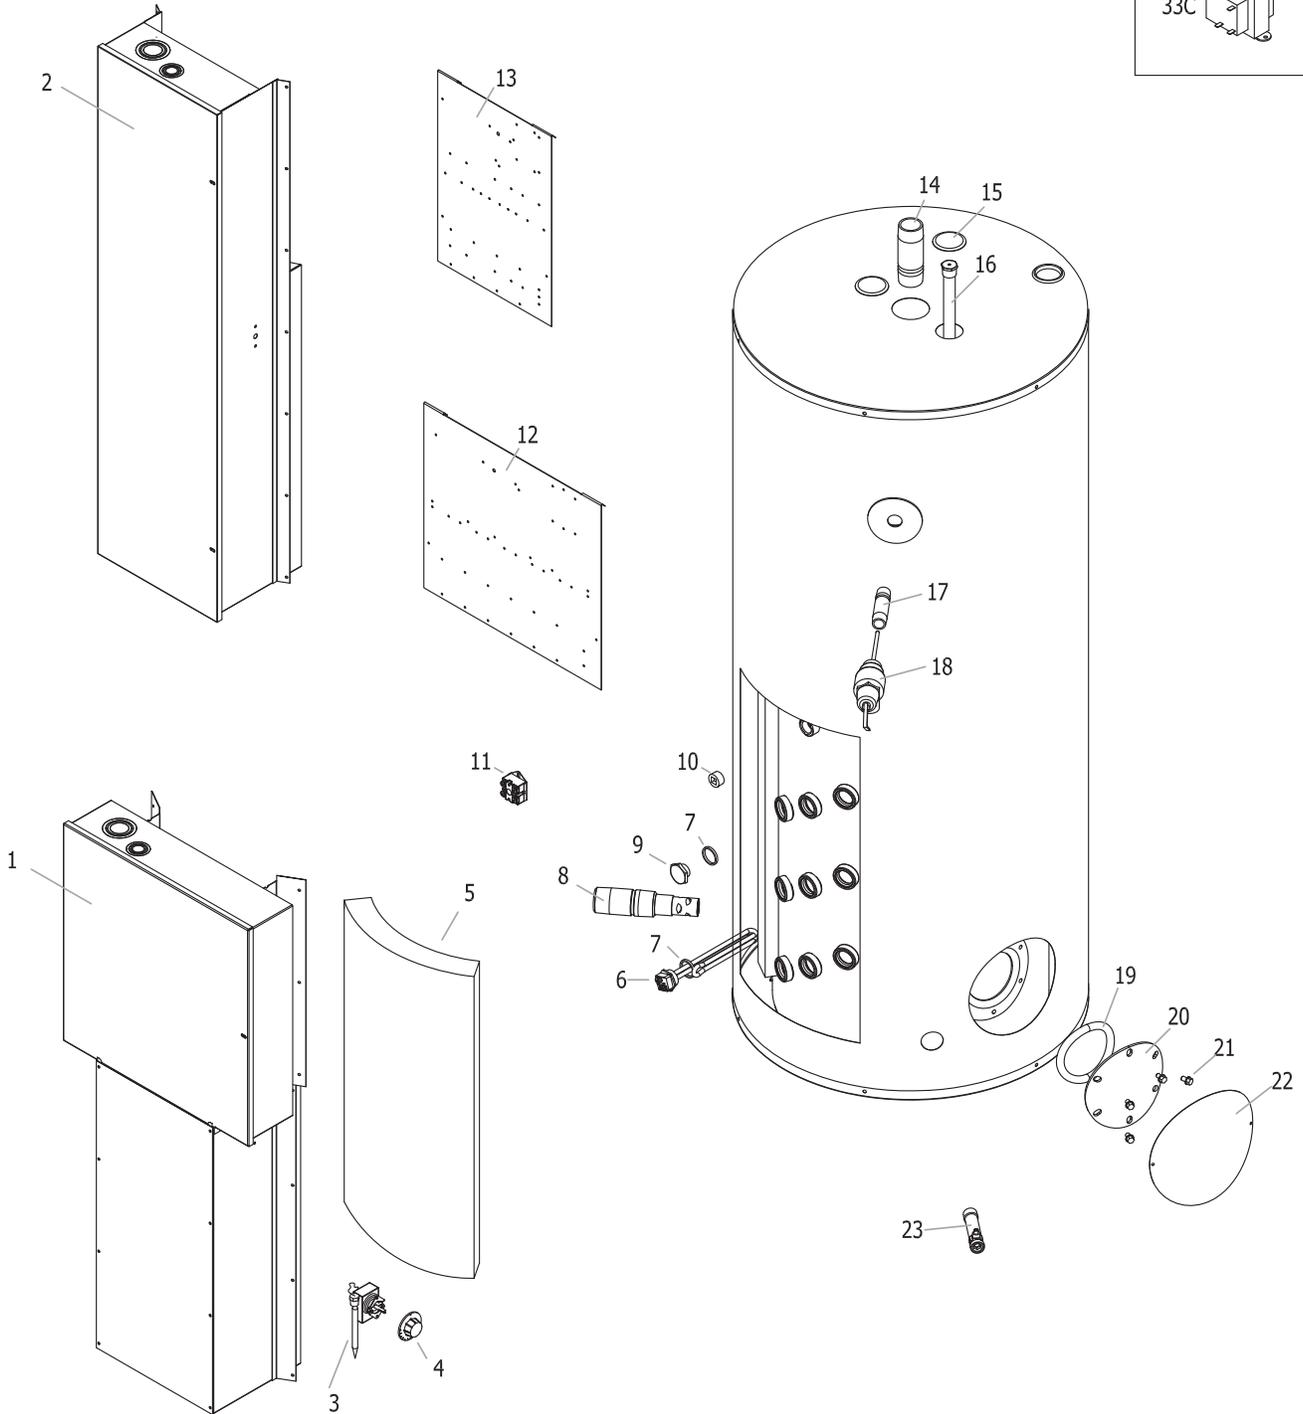
Dimensions and specifications  
subject to change without notice.



As required by the state of California Proposition 65.

CONTROL PANEL PARTS

CONTACTORS	TERMINAL BLOCKS	FUSE BLOCKS			FUSES			GROUND LUG	TRANSFORMER
 <p>24</p>	 <p>25</p>	 <p>26</p>	 <p>27</p>	 <p>28</p>	 <p>29 30 31</p>	 <p>32</p>	 <p>33A 33B 33C</p>		



Item	Description	Model	Model	Model
		CEHD50(A)	CEHD80(A)	CEHD120(A)
1	Large Control Box	239-50581-00	239-50581-00	239-50581-00
2	Small Control Box	239-50576-00	239-50576-00	239-50576-00
3	Thermostat	264-33460-00	264-33460-00	264-33460-00
4	Thermostat Dial	264-33459-00	264-33459-00	264-33459-00
5	Element Insulation	226-50896-00	226-50896-00	226-50896-00
6	Heating Element	See Element Table	See Element Table	See Element Table
7	Element Gasket	223-34019-00	223-34019-00	223-34019-00
8	Inlet Diptube	229-44731-00	229-44731-00	229-44731-00
9	Element Plug	223-34020-00	223-34020-00	223-34020-00
10	3/4 NPT Plug	239-11638-00	239-11638-00	239-11638-00
11	High Limit Switch	219-50925-00	219-50925-00	219-50925-00
12	Large Control Panel	239-50682-00	239-50682-00	239-50682-00
13	Small Control Panel	239-50575-00	239-50575-00	239-50575-00
14	Outlet Nipple	229-40913-01	229-40913-06	229-40913-06
15	Hole Cover	239-50576-00	239-50576-00	239-50576-00
16	Magnesium Anode	224-47782-06	224-47782-08	224-44782-08
	Aluminum Anode #	224-38508-01	224-38508-01	224-38508-01
	A420 Aluminum Anode #	224-49559-04	224-49559-04	229-49559-04
17	3/4 NPT Nipple	229-32762-09	229-32762-09	229-32762-09
18	Temperature & Pressure Relief Valve	230-30246-00	230-30246-00	230-30246-00
19	Cleanout O-Ring	205-18427-00	205-18427-00	205-18427-00
	Cleanout Gasket (ASME)	205-32942-00	205-32942-00	205-32942-00
20	Cleanout Cover	205-18428-00	205-18428-00	205-18428-00
	Cleanout Cover (ASME)	205-32941-00	205-32941-00	205-32941-00
21	Cleanout Screw 5/16-18x3/4 (6 Req'd)	239-32970-00	239-32970-00	239-32970-00
22	Jacket Cleanout Cover	243-20299-00	243-20299-00	243-20299-00
23	Drain Valve	265-42351-02	265-42351-02	265-42351-02
24	Contactora	264-41988-01	264-41988-01	264-41988-01
25	Terminal Block	264-32245-00	264-32245-00	264-32245-00
26	600V Fuse Block (3 Pole)	264-41975-00	264-41975-00	264-41975-00
27	Fuse Block (3 Pole)	264-32264-00	264-32264-00	264-32264-00
28	Fuse Block (2 Pole)	264-53307-00	264-53307-00	264-53307-00
29	Fuse "C" Class (40 A)	264-32267-00	264-32267-00	264-32267-00
	Fuse "C" Class (50 A)	264-32268-00	264-32268-00	264-32268-00
	Fuse "C" Class (60 A)	264-32269-00	264-32269-00	264-32269-00
30	Fuse "J" Class (30 A)	264-32270-00	264-32270-00	264-32270-00
	Fuse "J" Class (40 A)	264-32271-00	264-32271-00	264-32271-00
	Fuse "J" Class (50 A)	264-32272-00	264-32272-00	264-32272-00
	Fuse "J" Class (60 A)	264-32273-00	264-32273-00	264-32273-00
31	Fuse "CC" Class (3 A)	264-53306-00	264-53306-00	264-53306-00
32	Ground Lug	264-32250-00	264-32250-00	264-32250-00
33A	Transformer (208V/240V/480V)*	264-41994-01	264-41994-01	264-41994-01
	Transformer (277V/380V/415V)*	264-41994-02	264-41994-02	264-41994-02
33B	Transformer (208V/240V/480V)*	264-41995-01	264-41995-01	264-41995-01
	Transformer (277V/380V/415V)*	264-41995-02	264-41995-02	264-41995-02
33C	Transformer (600V)*	264-41996-00	264-41996-00	264-41996-00

# Anode may need to be cut to length

\* 32A for 3 element models only, 32B for 6 and 9 element models. 32C for all 600V models.

#### Heating Elements (Incoloy)

Wattage	208 Volt	240 Volt	277 Volt	380 Volt	415 Volt	480 Volt	600 Volt
2000W	220-42545-14	220-42545-02	220-42547-07	220-42549-04	220-42551-12	220-42553-01	220-44340-01
3000W	220-42545-12	220-42545-15	220-42545-15	220-42551-10	220-42551-13	220-42553-08	220-44340-02
4000W	220-42545-17	220-42545-12	220-42547-03	220-42551-16	220-42551-14	220-42553-03	220-44340-03
4500W	220-42545-19	220-51328-07	220-42547-12	220-42551-17	220-42551-15	220-42553-11	220-44340-04
5000W	220-42543-04	220-42545-18	220-42547-15	220-42551-18	220-42551-16	220-42553-12	220-44340-05
6000W	220-42543-06	220-42545-19	220-42547-14	220-42549-05	220-42551-18	220-42553-14	220-44340-06



## United States

---

**Sales** 800-523-2931

**Technical Support** 800-334-3393

**Email** [techserv@bradfordwhite.com](mailto:techserv@bradfordwhite.com)

**Warranty** 800-531-2111

**Email** [warranty@bradfordwhite.com](mailto:warranty@bradfordwhite.com)

**Service Parts** 800-538-2020

**Email** [parts@bradfordwhite.com](mailto:parts@bradfordwhite.com)

## Canada

---

**Sales & Technical Support** 866-690-0961 905-03-0600

**Fax** 905-636-0666

**Warranty** [bwccwarranty@bradfordwhite.com](mailto:bwccwarranty@bradfordwhite.com)

**Technical Support** [bwccotech@bradfordwhite.com](mailto:bwccotech@bradfordwhite.com)

**Service Parts** [orders@bradfordwhitecanada.com](mailto:orders@bradfordwhitecanada.com)

**Orders** [ca.orders@bradfordwhite.com](mailto:ca.orders@bradfordwhite.com)

For U.S. and Canada field service,  
contact your professional installer or  
local Bradford White sales representative.

## International

---

**General Contact** [international@bradfordwhite.com](mailto:international@bradfordwhite.com)