MASTERPIECE® SERIES









FEATURES & BENEFITS

- 15" telescopic design rises to capture heat, smoke, grease, and steam
- Flexible discharge design gives 5 configurations to maximize space
- Remote or inline blowers to reduce noise, integral for top performance
- Features automatic mode, delay shut-off, and check filter light
- Recirculation kit available, use with induction/electric cooktops only

BLOWERS AND TRANSITIONS

Remote Blowers

VTR630P - 600 CFM

VTR1030P - 1000 CFM

VTR1330P - 1300 CFM

Inline Blowers

VTI610P - 600 CFM

VTI1010P - 1000 CFM

Flexible Blower

VTD600P - 600 CFM

Remote and Inline Blower Downdraft Transitions

CVTSIDE6 - 6" Side / Rear Transition

CVTSIDE8 - 8" Side / Rear Transition

CVTSIDE10 - 10" Side / Rear Transition

CVTFRONT6 - 6" Round Front Plate

CVTFRONT8 - 8" Round Front Plate

CVTFRONT10 - 10" Round Front Plate

CVDUCT2 - 2' Rectangular Duct

CVTRECT2 - Transition for Rectangular Duct

GENERAL PROPERTIES	
Operating Mode	Convertible: Ducted / Recirculating
Maximum CFM	Blower Sold Separately
Number of Speed Settings	3-Stage
Sones*	1.2 LS / 10.5 HS
Motor Location	External
Number of Lights	N/A
Bulb Type	N/A
Damper Included	No
Grease Filter Material	Washable Synthetic
Grease Filter Type	Multilayer Cassette
TECHNICAL DETAILS	
Current (A)	10 A
Volts (V)	120 V
Frequency (Hz)	60 Hz
Plug Type	120V-3 prong
Power Cord Length (in)	30"
DIMENSIONS & WEIGHT	
Overall Appliance Dimensions (Width of Canopy Included) (HxWxD) (in)	44 3/8" × 37" × 2 3/4"
Height of the Rise (in.)	15"
Diameter of Air Duct (in.) Internal	8"
Diameter of Air Duct (in.) External	6", 8" or 10"
Net Weight (lbs)	47 lbs
ACCESSORIES (REQUIRED)	
Blower (Sold Separately)	
WARRANTY	

ACCESSORIES (OPTIONAL)

Limited Warranty Parts and Labor

Recirculation Kit – Use with induction/electric cooktops only

UCVRECIRC

Replacement Charcoal Filters

UCVFILTER

Downdraft Gas Cooktop Seal Trim Kit (Required for Installation with Gas Cooktops)

2 Year

UCV36ST

5 ft. Electrical Panel Extension Cable

EXTNCE5

Roofplates

RFPLT600P - For Use with Remote Blower VTR630P


RFPLT1000P – For Use with 1000 CFM Remote Blower VTR1030P and 1300 CFM Blower VTR1330P


Page 1 of 12 03 / 18

^{*}Sound test performed as per HVI standards at independent lab



HOOD DIMENSIONS

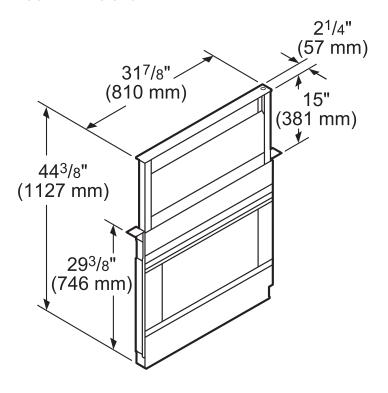

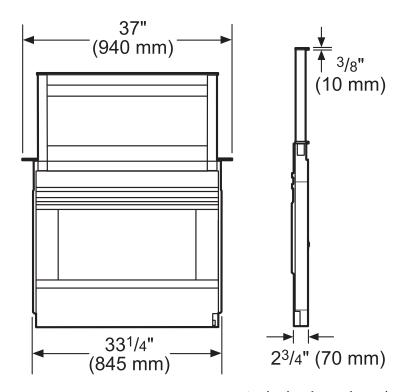


measurements in inches (mm)


Page 2 of 12 03 / 18



CUTOUT AND CLEARANCE DIMENSIONS

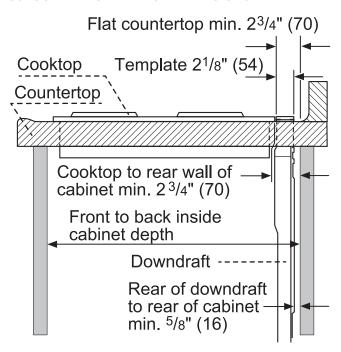


measurements in inches and (mm)

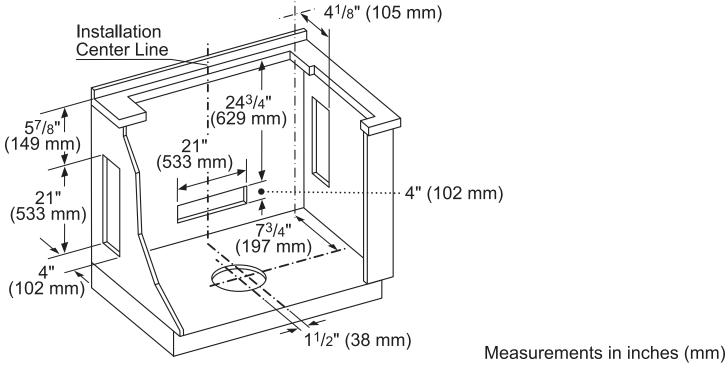


Page 3 of 12 03 / 18



ELECTRIC OR INDUCTION COOKTOP CUTOUT AND CLEARANCE DIMENSIONS

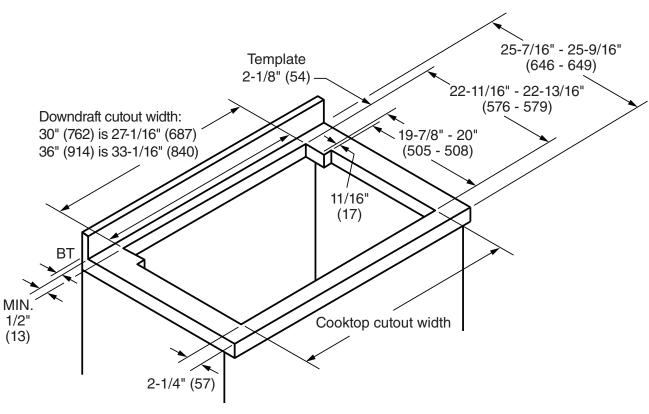

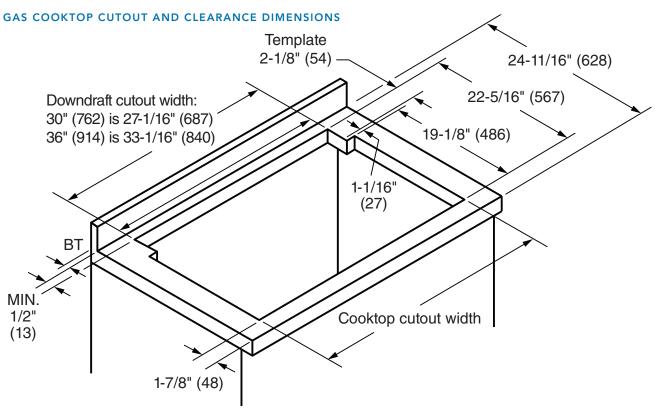

Page 4 of 12 03 / 18


MASTERPIECE® SERIES




REMOTE OR INLINE BLOWER INSTALLATION

AVAILABLE REMOTE BLOWERS

VTR630P - 600 CFM

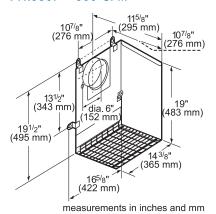


VTR1030P - 1000 CFM

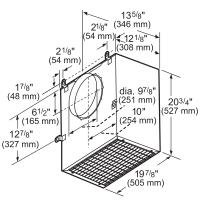

measurements in inches and mm


VTR1330P - 1300 CFM

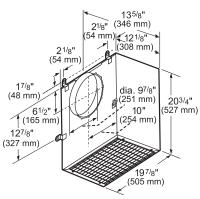

measurements in inches and mm


AVAILABLE INLINE BLOWERS

VTI610P - 600 CFM

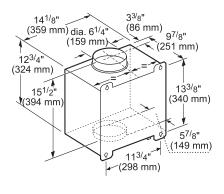

measurements in inches and mm


VTI1010P - 1000 CFM

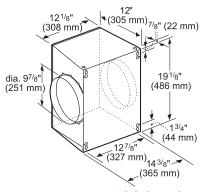

measurements in inches and mm


AVAILABLE FLEXIBLE BLOWER

VTD600P - 600 CFM

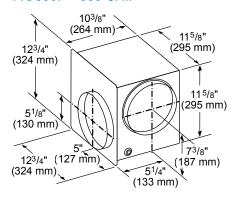


AVAILABLE ROOFPLATES

RFPLT600P – FOR USE WITH REMOTE BLOWER VTR630P

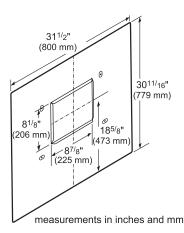

RFPLT1000P - FOR USE WITH 1000 CFM REMOTE BLOWER VTR1030P AND 1300 CFM BLOWER VTR1330P

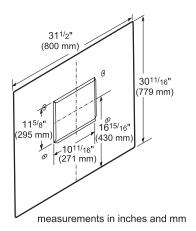


Page 5 of 12 03 / 18

MASTERPIECE® SERIES




REMOTE OR INLINE BLOWER INSTALLATION CONTINUED

BLOWER DOWNDRAFT TRANSITIONS

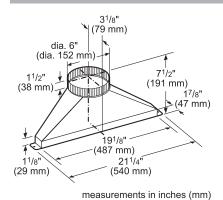

CVTSIDE6


6" round transition allows for left, right, or rear venting. Use with inline and remote blowers, and ducting with 6" round duct connections.

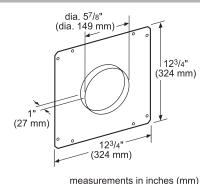

0

CVTFRONT6


6" front rough-in plate allows for front venting. Use with inline and remote blowers, and ducting with 6" round duct connections.

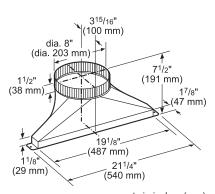



CVTSIDE8

8" round transition allows for left, right, or rear venting. Use with VTD600P blower as an inline installation, and ducting with 8" round duct connections.

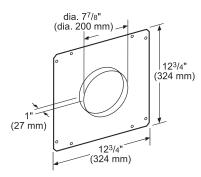


measurements in inches (mm)



CVTFRONT8


8" round front plate allows for front downward venting. Use with VTD600P blower as an inline installation, and ducting with 8" round duct connections.

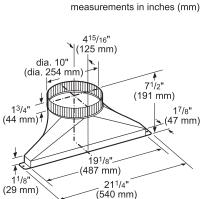



CVTSIDE10

10" round transition allows for left, right, or rear venting. Use with inline and remote blowers, and ducting with 10" round duct connections.

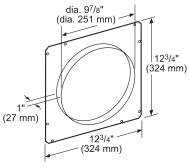



CVTFRONT10

10" front rough-in plate allows for front venting. Use with inline and remote blowers, and ducting with 10" round duct connections.






measurements in inches (mm)

measurements in inches (mm)

CVDUCT2

Rectangular 2 ft. long x 1 7/8 in deep x 19 in wide duct. CVDUCT2 transition required to directly connect CVDUCT2 to sides or rear of downdraft housing. Can be used as an extension to exhaust through a cabinet or wall, and can be cut to modify length. For use with installation of inline or remote blower applications with CVTSIDE6, CVTSIDE8, and CVTSIDE10.

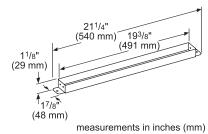




Transition required to connect CVDUCT2 rectangular duct to downdraft housing at left, right, or rear

Page 6 of 12 03 / 18



REMOTE OR INLINE BLOWER INSTALLATION CONTINUED

OPTIONAL ACCESSORIES

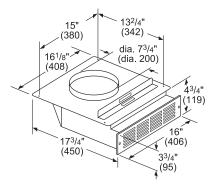




RECIRCULATION KIT UCVRECIRC

Includes 1 charcoal filter and 1 metal grill vent plate (blower sold separately). Use with induction/electric cooktops only

Measurements in inches and (mm)

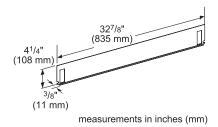



DOWNDRAFT GAS COOKTOP SEAL TRIM KIT UCV36ST

Includes trim, seal, metal grill, and fasteners. Required for installations with 36" gas cooktops.



REPLACEMENT CHARCOAL FILTER UCVFILTER

Includes 1 replacement charcoal filter for UCVRECIRC recirculation kit



EXTNCE5


Extends electrical panel cable 5-ft. to connect remotely located electrical panel to downdraft. Ability to connect two cables together to make a 10-foot cable.

Page 7 of 12 03 / 18

MASTERPIECE® SERIES




FLEXIBLE BLOWER INSTALLATION - FRONT EXHAUST EXAMPLE

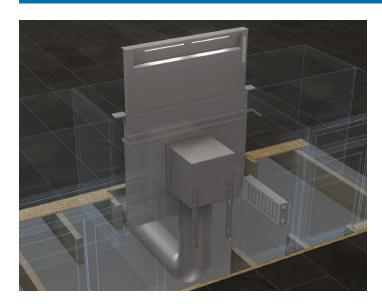

APPLICATION

- Front downward application with space under floor line for ductwork*
- Integral blower with front downward application can be used with optional recirculation kit*
- Integral blower can rotate for left or right exhaust
- Elbow and ductwork are not included

REQUIRED BLOWER

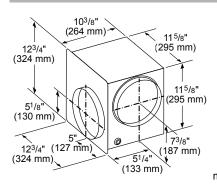


VTD600P - 600 CFM

600 CFM flexible blower can be installed as an integrated or inline blower

measurements in inches (mm)

OPTIONAL ACCESSORIES

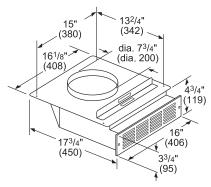




RECIRCULATION KIT UCVRECIRC

Includes 1 charcoal filter and 1 metal grill vent plate (blower sold separately). Use with induction/electric cooktops only

Measurements in inches and (mm)

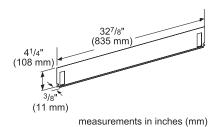



Includes trim, seal, metal grill, and fasteners. Required for installations with 36" gas cooktops.



REPLACEMENT CHARCOAL FILTER UCVFILTER

Includes 1 replacement charcoal filter for UCVRECIRC recirculation kit



EXTNCE5


Extends electrical panel cable 5-ft. to connect remotely located electrical panel to downdraft. Ability to connect two cables together to make a 10-foot cable.

Page 8 of 12 03 / 18

^{*}For only front downward ducting applications, electrical panel must be remotely mounted. Optional 5' extension cable EXTNCE5 accessory is available to connect remotely placed electrical panel to downdraft. Refer to installation manual.




FLEXIBLE BLOWER INSTALLATION - FRONT EXHAUST WITH FLEXIBLE BLOWER BELOW FLOOR LINE EXAMPLE

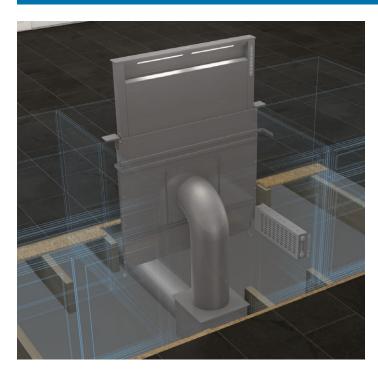


APPLICATION

- Front downward application with space under floor line for ductwork*
- Elbow and ductwork are not included

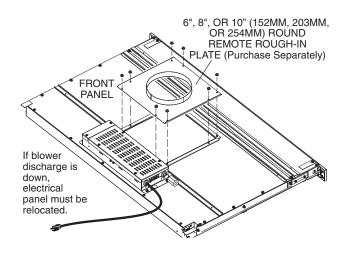

REQUIRED BLOWER

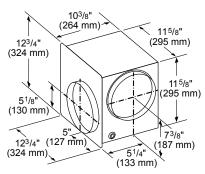


VTD600P - 600 CFM

600 CFM flexible blower can be installed as an integrated or inline blower

measurements in inches (mm)

REQUIRED ACCESSORIES

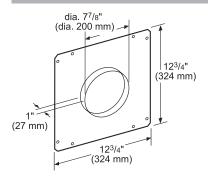




CVTFRONT8

8" round front plate allows for front downward venting. Use with VTD600P blower as an inline installation, and ducting with 8" round duct connections.

measurements in inches (mm)

OPTIONAL ACCESSORIES



measurements in inches (mm)



DOWNDRAFT GAS COOKTOP SEAL TRIM KIT UCV36ST

Includes trim, seal, metal grill, and fasteners. Required for installations with 36" gas cooktops.



EXTNCE5

Extends electrical panel cable 5-ft. to connect remotely located electrical panel to downdraft. Ability to connect two cables together to make a 10-foot cable.

Page 9 of 12 03 / 18

^{*}For front downward ducting applications, electrical panel must be remotely mounted. Optional 5' extension cable EXTNCE5 accessory is available to connect remotely placed electrical panel to downdraft. Refer to installation manual.


MASTERPIECE® SERIES




FLEXIBLE BLOWER INSTALLATION - REAR, LEFT OR RIGHT SIDE EXHAUST EXAMPLE



Rear Exhaust

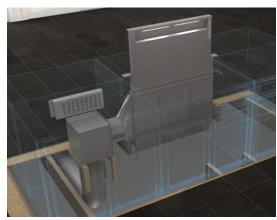

Left Side Exhaust

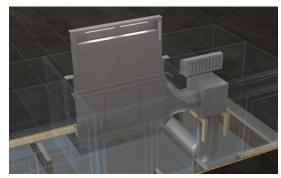

Right Side Exhaust


*For only front downward ducting applications, electrical panel must be remotely mounted. Electrical panel can still be remotely mounted in other exhaust configurations if desired. Optional 5' extension cable EXTNCE5 accessory is available to connect remotely placed electrical panel to downdraft. Refer to installation manual.

NOTE: Some applications may require deeper cabinets. Side and rear exhaust require at least 18" of clearance to fit the blower and/or ductwork. Refer to installation manual.

APPLICATION

- Rear, left or right side exhaust options to preserve precious kitchen storage space or if ducting is more convenient for these configurations*
- Requires at least 18" of clearance to fit the blower and transition
- Blower must be accessible for maintenance
- Elbow and ductwork are not included

REQUIRED BLOWER

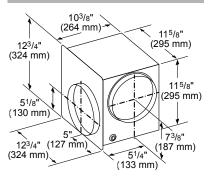


measurements in inches (mm)

VTD600P - 600 CFM

600 CFM flexible blower can be installed as an integrated or inline blower

RECILIRED ACCESSORY

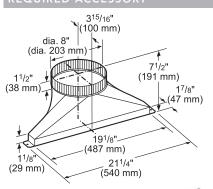


measurements in inches (mm)

CVTSIDE8

8" round transition allows for rear venting. Use with VTD600P blower as an inline installation, and ducting with 8" round duct connections.

OPTIONAL ACCESSORIES

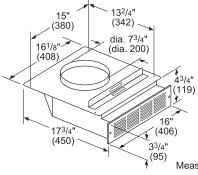



RECIRCULATION KIT UCVRECIRC

Includes 1 charcoal filter and 1 metal grill vent plate (blower sold separately). Use with induction/electric cooktops only

Measurements in inches and (mm)



REPLACEMENT CHARCOAL FILTER UCVFILTER

Includes 1 replacement charcoal filter for UCVRECIRC recirculation kit



DOWNDRAFT GAS COOKTOP SEAL TRIM KIT UCV36ST

Includes trim, seal, metal grill, and fasteners. Required for installations with 36" gas cooktops.




EXTNCE5

Extends electrical panel cable 5-ft. to connect remotely located electrical panel to downdraft. Ability to connect two cables together to make a 10-foot cable.


Page 10 of 12 03 / 18



FLEXIBLE BLOWER INSTALLATION - SIDE EXHAUST WITH SLIM 2' RECTANGULAR DUCT EXAMPLE

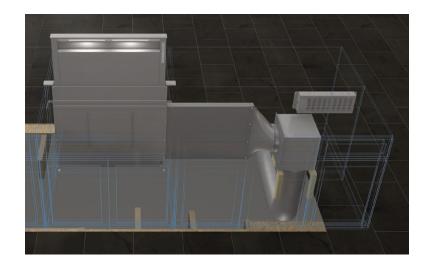

REQUIRED ACCESSORIES

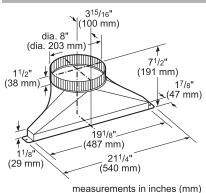



8" round transition to connect CVDUCT2 to VTD600P. Use with VTD600P blower as an inline installation, and ducting with 8" round duct connections.




24¹/₈" (613 mm) (62 mm) (52 mm) (484 mm)

measurements in inches (mm)

CVDUCT2

Rectangular 2 ft. long x 1 7/8 in deep x 19 in wide duct. CVDUCT2 transition required to directly connect CVDUCT2 to sides or rear of downdraft housing. Can be used as an extension to exhaust through a cabinet or wall, and can be cut to modify length. For use with installation of inline or remote blower applications with CVTSIDE6, CVTSIDE8, and CVTSIDE10.

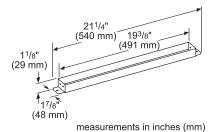



CVTRECT2


Transition required to connect CVDUCT2 rectangular duct to downdraft housing at left, right, or rear

*For only front downward ducting applications, electrical panel must be remotely mounted. Electrical panel can still be remotely mounted in other exhaust configurations if desired. Optional 5' extension cable EXTNCE5 accessory is available to connect remotely placed electrical panel to downdraft. Refer to installation manual.

APPLICATION

- Side exhaust option to preserve precious kitchen storage space or if ducting is more convenient for this configuration*
- A slim 2' rectangular duct is available to place flexible blower in areas such as unused corner in island or peninsula applications
- Blower must be accessible for maintenance
- Elbow and ductwork are not included

REQUIRED BLOWER

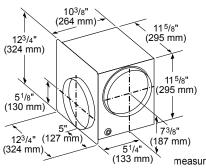


VTD600P - 600 CFM

600 CFM flexible blower can be installed as an integrated or inline blower

measurements in inches (mm)

OPTIONAL ACCESSORIES

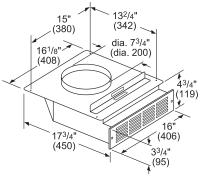



RECIRCULATION KIT UCVRECIRC

Includes 1 charcoal filter and 1 metal grill vent plate (blower sold separately). Use with induction/electric cooktops only

Measurements in inches and (mm)



REPLACEMENT CHARCOAL FILTER UCVFILTER

Includes 1 replacement charcoal filter for UCVRECIRC recirculation kit



DOWNDRAFT GAS COOKTOP SEAL TRIM KIT UCV36ST

Includes trim, seal, metal grill, and fasteners. Required for installations with 36" gas cooktops.




EXTNCE5

Extends electrical panel cable 5-ft. to connect remotely located electrical panel to downdraft. Ability to connect two cables together to make a 10-foot cable.

MASTERPIECE® SERIES





FLEXIBLE BLOWER INSTALLATION - RECIRCULATION EXAMPLE

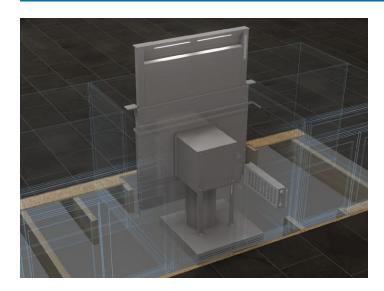


APPLICATION

- Allows for non-ducted downdraft installation by eliminating the need to exhaust to the exterior of the home*
- Recirculation module and metal grill vent plate placement can be rotated for flexible exhaust placement
- Elbow and ductwork are not included
- Use with induction/electric cooktops only

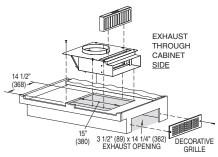


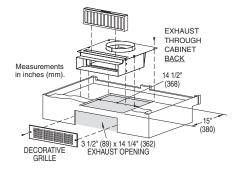

REQUIRED BLOWER

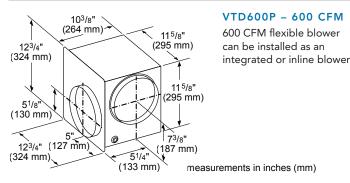

REQUIRED ACCESSORIES

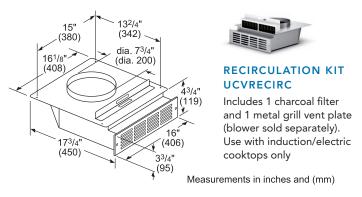

OPTIONAL ACCESSORIES



REPLACEMENT CHARCOAL FILTER UCVFILTER

Includes 1 replacement charcoal filter for UCVRECIRC recirculation kit



DOWNDRAFT GAS COOKTOP SEAL TRIM KIT UCV36ST

Includes trim, seal, metal grill, and fasteners. Required for installations with 36" gas cooktops.



EXTNCE5

Extends electrical panel cable 5-ft. to connect remotely located electrical panel to downdraft. Ability to connect two cables together to make a 10-foot cable.

*For front downward ducting applications, electrical panel must be remotely mounted. Optional 5' extension cable EXTNCE5 accessory is available to connect remotely placed electrical panel to downdraft. Refer to installation manual.

These warranties give you specific legal rights and you may have other rights that vary from state to state. Full warranty and limited warranty from date of installation. For complete warranty details, refer to your Use & Care manual, or ask your dealer.

Specifications are for planning purposes only. Refer to installation instructions and consult your countertop supplier prior to making counter opening. Consult with a heating and ventilation engineer for your specific ventilation requirements. For the most detailed information, refer to installation instructions accompanying product or write to Thermador indicating the model number. Specifications are correct at time of printing. Thermador reserves the right to change product specifications or design without notice. Some models are certified for use in Canada. Thermador is not responsible for products that are transported from the U.S. for use in Canada.

 $1\,800\,735\,4328 \mid USA\ THERMADOR.COM\mid CANADA\ THERMADOR.CA\mid @2018\ BSH\ HOME\ APPLIANCES\ CORPORATION.\ ALL\ RIGHTS\ RESERVED.\ APPLIANCES\ CORPORATION.\ APPLIANCE$

Page 12 of 12 03 / 18