

SPECIFICATION SHEET

# **DR80UAT Single-Stage Series**

UPFLOW/HORIZONTAL GAS FURNACE

80% A.F.U.E.† INPUT RATES 50-125 KBTU



#### **PRODUCT FEATURES**

- 80% residential Gas Furnace CSA certified
- 3 way multi poise design UF / HZ
- Diagnostics 7 Segment LED all units
- Direct spark ignition system for reliability and longevity
- Heat exchanger is removable for improved serviceability. Aluminized steel construction provides maximum corrosion resistance and thermal fatigue reliability.
- Solid doors provide quiet operation
- Low profile 34" cabinet ideal for space constrained installations
- Blower shelf design serviceable in all furnace orientations
- Hemmed edges on cabinets and doors
- 1/4 turn door knobs for tool less access
- Integrated Control board features dip switches for easy system set up
- QR code for quick access to product information from your smart phone or tablet
- Constant Torque electrically commutated motor
- Cabinet air leakage less than 2% at 1 inch H<sub>2</sub>O when tested in accordance with ASHRAE standard 193
- Solid bottom included

†A.F.U.E. (Annual Fuel Utilization Efficiency) calculated in accordance with Department of Energy test procedures.














# **TABLE OF CONTENTS**

Standard & Optional Equipment	3
Model Features/Physical Data & Specifications	
Model Number Identification	5
Dimensional Data	6-7
Blower Performance Data	8
Accessories	9
Limited Warranty	10



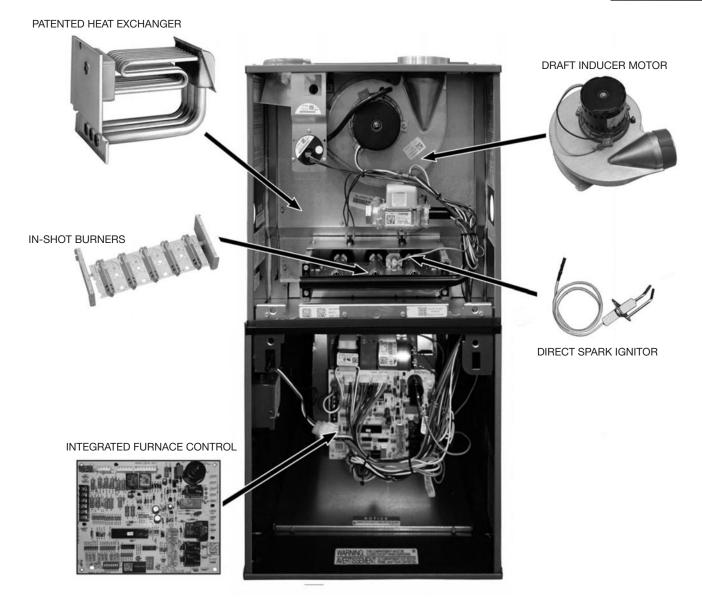

#### **STANDARD EQUIPMENT**

Completely assembled and wired; induced draft; pressure switch; redundant main gas control; blower compartment door safety switch; solid state time on/time off blower control; limit control; manual shutoff valve, pressure regulator for natural and L.P. (propane) gas; transformer; direct drive multi-speed blower motor. Furnaces are equipped with cooling/heating relay and transformer (40VA) ready for air conditioning applications. (Please note: a thermostat is not included as standard equipment.) Flame sensor diagnostics.

#### CONSTANT TORQUE MOTOR

#### **OPTIONAL EQUIPMENT**

Side and bottom filter frame assembly. Return air cabinet for all sizes. NOTE: Furnace is not listed for use with fuels other than natural or L.P. (propane) gas.

The complete terms of limited and other warranties are available at our sales office, or through local installer.

All models can be converted by a qualified Durastar distributor or local service dealer to use L.P. (propane) gas without changing burners. Factory approved kits must be used to convert from natural to L.P. (propane) gas and may be ordered as optional accessories from a Durastar parts distributor.

For L.P. (propane) operation, refer to Conversion Kit Index Form. NOTE: For natural and L.P. (propane) gas models, direct spark ignition is 100% safety lockout type.

# WARNING

THIS FURNACE IS NOT APPROVED
OR RECOMMENDED
FOR USE IN MOBILE HOMES



#### **Model Features**

- 80% residential Gas Furnace CSA certified
- 3 way multi poise design UF / HZ
- Diagnostics 7 Segment LED all units
- Ignition System DSI for reliability and longevity
- Heat exchanger is removable for improved serviceability.
   Aluminized steel construction provides maximum corrosion resistance and thermal fatigue reliability.
- Solid doors provide quiet operation
- Low profile 34" cabinet ideal for space constrained installations

- Blower shelf design serviceable in all furnace orientations
- Hemmed edges on cabinets and doors
- 1/4 turn door knobs for tool less access
- Integrated Controls board features dip switches for easy system set up
- QR code for quick access to product information from your smart phone or tablet
- Constant Torque electrically commutated motor

## **Physical Data and Specifications**

MODEL NUMBERS DR80UAT SERIES	0501314SA	0751417SA	0751421SA	1001521SA	1251524SA
Input-BTU/Hr [kW] ②	50,000 [15]	75,000 [22]	75,000 [22]	100,000 [29]	125,000 [37]
Heating Capacity BTU/Hr [kW] ①	40,000 [12]	60,000 [18]	60,000 [18]	80,000 [23]	100,000 [29]
Heat Ext. Static Pressure [kPa]	.18 [.05]	.20 [.05]	.20 [.05]	.28 [.07]	.28 [.07]
Blower (D x W) [mm]	11 x 6 [279 x 152]	11 x 7 [279 x 178]	11 x 7 [279 x 178]	11 x 10 [279 x 254]	11 x 10 [279 x 254]
Motor H.PSpeed- PSC Type [W]	<sup>1</sup> / <sub>2</sub> -5 Spd Constant Torque [373]	<sup>1</sup> / <sub>2</sub> -5 Spd Constant Torque [373]	<sup>3</sup> /4-5 Spd Constant Torque [560]	<sup>3</sup> /4-5 Spd Constant Torque [560]	<sup>3</sup> /4-5 Spd Constant Torque [560]
Min. Circuit Ampacity	8	8	9	10	11
Min. Overload Protection Device	15	15	15	15	15
Max. Overload Protection Device	15	15	15	15	15
Heating Speed	Med-Low	Med	Med	Med-Low	Med
Cooling Speed	High	High	High	High	High
Cooling CFM @ Rating Point [L/s]	1305 [616]	1402 [662]	1608 [759]	1840 [868]	1934 [913]
Max. E.S.P. (In. W.C.) [kPa]	0.9 [.22]	0.9 [.22]	0.9 [.22]	0.9 [.22]	0.9 [.22]
Temperature Rise Range °F [°C]	25-55 [13.9-30.6]	25-55 [13.9-30.6]	25-55 [13.9-30.6]	35-65 [19.4-36.1]	35-65 [19.4-36.1]
Max. Outlet Air Temp. °F [°C]	155 [68.3]	155 [68.3]	160 [71.1]	180 [82.2]	165 [73.8]
Approx. Shipping Weight (Lbs.) [kg]	110 [50]	125 [57]	140 [64]	140 [64]	150 [68]
AFUE ①	80.0%	80.0%	80.0%	80.0%	80.0%

NOTES: All models are 115V, 60HZ, 1 Ph. Gas connection size for all models is 1/2" [12 mm] N.P.T.

This furnace does not meet air district requirements of 14 ng/J NOx emissions limit, and thus is subject to a mitigation fee of up to \$450. This furnace is not eligible for the Clean Air Furnace Rebate Program: www.CleanAirFurnaceRebate.com.

This furnace is to be installed for propane firing only in air districts requiring 14 ng/J NOx emission limits. Operating in natural gas mode is in violation of these Rules.

① In accordance with D.O.E. test procedures.

② See Conversion Kit Index Form for high altitude derate.





# **Model Number Identification**

DR	<u>80</u>	<u>U</u>	<u>A</u>	<u>T</u>	<u>050</u>	<u>1</u>	<u>3</u>	<u>14</u>	<u>s</u>	<u>A</u>
Durastar	80 = 80% AFUE	Configuration Upflow/ Horizontal	Revision R&D - A	Motor - Constant Torque	Input <u>BTU/HR [kW]</u> 050 = 50,000 [14.7] 075 = 75,000 [22.0] 100 = 100,000 [29.0] 125 = 125,000 [37.0]	Stage - Single	3 = Up to 3 Ton 4 = 21/2 to 4 Ton 5 = 31/2 to 5 Ton	Cabinet Width 14 = 14" 17 = 17.5" 21 = 21" 24 = 24.5"	S = Standard	Revision- Marketing (A – First Time Release)



# **Upflow Application**

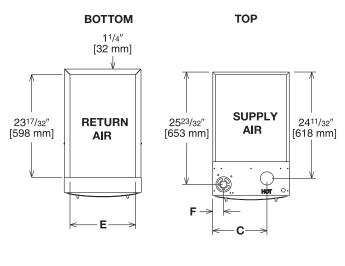

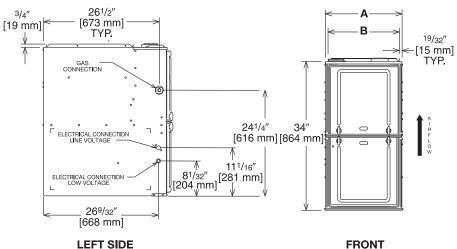

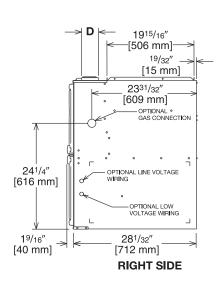


Illustration ST-A1220-04-00 FIGURE 1

## **Dimensional Data: Upflow Model**

								MINIMU	JM CLEA	RANCE (II	N.) [mm]		SHIP
MODEL	A	В	C	D	E	F	LEFT SIDE	RIGHT SIDE	BACK	ТОР	FRONT	VENT	WGTS. (LBS.) [kg]
050	14 [356]	1227/32 [326]	105/8 [270]	1	111/2 [292]	17/8 [48]	0	4 [102] ②	0	1 [25]	3 [76]	6 [152] ③	110 [50]
0751417	171/2 [445]	16 <sup>11</sup> /32 [415]	123/8 [314]	1	15 [381]	21/2 [64]	0	3 [76] ②	0	1 [25]	3 [76]	6 [152] ③	125 [57]
0751421/ 100	21 [533]	19 <sup>27</sup> /32 [504]	14 <sup>1</sup> /8 [359]	1	18 <sup>1</sup> / <sub>2</sub> [470]	21/2 [64]	0	0	0	1 [25]	3 [76]	6 [152] ③	140 [64]
125	241/2 [622]	2311/32 [593]	15 <sup>7</sup> /8 [403]	1	22 [559]	21/2 [64]	0	0	0	1 [25]	3 [76]	6 [152] ③	150 [68]


NOTES: ① May require a 3" [76 mm] to 4" [102 mm] or 3" [76 mm] to 5" [127 mm] adapter.

2 May be 0" [0 mm] with type B vent.
3 May be 1" [25 mm] with type B vent.

Furnaces must be vented in accordance with the National Fuel Gas Code, ANSI Z223.1 and in accordance with local codes.



# **Horizontal Application**

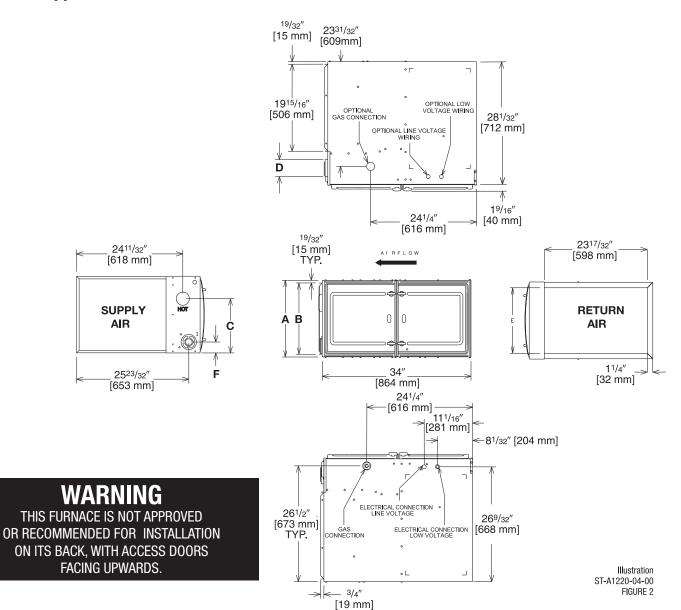

### **Dimensional Data: Horizontal Model**

								MINIMU	M CLEAF	RANCE (IN	l.) [mm]		SHIP
MODEL	A	В	C	D	E	F	SUPPLY AIR SIDE	RETURN AIR SIDE	BACK	ТОР	FRONT	VENT	WGTS. (LBS.) [kg]
050	14 [356]	12 <sup>27</sup> /32 [326]	105/8 [270]	1	11 <sup>1</sup> / <sub>2</sub> [292]	1 <sup>7</sup> /8 [48]	4 [102] ②	4 [102] ②	0	1 [25]	3 [76]	6 [152] ③	110 [50]
0751417	171/2 [445]	16 <sup>11</sup> /32 [415]	123/8 [314]	1	15 [381]	21/2 [64]	3 [76] ②	3 [76] ②	0	1 [25]	3 [76]	6 [152] ③	125 [57]
0751421/ 100	21 [533]	1927/32 [504]	141/8 [359]	1	181/2 [470]	21/2 [64]	0	0	0	1 [25]	3 [76]	6 [152] ③	140 [64]
125	241/2 [622]	2311/32 [593]	157/8 [403]	1	22 [559]	21/2 [64]	0	0	0	1 [25]	3 [76]	6 [152] ③	150 [68]

NOTES: ① May require a 3" [76 mm] to 4" [102 mm] or 3" [76 mm] to 5" [127 mm] adapter.

2 May be 0" [0 mm] with type B vent.
3 May be 1" [25 mm] with type B vent.

Furnaces must be vented in accordance with the National Fuel Gas Code, ANSI Z223.1 and in accordance with local codes.



# **Blower Performance Data**

	AIR FLOW PERFORMANCE - DR80UAT (Upflow) SERIES MODELS										
MODEL	MOTOR H.P. [W] BLOWER SIZE	SPEED TAP								a]	
	IN [mm]		0.1 [.02]	0.2 [.05]	0.3 [.07]	0.4 [.10]	0.5 [.12]	0.6 [.15]	0.7 [.17]	0.8 [.19]	0.9 [.22]
		LOW	894	775	655	595	533	496	462	423	357
	1/2 [373]	MED. LOW	971	912	875	839	804	758	713	684	644
0501314	11 x 6	MEDIUM	1117	1081	1051	1024	995	973	938	908	878
	[279 x 152]	MED. HIGH	1326	1291	1275	1240	1204	1171	1144	1114	1077
		HIGH	1440	1432	1405	1382	1353	1322	1305	1272	1251
		LOW	1054	1014	964	911	860	797	711	657	606
	1/2 [373]	MED. LOW	1363	1318	1275	1230	1189	1129	1091	1053	1012
0751417	11 x 7	MEDIUM	1447	1417	1366	1329	1288	1250	1215	1176	1137
	[279 x 178]	MED. HIGH	1553	1521	1478	1444	1407	1372	1332	1259	1264
		HIGH	1616	1574	1547	1508	1478	1438	1402	1375	1341
		LOW	1176	1133	1095	1048	1000	951	908	861	810
	3/4 [559]	MED. LOW	1353	1312	1267	1236	1186	1149	1106	1079	1016
0751421	11 x 7	MEDIUM	1400	1346	1307	1276	1225	1181	1145	1103	1069
	[279 x 178]	MED. HIGH	1568	1537	1498	1468	1433	1399	1353	1320	1287
		HIGH	1785	1775	1736	1704	1673	1629	1608	1573	1550
		LOW	1277	1211	1164	1103	1035	967	861	800	740
	3/4 [559]	MED. LOW	1556	1498	1456	1409	1353	1308	1254	1198	1125
1001521	11 x 10	MEDIUM	1644	1597	1554	1511	1463	1400	1358	1304	1253
	[279 x 254]	MED. HIGH	1879	1842	1785	1729	1692	1674	1621	1579	1537
		HIGH	2071	2025	1992	1948	1902	1872	1840	1795	1750
		LOW	1398	1338	1278	1232	1177	1130	1041	975	909
	3/4 [559]	MED. LOW	1593	1546	1495	1454	1414	1342	1304	1251	1190
1251525	11 x 10	MEDIUM	1878	1844	1807	1753	1714	1675	1634	1578	1536
	[279 x 254]	MED. HIGH	2025	1967	1931	1886	1856	1812	1748	1721	1668
		HIGH	2165	2124	2082	2047	2012	1973	1934	1894	1859

Note: **Bold** data is factory heating tap.



# **BOTTOM RETURN FILTER RACK FOR UPFLOW APPLICATION:** RXGF-CB

**SIDE RETURN FILTER RACK: RXGF-CD** 

FILTER RACK FILTER SIZES* INCHES [mm]							
MODEL	RXGF-CB (UPFLOW/ Horizontal)	RXGF-CD (UPFLOW) Side return					
050	12 <sup>1</sup> /4 x 25 [311 x 635]	15 <sup>3</sup> /4 x 25 [400 x 635]					
0751417	15 <sup>3</sup> /4 x 25 [400 x 635]	15 <sup>3</sup> / <sub>4</sub> x 25 [400 x 635]					
0751421/100	19 <sup>1</sup> / <sub>4</sub> x 25 [489 x 635]	15 <sup>3</sup> / <sub>4</sub> x 25 [400 x 635]					
125	22 <sup>3</sup> /4 x 25 [578 x 635]	15 <sup>3</sup> /4 x 25 [400 x 635]					

4" FLUE ADAPTER: RXGW-C01

### **INDOOR COIL CASINGS**

MODEL Number	
RXBC-D14AI	
RXBC-D17AI	
RXBC-D21AI	
RXBC-D21BI	
RXBC-D24AI	

#### **WARNING: IMPORTANT NOTICE**

A SOLID BOTTOM PLATE (SEE TABLE) MUST BE IN PLACE WHEN THE FURNACE IS INSTALLED WITH SIDE AIR RETURN DUCTS. FAILURE TO INSTALL A SOLID BOTTOM PLATE COULD CAUSE PRODUCTS OF COMBUSTION TO BE CIRCULATED INTO THE LIVING SPACE AND CREATE POTENTIALLY HAZARDOUS CONDITIONS.

FURNACE WIDTH IN. [mm]	WIDTH BOTTOM		SOLID BOTTOM PLATE SIZE IN. [mm]				
14 [356]	RXGB-D14	AE-61874-01	115/8 x 239/16 [295 x 598]				
171/2 [445]	RXGB-D17	AE-61874-02	15 <sup>1</sup> /8 x 23 <sup>9</sup> / <sub>16</sub> [384 x 598]				
21 [533]	RXGB-D21	AE-61874-03	18 <sup>5</sup> /8 x 23 <sup>9</sup> / <sub>16</sub> [473 x 598]				
241/2 [622]	RXGB-D24	AE-61874-04	25 <sup>5</sup> /8 x 23 <sup>9</sup> / <sub>16</sub> [651 x 598]				

#### **FOR HIGH ALTITUDES:**

**OPTION CODE FOR HIGH ALTITUDE: U.S.** 

None required for high altitudes.

HIGH ALTITUDE CONVERSION KITS: U.S.

None required for high altitudes.

#### **80+ HIGH ALTITUDE INSTRUCTIONS**

**CAUTION:** Always follow National Fuel Gas Code (NFGC) guidelines when converting for high altitudes.

High altitude option codes are not required for these models. However, the burner orifice size needs to be recalculated and verified at elevations above 2000 ft. See Installation Instructions for more information.



## **GENERAL TERMS OF LIMITED WARRANTY\***

Durastar will furnish a replacement for any part of this product which fails in normal use and service within the applicable period stated, in accordance with the terms of the limited warranty.

\*For complete details of the Limited and Conditional Warranties, including applicable terms and conditions, contact your local contractor or the Manufacturer for a copy of the product warranty certificate.



Before proceeding with installation, refer to installation instructions packaged with each model, as well as complying with all Federal, State, Provincial, and Local codes, regulations, and practices.

