

Assembly Instructions: 5926-SF/3P (Saxon)


For Customer Service, please contact the place of purchase.

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!


Please note that the fixture may be hung as a pendant or a semi-flush. Please decide how you would like the fixture to be installed and refer to the related instructions.

SEMI-FLUSH INSTALLATION

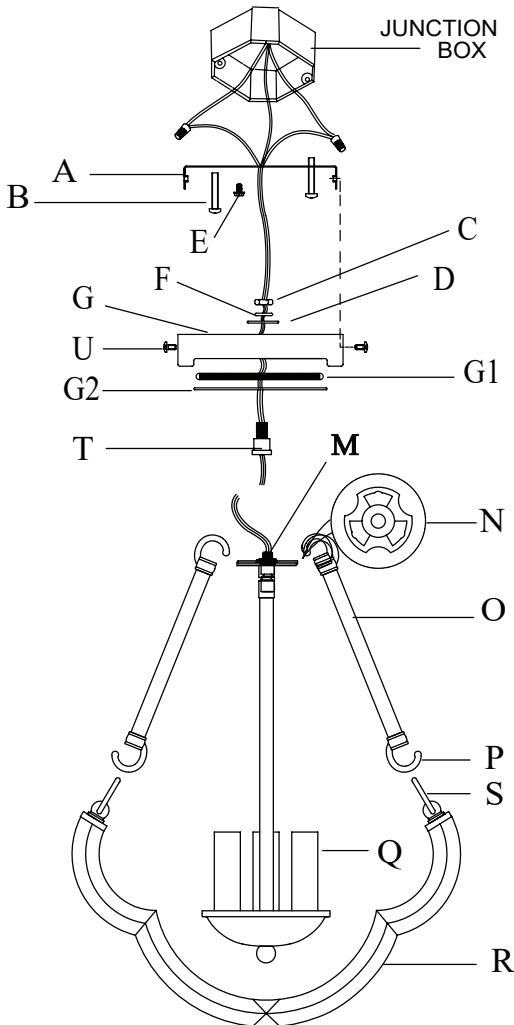

How to Identify the Fixture's Wires

Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

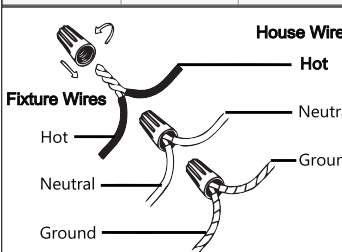

PREPARING FOR INSTALLATION

Please note that this fixture can be installed as a semi-flush or as a pendant and includes two canopies. The semi-flush canopy has screws on the sides and a small hole in the center. The pendant canopy has a large hole in the center. Please decide how you would like to install the fixture and choose the appropriate canopy and instructions.

For semi-flush installation, please see the instructions below. For pendant installation, please flip the page and follow the instructions.

Carefully remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. From the parts bag remove the mounting strap assembly. Canopy (G) should have mounting strap (A) attached to the top. Use a screwdriver to carefully loosen and remove screws (I). Place the screws aside for later. Be sure that mounting strap (A) is centered over the junction box so that the fixture hangs straight when mounted. Use mounting screws (B) to secure mounting strap (A) to the junction box. Tighten the screws securely.

ASSEMBLING THE FIXTURE

2. Attach top finial (T) to post (M) of top cap (N). One of connector rods (O) will house the fixture's wires. Slide the fixture's wires through the rod and attach hook (P) to loop (S). Hook the other end of the rod to top cap (N). Pull the fixture's wires through the top of rod (O). Have an assistant hold top cap (N) up and attach the remaining connector rods (O) to fixture's base (R) and top cap (N). Pull the wires until taut. Slide canopy plate (G2), canopy mirror (G1), and canopy (G) onto the wires and over top finial (T). Use washers (D and F) and hex nut (C) to secure the canopy assembly to top finial (T).

CONNECTING THE WIRES

3. Have an assistant support the fixture's weight while completing the wiring. Cut away excess wire. Attach the fixture's wires to the power supply wires from the junction box. Connect black to smooth/black/transparent (L) wire; white to ribbed/white/transparent (N) wire; ground to ground (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket/mounting strap. Tuck all wires.

FINISHING THE INSTALLATION

4. Raise the canopy assembly up to the ceiling and tightly thread screws (F) into the sides of canopy (G).
5. Slide candle sleeves (Q) over the sockets. Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage.

Your installation is complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

Assembly Instructions: 5926-SF/3P (Saxon)


For Customer Service, please contact the place of purchase.

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

Please note that the fixture may be hung as a pendant or a semi-flush. Please decide how you would like the fixture to be installed and refer to the related instructions.

PENDANT INSTALLATION

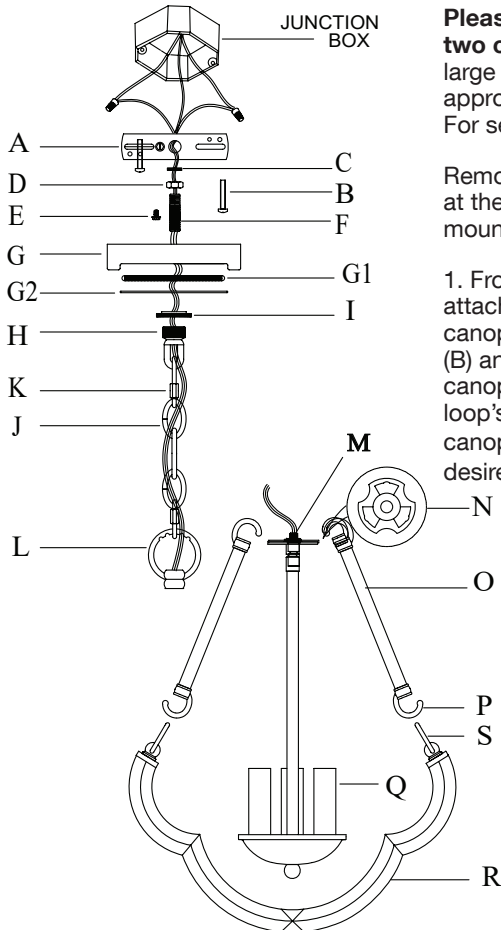

PREPARING FOR INSTALLATION

Please note that this fixture can be installed as a semi-flush or as a pendant and includes two canopies. The semi-flush canopy has screws on the sides. The pendant canopy has a large hole in the center. Please decide how you would like to install the fixture and choose the appropriate canopy and instructions. For pendant installation, please follow the instructions below. For semi-flush installation, flip the page and follow the instructions.

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. From the parts bag remove the mounting strap assembly. One end of nipple (F) should be attached to mounting strap (A) with washer (C) and hex nut (D) in place. The other end may have canopy loop (H) attached. Attach mounting strap (A) to the junction box using mounting screws (B) and a screwdriver. Tighten securely. Unscrew canopy loop collar (I) from canopy loop (H). Pass canopy (G) over the mounted canopy loop to test the height. Approximately half of the canopy loop's exterior threads should be exposed, and the canopy loop collar should fit snugly onto the canopy loop. Remove canopy (G) and adjust the height of nipple (F) and canopy loop (H) until the desired height is reached.

ASSEMBLING THE FIXTURE

2. Attach top loop (L) to post (M) of top cap (N). One of connector rods (O) will house the fixture's wires. Slide the fixture's wires through the rod and attach hook (P) to loop (S). Hook the other end of the rod to top cap (N). Pull the fixture's wires through the top of rod (O). Have an assistant hold top cap (N) up and attach the remaining connector rods (O) to fixture's base (R) and top cap (N). By measuring, determine the correct number of chain links needed for proper hanging height. If necessary, use a pair of pliers to open and remove any excess chain. Attach chain connectors (K) to each end of chain (J) before attaching one end of the chain connector/chain to top loop (L). Close the chain connector. Connect the other chain connector (K) to canopy loop (H). Feed the fixture's wires up through top loop (L) then through chain (J) (every three links or so). Pull the wires until taut. Gently slide canopy loop collar (I) and canopy plate (G2), canopy mirror (G1), and canopy (G) onto the chain/wire.

CONNECTING THE WIRES

3. Have an assistant support the fixture's weight while completing the wiring. Cut away excess wire. Thread the fixture's wires through canopy loop and nipple. Attach the fixture's wires to the power supply wires from the junction box. Connect black to smooth/black/transparent (L) wire; white to ribbed/white/transparent (N) wire; ground to ground (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) from the junction box, locate ground screw (E) on mounting strap (A) and wrap the fixture ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket/mounting strap. Tuck all wires.

FINISHING THE INSTALLATION


4. Push canopy (G), canopy mirror (G1) and canopy plate (G2) up to the ceiling. Slide canopy loop (H) and canopy loop collar (I) up beneath the canopy. Tightly thread canopy loop collar (I) onto canopy loop (H) to secure canopy (G) in place.

5. Slide candle sleeves (Q) over the sockets. Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage.

Your installation is complete. Turn on the power and test the fixture.

How to Identify the Fixture's Wires

Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

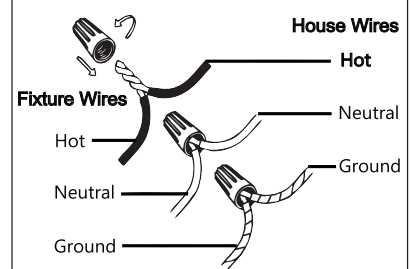

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.