

Installation Instructions

Towel Bar / Tissue Holder

Model No. 33-01, 33-02, 31-04, 31-28

NEWPORT BRASS


Flawless Beauty. From Faucet to Finish.™

Recommended Installation by a Professional Contractor

1. Measure the appropriate distance between post centers. See Figure 1.

Note: Hole locations should be level.

- 18" Single Towel Bar: 18-5/16"
- 24" Single Towel Bar: 24 1/4"
- 18" Double Towel Bar: 18 7/16"
- Tissue Holder (2 Post): 6 1/4"

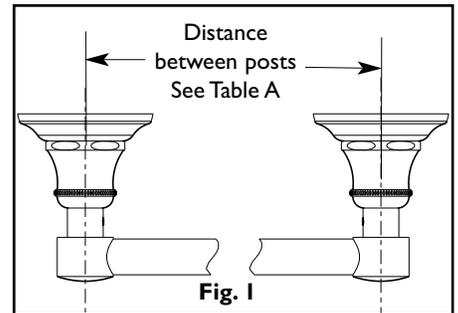

2. Drill hole(s) in wall at points marked using the appropriate drill size:

- Wood Screw (#6 x 2") - use: 3/32" Drill
- Toggle Screw (6-32 x 3") - use: 3/8" Drill

3. Fasten FLANGE (1) to wall using either WOOD/TOGGLE SCREWS (2). See Figure 2.

4. Place POST (3) into FLANGE (1). Position POST (3) height to 2-1/16" from mounting surface. Secure POST (3) into place by tightening SETSCREW (4). See Figure 2.

5. Place ESCUTCHEON (5) and then BONNET (4) onto POST (3). See Figure 3.

5a. **Towel Bar:** Assemble TOWEL BAR (6) between END POST (7). With ESCUTCHEON (5) place onto FLANGE POST (1). Secure onto place with SETSCREW (4). See Figure 3.

5b. **Double Towel Bar:** Assemble TOWEL BARS (6) between END POST (7). Place END POST (7) onto FLANGE POST (1). Secure onto place with SETSCREW (4). See Figure 4.

5c. **Tissue Holder:** Place END POST (7) onto FLANGE POST (1). Secure into place with SETSCREW (4). Place HOLDER (10) between END POST (7). See Figure 5.

