


Central Brass®

The Easy Choice

THREE-VALVE BATH & SHOWER

Cast Brass Body

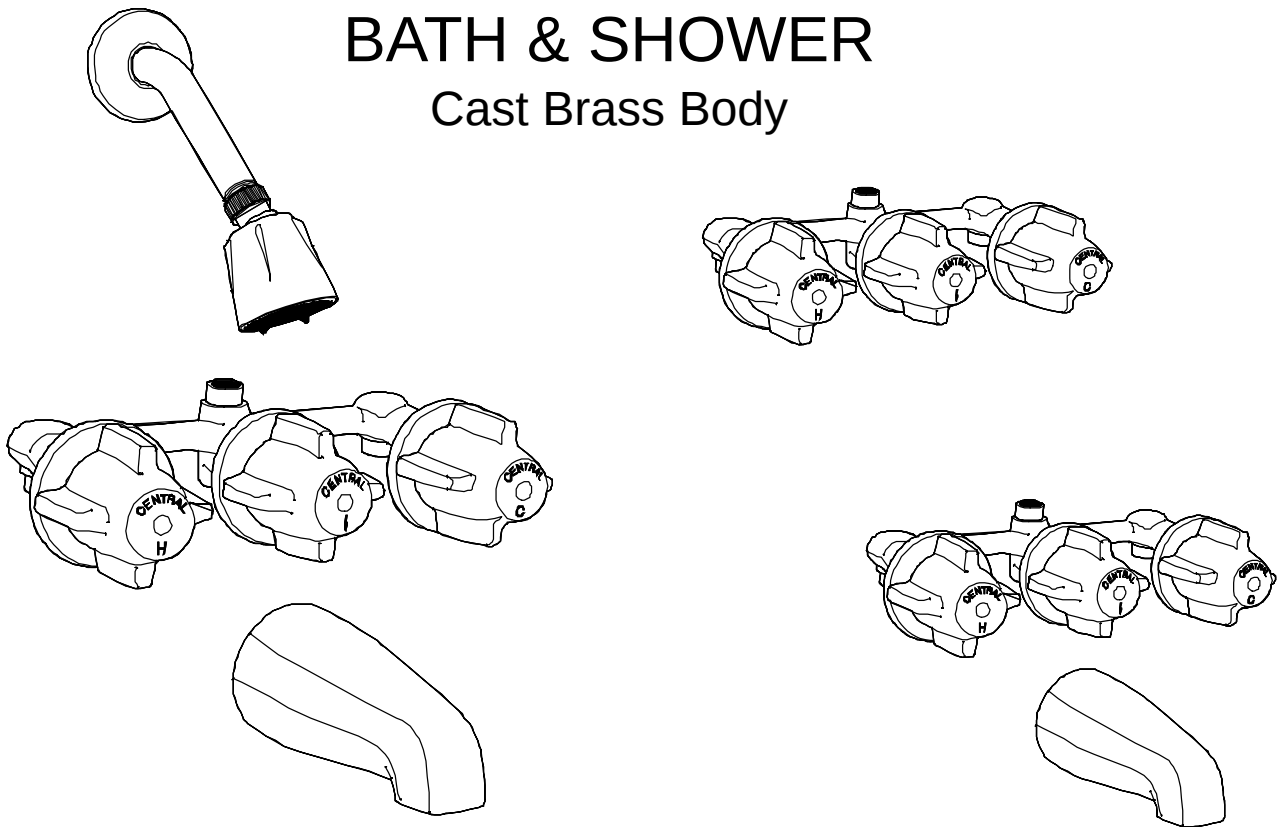

8" Centers, I.P. Unions, Compression Stems, Replaceable Seats

0950 Series	Bath Valve only
0958 Series	Bath Valve with Spout
0968 Series	Bath Valve with Spout & Shower

Bath Valve with Ceramic Stems and Spout & Shower

80968 Series	8-inch Centers, I.P. Unions
--------------	-----------------------------


CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

www.CentralBrass.com

INSTALLATION INSTRUCTIONS

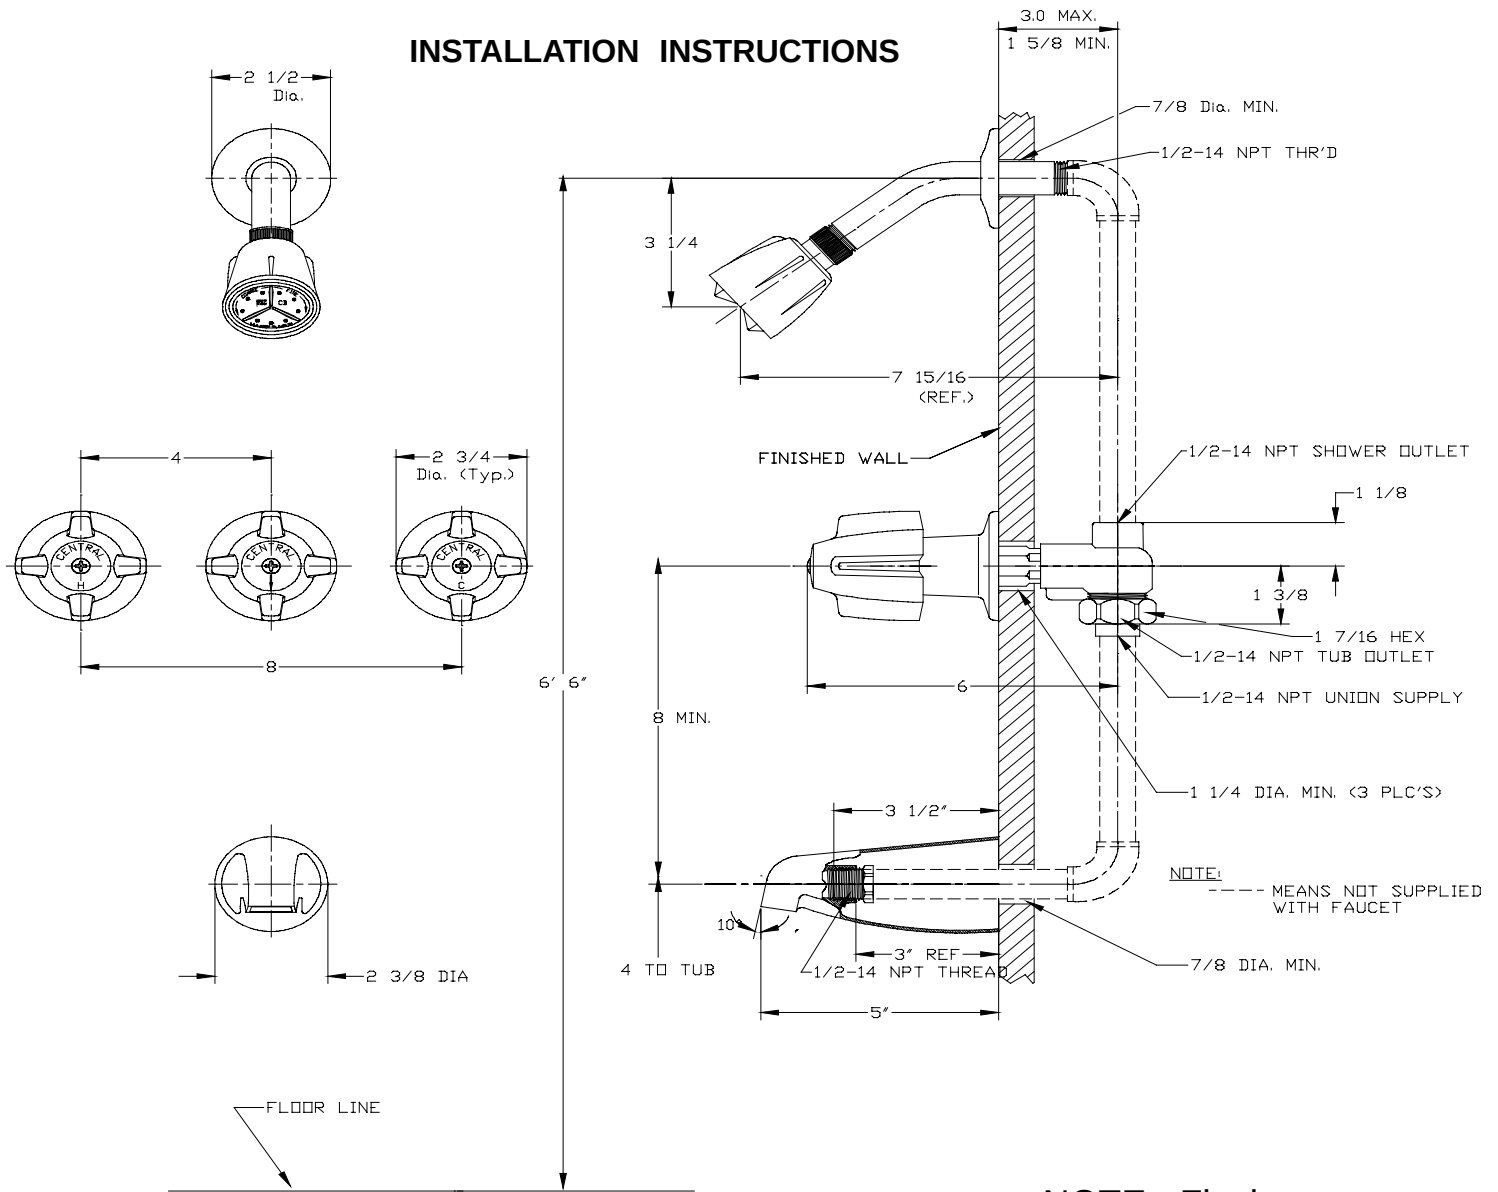

NOTE: Flush waterlines to remove debris before installation.

Roughing In Instructions

1. Locate and install valve assembly as shown.
2. Connect hot and cold supply lines.
3. Fabricate and install line for showerhead and spout.
4. Anchor fittings to studs in proper location.
5. Test for operation and leakage before finishing wall.
6. Install protectors on all exposed fittings.

Finishing Instructions

1. Remove fitting protectors.
2. Apply putty as required to prevent water damage to wall.
3. Install finished trim.
4. Test for operation and leakage.

CAUTION for

Compression Stem Assemblies

Soldered connections should be made with valve stems OPEN. DO NOT overheat. Let valve assembly cool after connection is made before closing valve stems

CENTRAL BRASS MFG CO


2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875

Email: sales@CentralBrass.com

INSTALLATION INSTRUCTIONS for Integral Stops

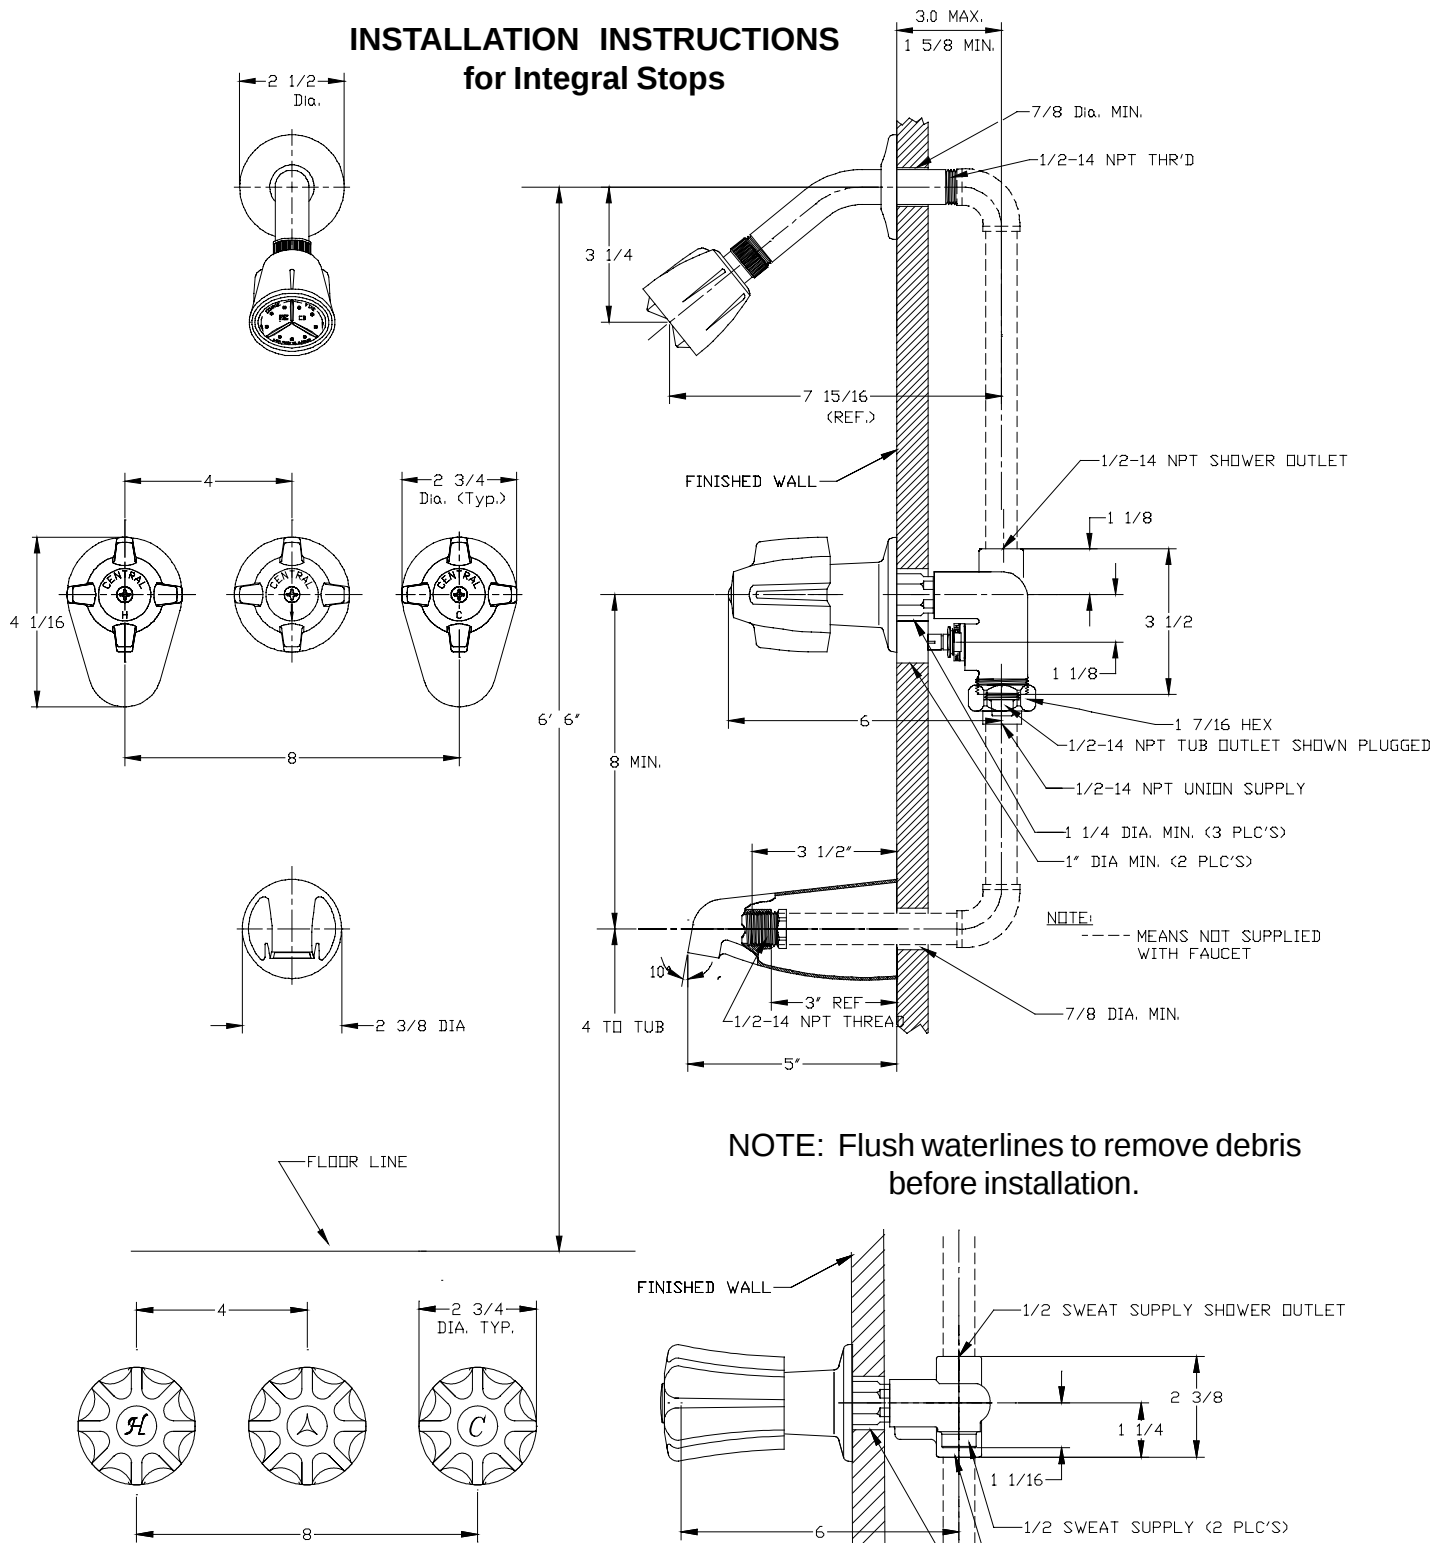

WARNING for Ceramic Stem Assemblies

Remove hot and cold stem units before soldering. Failure to do so will result in damage to ceramic stem units. Cool valve assembly after solder connections are completed before reinstalling ceramic stem assemblies.

CENTRAL BRASS MFG CO


2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875

Email: sales@CentralBrass.com

REPLACEMENT PARTS

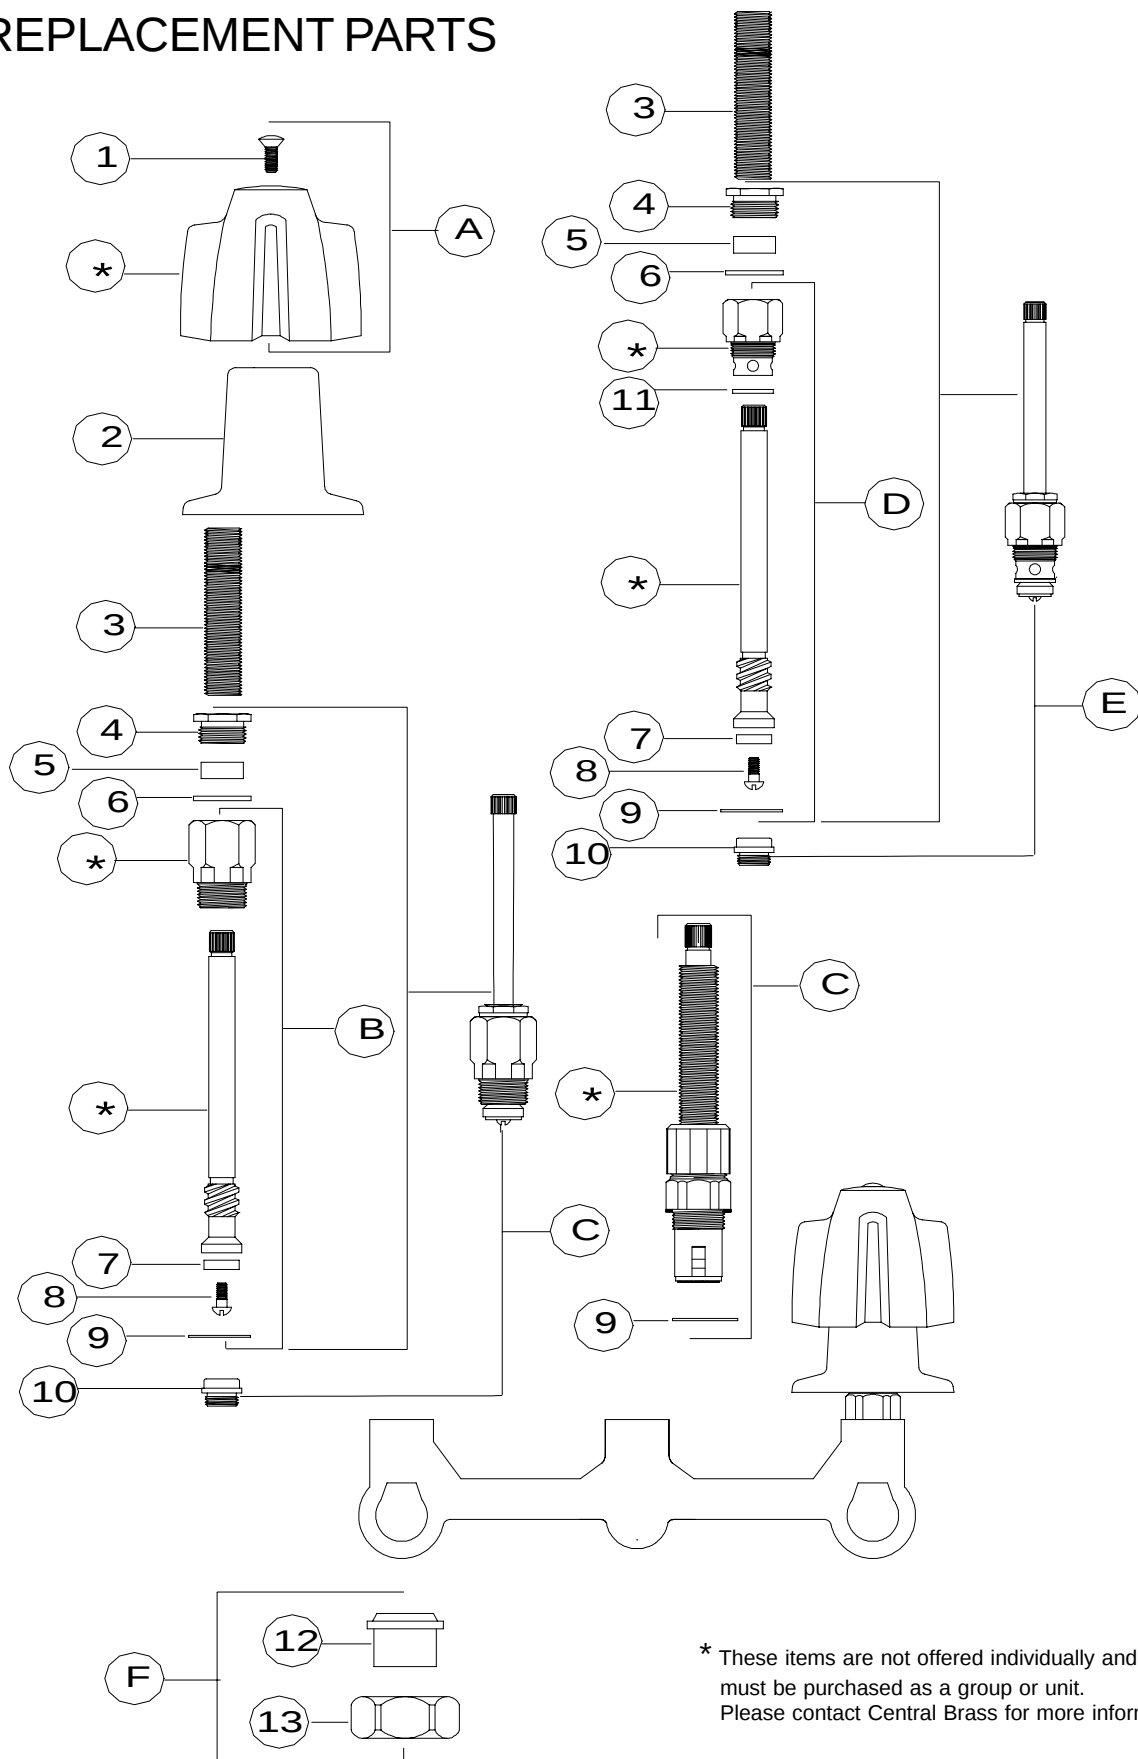

CENTRAL BRASS MFG CO




2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875



Email: sales@CentralBrass.com

www.CentralBrass.com

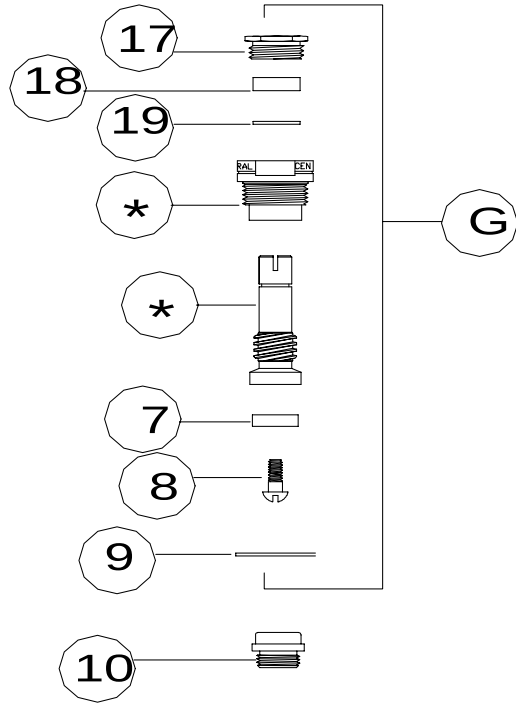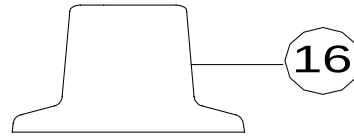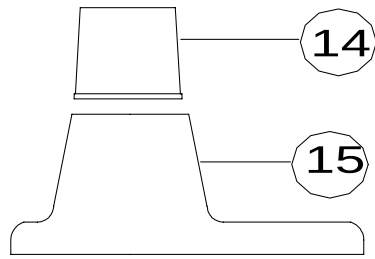

Parts for Integral Stops

For items with **I** suffix only

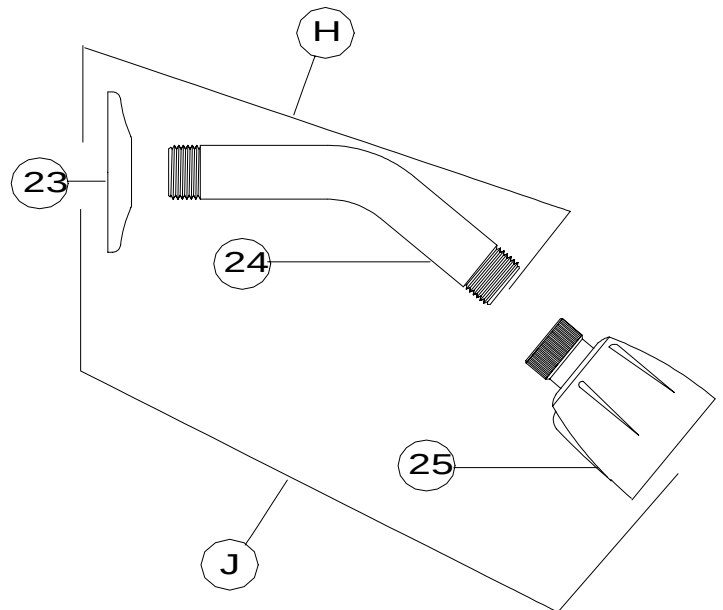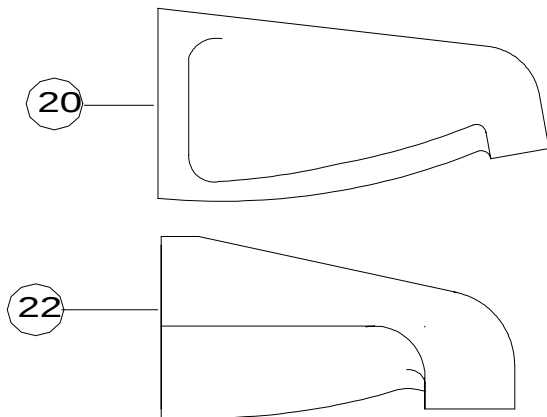

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875

Email: sales@CentralBrass.com

REPLACEMENT PARTS

#	Part #	Description
A	G-508-C	Large Canopy Handle indexed C with Screw (X107-F)
A	G-508-H	Large Canopy Handle indexed H with Screw (X107-F)
A	G-508-D	Large Canopy Handle indexed with Arrow for Diverter with Screw (X107-F)
B	G-1549-CT	Corner Stem & Bonnet Group with Seat Washer (X901-WN), Screw (X104) & Gasket (1028-Y) for 0950, 0958 & 0968 only
C	K-3-CT	Complete Corner Stem Assembly with Gasket (X1028-Y) & Bronze Seat (X263-BC) for 0950, 0958 & 0968 only
C	K-351-C	Ceramic-disc Stem Cartridge Cold with Gasket (X1028-Y) for item 80968 only
D	G-1588-CT	Diverter Stem & Bonnet Group with Seat Washer (X901-WN) & Screw (X104)
E	K-3-DT	Complete Diverter Stem Assembly With Gasket (X1028-Y) & Bronze Seat (X263-BC)
F	G-30	IP Union Sleeve (X1875) & Nut (X1876-BB)
G	XSU-353-ERS	Ceramic-disc Stem Cartridge Hot with Gasket (X1028-Y) for item 80997 only
H	3007-6	6-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
J	G-3113-6	Shower Head (3034-1/2-02), 6-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
1	X107-F	Handle Screw (25 pcs per pack)
2	521-B	Escutcheon
3	X269-29/16	2 ⁹ / ₁₆ Long Nipple (10 pcs per pack)
4	X765-TA	Packing Nut (6 pcs per pack)
5	X814-BA	Packing (10 pcs per pack)
6	X4-L	Packing Washer (6 pcs per pack)
7	X901-WNN	Seat Washer (25 pcs per pack)
8	X104	Seat Washer Screw (25 pcs per pack)
9	X1028-Y	Gasket (25 pcs per pack)
10	XPF-263-B	Replacement Seat (4 pcs per pack)
11	X4-N	Celcon Washer for diverter stem (6 pcs per pack)
12	X1875	IP Union Sleeve (2 pcs per pack)
13	X1876-BB	Coupling Nut (2 pcs per pack)
14	1037-ES	Escutcheon Sleeve for I suffix Integral Valve only
15	1037-ET	Teardrop Escutcheon for I suffix Integral Valve only
16	1037-ER	Diverter Escutcheon for I suffix Integral Valve only
17	X353-DH	Packing Nut (10 pcs per pack) for I suffix Integral Valve only
18	X353-CW	Packing (10 pcs per pack) for I suffix Integral Valve only
19	X193-B	Brass Washer (6 pcs per pack) for I suffix Integral Valve only
20	3145-D	½ IPS Brass Spout for item 0958, 0968 & 80968 only
22	3154-Z	Zamak Spout for item 0958-Z, 0968-Z & 80968-Z only
23	X1035-SS	Shower Arm Flange (10 pcs per pack)
24	714-WT-02	6-inch Shower Arm
25	3034-1/2-02	Shower Head 2.5 GPM
	T-3	Handle Trim Set with Cold, Hot & Arrow indexed handles with screws and three escutcheons packed in a box

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

INTEGRAL STOPS & REPLACEMENT PARTS

#	Part #	Description
G	XSU-353-ERS	Integral Stop Stem Assembly with Gasket (X1028-Y) (2 pcs per pack) for I suffix Integral Valve only
14	1037-ES	Escutcheon Sleeve for I suffix Integral Valve only
15	1037-ET	Teardrop Escutcheon for I suffix Integral Valve only
16	1037-ER	Diverter Escutcheon for I suffix Integral Valve only
17	X353-DH	Packing Nut (10 pcs per pack) for I suffix Integral Valve only
18	X353-CW	Packing (10 pcs per pack) for I suffix Integral Valve only
19	X193-B	Brass Washer (6 pcs per pack) for I suffix Integral Valve only

OPTIONS & REPLACEMENT PARTS

Suffix Number	Replaces Item #	Part Number	Description
80	A	K-505-1C	Silver Crown Acrylic Handles with indexed C metal button (G-503-M-02)
		K-505-1H	Silver Crown Acrylic Handles with indexed H metal button (G-503-M-02)
		K-505-1D	Silver Crown Acrylic Handles with indexed with Arrow metal button (503-MD) for diverter
		X126-625B	Handle Screw for Acrylic Handles suffix 80 (6 pcs per pack)
		G-503-M-02	Metal indexed buttons C & H for Acrylic Handles suffix 80 (one pair per pack)
		503-MD	Metal button indexed with an arrow for diverter handle (1 pc)
C	F	G-30-C	Direct Sweat Union Sleeve (X1875) & Nut (X1876-BB) For C suffix items only
	12	X1875-C	Direct Sweat Union Sleeve (2 pcs per pack) for Item with C suffix
	10	X263-BC	Bronze Replacement Seat (10 pcs per pack)
	H	3007-8	8-inch Shower Arm (714-WT-02) & Flange (X1035-SS)
	F	G-3113-8	8-inch Shower Arm (714-WT-02), Shower Head (3034-1/2-02), & Flange (X1035-SS)
		Accessories	
		G-1548-ET	Stem Extension with Screw (X105-F)
		X105-F	Screw for stem extension (4 pcs per pack)
Prefix Number	Replaces Item #	Part Number	Description
8	C	K-351-C	Ceramic-disc Stem Cartridge Cold with Gasket (X1028-Y)
8	C	K-351-H	Ceramic-disc Stem Cartridge Hot with Gasket (X1028-Y)
		For item	80968 only







- If faucet has round handles (G-508) or (80 suffix) , use two K-351-C Cold stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

CENTRAL BRASS MAINTENANCE INSTRUCTIONS

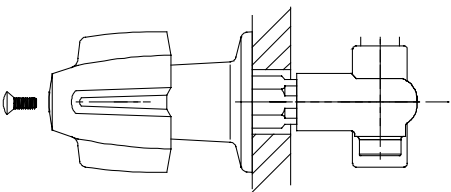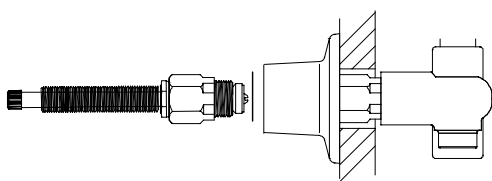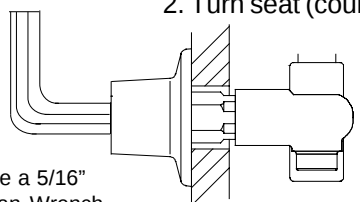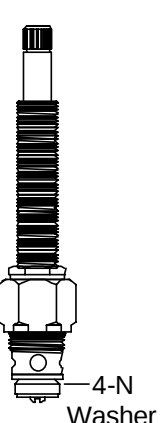DISASSEMBLY	REPLACEMENT
1 REMOVE HANDLE 1. Turn off water supply 2. Remove the handle screw & handle 3. Unscrew the escutcheon  2 REMOVE STEM ASSEMBLY 1. Use adjustable wrench. 2. Turn stem to open position 3. Unscrew counterclockwise. Remove stem unit.  3 REMOVE SEAT 1. Insert 5/16" allen wrench in seat. 2. Turn seat (counterclockwise) to remove.  Use a 5/16" Allen Wrench For compression stems only	4 Use Only Central Replacement Parts K-3-CT  K-351-C  K-3-DT  4-N Washer K-3-DT NOTE: Turn stem counterclockwise to hold the white celcon washer in position when installing. NOTE: If replacing compression units with ceramic units make sure PF-263-B seat is removed from body before installing stem units. Replace components In reverse order of disassembly

- If faucet has round handles (G-508) or (80 suffix) , use two K-351-C Cold stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

CENTRAL BRASS MFG CO
 2950 East 55th Street, Cleveland, Ohio 44127
 Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com