

## HAND CLEANER REFILL

# **LOADING INSTRUCTIONS**


Note: Do not remove bag from box.

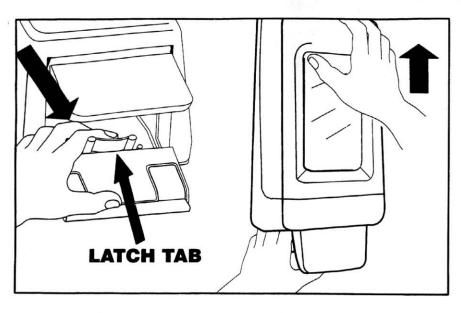


Open dispenser by pulling down latch tab behind push bar and pushing up on cabinet.

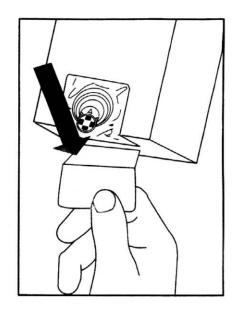


Completely remove tear tab at bottom of carton. (Do not remove bag from box)

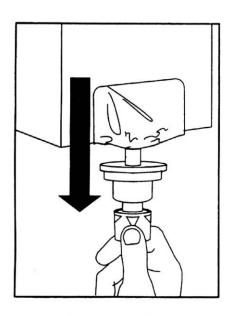

Pull nozzle (attached to bag) down and out of opening.

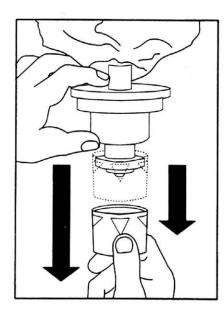

Remove and discard red cap from nozzle.

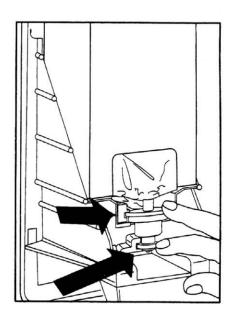

Place carton into dispenser, slide nozzle into both slots, and close cover.

### DISPENSER MOUNTING METHOD **SCREW MOUNT METHOD**

### TAPE 'N GLUE METHOD

Recommended for cement and concrete block, ceramic tile. steel and other smooth surfaces.


Recommended for dry wall and stud wall surfaces.

### 1" MINIMUM CLEARANCE STEP 1 CLOSED Determine **Mounting Position** Locate desired position on wall. Allow 4 inches at bottom and 1 inch OPEN at top of dispenser for proper clearance.

### STEP 2

### **Prepare Tape**

Carefully remove paper backing from tape on back of dispenser.




### STEP 3

#### **Apply Glue**

Apply thick bead of dispenser adhesive on back of dispenser as shown.

Important: No Glue Here



### SCREW MOUNT INSTRUCTIONS


#### Dry Wall: "A" Holes

- Use dispenser back plate as template, then drill 9/32" diameter
- 2. Insert lag shields in holes.
- 3. Install 1/4" diameter x 1" long lag screw through back and fasten to wall. Tighten screws securely.

#### Stud Wall: "B" Holes

- Locate stud.
- 2. Using dispenser back plate as template - mark, then drill 9/32" holes.
- 3. Install 1/4" x 1" long wood screws through dispenser back and fasten to stud.
- Tighten screws securely don't overtighten.

Note: "(B)" holes are also placed for tile mounting



**SCREW MOUNT** 

METHOD

### **CIRCULAR WASH** FOUNTAIN MOUNTING

Call or Write GOJO Industries for information regarding adapter kit for mounting dispenser on circular wash fountains

GOJO Industries Inc. P.O. Box 991 Akron, OH 44309 Toll Free 1-800-321-9647

#### STEP 4


### **Mount Dispenser**

Firmly press closed dispenser on pre-determined location on wall.

Unlatch cover and press firmly against back plate to ensure maximum contact of tape and glue with wall surface.

### Wait 5 minutes.

Note: See back of this sheet for instructions on unlatching dispenser



### STEP 5

#### Unlatch & Load Dispenser

See back of this instruction sheet for Loading Instructions.

