

Semi-Automatic Die Head Instructions

WARNING



Read these instructions and the warnings and instructions for all equipment and material being used before

operating this tool to reduce the risk of serious personal injury.

- Do not wear gloves, loose clothing, or jewelry when operating machine. Keep sleeves and jackets buttoned. Clothing can be caught by the pipe or tool resulting in entanglement.
- Keep hands away from rotating pipe and parts. Allow the machine to come to a complete stop before touching the pipe or tool. This reduces the risk of entanglement, crushing or striking injuries.

If you have any question concerning this RIDGID® product:

- Contact your local RIDGID distributor.
- Visit www.RIDGID.com or www.RIDGID.eu to find your local RIDGID contact point.
- Contact Ridge Tool Technical Service Department at rttechservices@emerson.com, or in the U.S. and Canada call (800) 519-3456.

Description

The RIDGID® Universal Semi-Automatic Die Heads include Model 816 NPT and 817 NPT Die Heads. These die heads can be quickly adjusted from size to size and are manually opened for user specified thread length. The die heads operate with a system of four Position Blocks on the cam plate. Each block can be adjusted and set independently, allowing the operator to change sizes quickly and accurately.

The 816 Die Head is for 1/8" to 3/4" and 817 die head is for 1" to 2" size range. Both use RIDGID Universal dies.

The Semi-Automatic Die Heads can be used on RIDGID equipment such as the 1215, 1233 535, 535A, 300 Compact Threading Machines and 300 Power Drive.

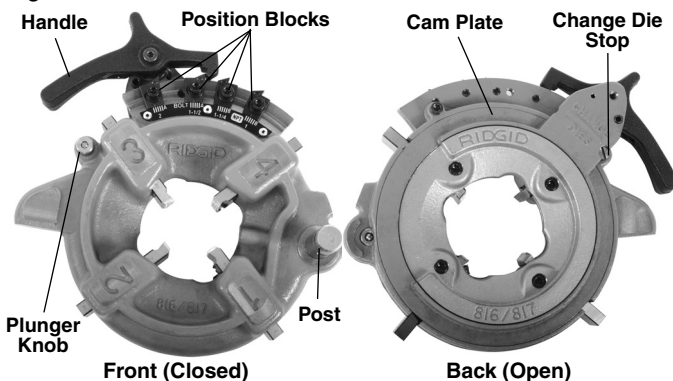


Figure 1 – Semi-Automatic Die Head

Inspection/Maintenance

Clean the die head to aid inspection and improve control. Inspect the die head before each use for proper assembly, wear, damage or other issues that could affect safe use.

Inspect the cutting edges of the dies. Dull or damaged cutting tools increase required force, produce poor quality threads and increase the risk of injury. If any problems are found, do not use until corrected.

Set-Up/Operation

Make sure all equipment is inspected and set up per its instructions.

Always cut a test thread to confirm proper thread size after changing/adjusting the dies.

Inserting/Changing the Dies

Die Heads require one set of dies for each of the following pipe size ranges: (1/8"), (1/4" and 3/8"), (1/2" and 3/4") and (1" through 2"). Die heads cannot be used for BSPT threads.

See the *RIDGID catalog* for dies available for your die head.

1. Place the die head with numbers facing up.
2. Depress handle so that cam plate rests against the change die stop (*Figure 1*). The cam plate/handle assembly is spring loaded and will move when depressed.
3. Pull the plunger knob and rotate the handle and cam plate counter-clockwise until it stops.
4. Remove dies from the die head.
5. Insert appropriate dies into the die head, numbered edge up until the indicator line is flush with the edge of the diehead (*see Figure 2*). Numbers on the dies must correspond with those on the die head slots. Always change dies as sets – do not mix dies from different sets.

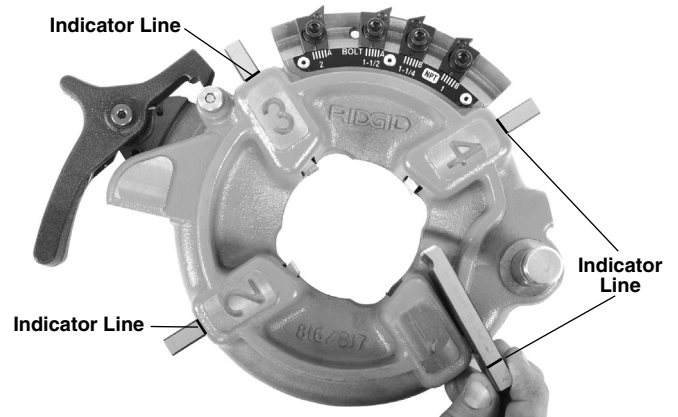


Figure 2 – Inserting Dies

6. Move the handle clockwise so that the plunger knob is flush against the die head. Adjust die insertion as needed to allow movement.

Adjusting Thread Size

1. Install the die head per the *Threading Machine Instructions* and move the die head into threading position.
2. Loosen the screw for the position block for desired pipe size.
3. Start with the position block index line on the middle size bar mark.

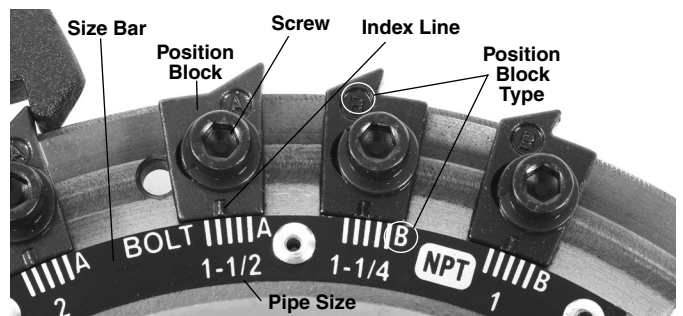


Figure 3 – Adjusting Thread Size

4. If thread size needs to be adjusted, set the index line slightly off the mark on size bar in the direction of the handle for larger diameter thread, (less turns of fitting engagement) or away from handle for smaller thread diameter (more turns of fitting engagement).

5. Securely tighten the position block screw.
6. Always make sure position block type matches (Figure 3).

Threading

Install the die head per the *Threading Machine Instructions*. Move the die head into threading position. Hook the handle over the appropriate position block to close.

Following the *instructions for the Threading Machine*, thread the stock.

Opening the Die Head at the end of the Thread

When the end of the pipe is flush with the end of the number 1 die, press the handle to open die head and retract the dies. Do not run machine in reverse (REV) with dies engaged.

Turn machine OFF per the instructions.

For inspecting threads, refer to the *Threading Machine Operator's Manual*.

Utilisation des têtes de filière semi-automatiques

⚠ AVERTISSEMENT



Avant d'utiliser cet outil, et afin de limiter les risques d'accident grave, familiarisez-vous avec les instructions ci-présentes, ainsi qu'avec les consignes applicables à l'ensemble du matériel et des matériaux utilisés.

- Ne jamais porter de gants, de vêtements flottants ou de bijoux lors de l'utilisation de la machine. Gardez les manches et les blousons boutonnés. Les vêtements peuvent s'entortiller autour du tuyau ou de l'outil lui-même.
- Eloigner les mains du tuyau et des mécanismes en rotation. Attendez l'arrêt complet de la machine avant de toucher le tuyau ou l'outil. Cela réduira les risques d'entortillement, d'écrasement et de contusion.

En cas de questions concernant ce produit RIDGID®:

- Consultez le revendeur RIDGID le plus proche.
- Rendez-vous sur le site www.RIDGID.com ou www.RIDGID.eu pour localiser le représentant RIDGID le plus proche.
- Consultez les services techniques de Ridge Tool par mail adressé à rtctechservices@emerson.com ou en composant le (800) 519-3456 à partir des États-Unis ou du Canada.

Description

Les têtes de filière semi-automatiques universelles RIDGID® sont équipées des têtes de filière nos 816 NPT et 817 NPT. Ces têtes de filière peuvent être rapidement réglées pour une section de tuyau donnée, et s'ouvrent manuellement pour obtenir la longueur de filetage désiré. Les têtes de filière utilisent un système à quatre butées de position sur platine à cames. Chaque butée est mise en position indépendamment pour permettre un changement rapide et précis de la section de tuyau visée.

La tête de filière no 816 est prévue pour le filetage des tuyaux de 1/8 à 3/4 po de diamètre, tandis que la tête no 817 sert à ceux de 1 à 2 po. Les deux modèles de tête utilisent les filières universelles RIDGID.

Les têtes de filière semi-automatiques peuvent être montées sur une variété de machines et de systèmes d'entraînement RIDGID, tels que les fileteuses compactes 1215, 1233, 535, 535A et 300, ainsi que sur le système d'entraînement électrique n° 300.

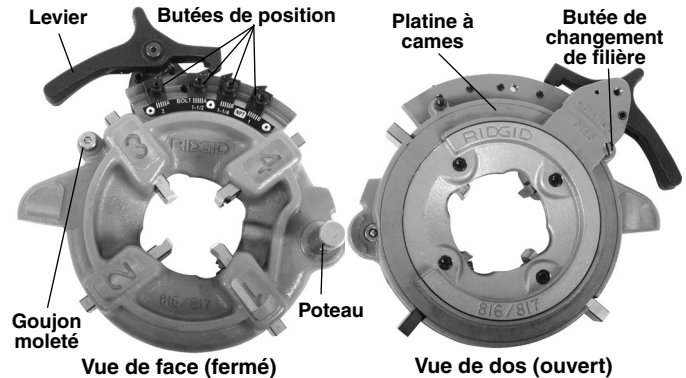


Figure 1 – Tête de filière semi-automatique

Inspection et entretien

Nettoyez la tête de filière afin d'en faciliter l'examen et la manipulation. Examinez la tête de filière avant chaque intervention afin de vérifier son bon assemblage, ainsi que pour signes d'usure, de détérioration ou autres anomalies qui seraient susceptibles de nuire à sa sécurité opérationnelle.

Examinez le tranchant des filières. Des filières émoussées ou endommagées surchargent la machine, produisent des filetages de mauvaise qualité, et augmentent les risques d'accident. Rectifiez toute anomalie éventuelle avant la prochaine intervention.

Préparation et utilisation

Inspectez et installez l'ensemble du matériel utilisé selon les consignes applicables.

Effectuez systématiquement un filetage témoin suite au changement ou réglage des filières.

Insertion et changement de filières

Les têtes de filière doivent être équipées d'un jeu de filières spécifique pour chacune des plages de section de tuyau suivantes : (1/8 po), (1/4 et 3/8 po), (1/2 et 3/4 po), et (1 à 2 po). Ces têtes de filières ne peuvent pas servir à la coupe de filetages BSPT.

Consultez la *catalogue RIDGID* pour un listing des filières disponibles pour votre type de tête de filière.

1. Posez la tête de filière sur son dos.
2. Appuyez sur le levier pour amener la platine à cames jusqu'à la butée de changement de filières (Figure 1). La platine est munie d'un système à ressorts qui lui permet d'avancer lorsque l'on appuie sur le levier.
3. Tirez sur le goujon moleté, puis ramenez l'ensemble levier/platine à cames en sens antihoraire jusqu'à ce qu'il vienne à buter.
4. Retirez les filières de la tête.

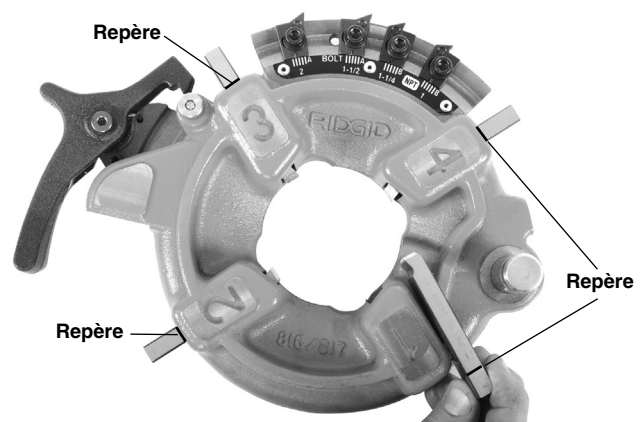


Figure 2 – Insertion des filières